



**HOVER**

INSTALLATION AND USER'S MANUAL

---

**CONTENT**

INTRODUCTION.....2  
SAFETY PRECAUTION.....2  
WALL MOUNTING INSTALLATION.....3-9  
    PREPARE FOR INSTALLATION.....4  
    INSTALLATION (VENT OUTSIDE).....5-8  
    INSTALLATION (VENT INSIDE).....9  
OPERATION.....10  
MAINTENANCE.....11  
TROUBLESHOOTING.....12  
ENVIRONMENTAL PROTECTION.....13

---

## **INTRODUCTION**

### **Thank you for choosing this cooker hood.**

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

The cooker hood use high quality materials, and is made with a streamlined design. Equipped with large power electric motor and centrifugal fan, it also provides strong suction power, low noise operation, non-stick grease filter and easy assembly installation.



By placing the CE marking on this product, we declare, on our own responsibility, compliance to all of European safety, health and environmental requirements stated in the legislation for this product.

## **SAFETY PRECAUTION**

- ❑ Never let the children operate the machine.
- ❑ The cooker hood is for home use only, not suitable for barbecue, roast shop and other commercial purpose.
- ❑ The cooker hood and its filter should be clean regularly in order to keep in good working condition.
- ❑ Clean the cooker hood according to the instruction manual and keep the unit from danger of burning.
- ❑ Forbid the direct baking from the gas cooker.
- ❑ Please keep the kitchen room a good convection.
- ❑ Before connecting this appliance check that the power supply cord is not damaged. A damage supply cord must be replaced by qualified service personnel only.
- ❑ There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels;
- ❑ The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels;
- ❑ Regulations concerning the discharge of air have to be fulfilled.
- ❑ This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person slide for their safety.
- ❑ Children should be supervised to ensure that they do not play with the appliance.
- ❑ Do not flambé under the range hood.
- ❑ The range hood is not intended to be installed over a hob having more than four hob elements

---


### **Electrical Shock Hazard**

- Only plug this unit into a properly earthed outlet. If in doubt seek advice from a suitably qualified engineer.
- Failure to follow these instructions can result in death, fire, or electrical shock.


## WALL MOUNTING INSTALLATION

### 1. Prepare for installation:


- a. If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminum, flexible pipe or inflammable material with an interior diameter of 150mm)

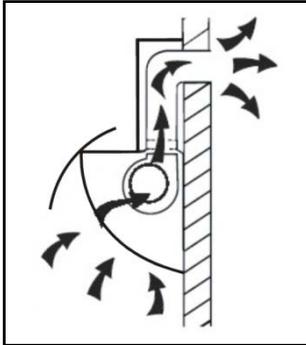

- b. Before installation, turn the unit off and unplug it from the outlet.

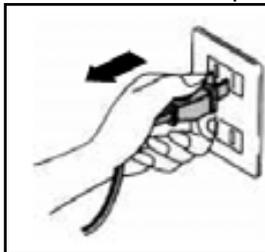

- c. The cooker hood should be placed at a distance of 65–75cm above the cooking plane for best effect.

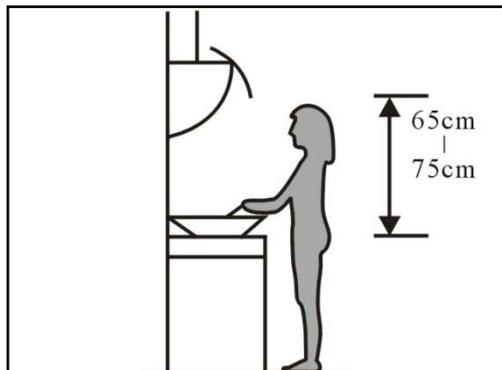


## 2. Installation (Vent outside):

**Attention! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room**


When the range hood and appliance supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa ( $4 \times 10^{-5}$  Bar)

Before attaching the bracket to the chimney, decide the location of the lower chimney bracket fixing holes for fixing the lower chimney bracket in the later step.


- Drill 3 x 8mm holes to accommodate the bracket.  
Screw and tighten the bracket onto the wall with the screws & screw plugs provided.

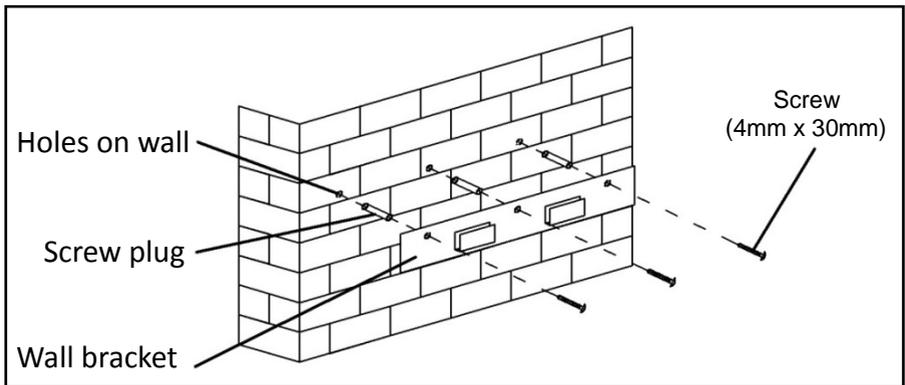


- Hang the cooker hood onto the wall bracket hooks.

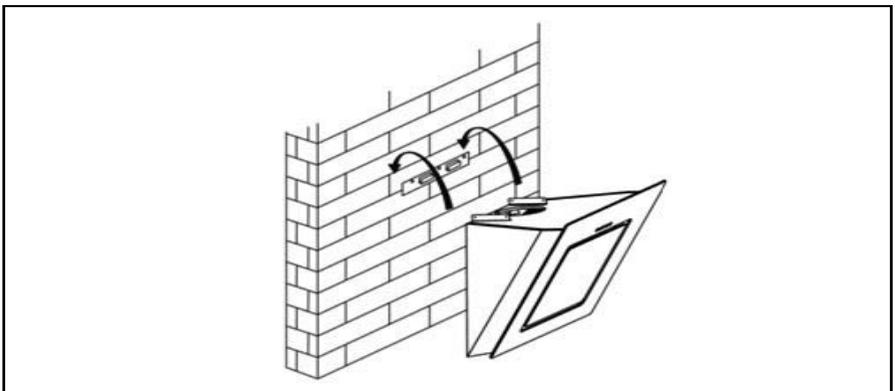


- Secure screws to make sure the hood is stable on the wall.  
After placing the cooker hood on the bracket, open the filter, mark and drill 4 holes and fasten the hood on the wall with 2 x wall plugs and 2 x ST4 x 30mm screws.

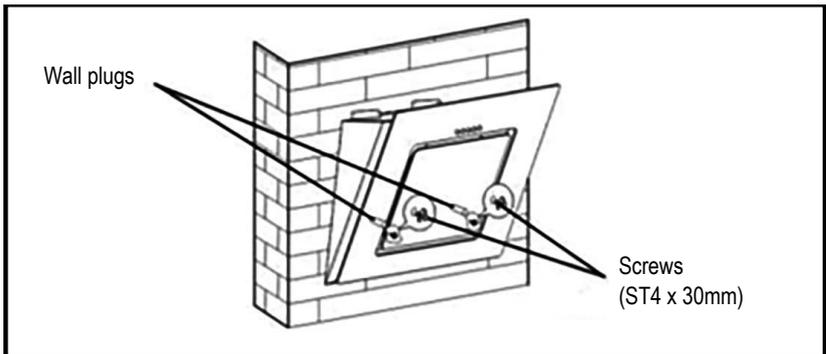


- Place the plastic duct on the cooker hood.

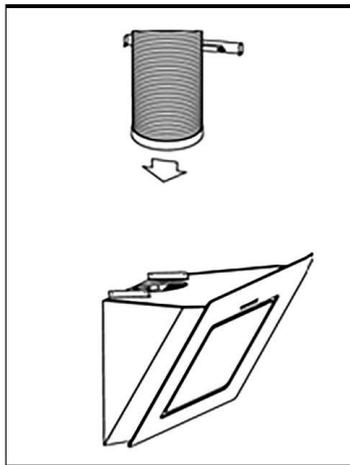


- The lower chimney bracket is used to fix the upper decorative chimney and lower decorative chimney. Use 2 (two) 4x8mm screws to attach lower and upper chimney.
- ◆ Noted: Do not fasten screws too strongly; make sure that the upper decorative chimney can be telescopically adjusted after assembling.

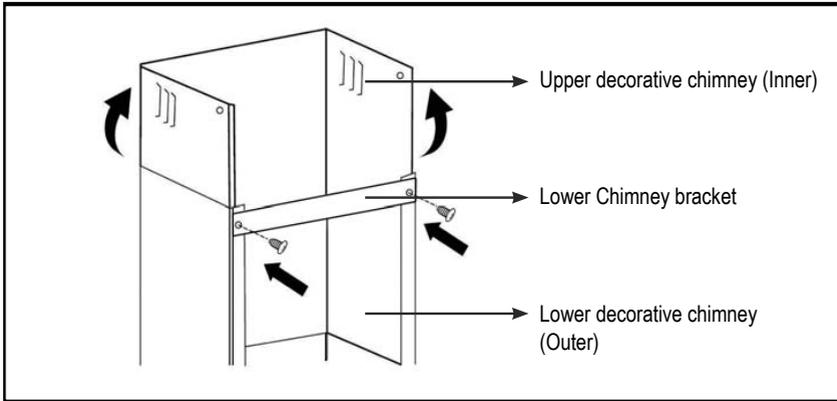


- Put the chimney on the cooker hood.  
Fix the lower chimney bracket on the wall with 2 screws (4mm x 30mm).

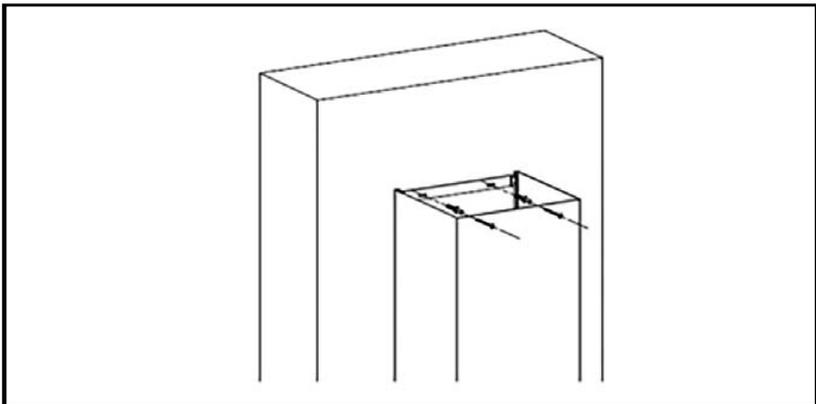

- Fix the upper chimney on the upper chimney bracket with 2 screws (4x8mm).
- ◆ Then fix the upper chimney bracket on the wall.  
Before fixing the bracket on the wall, you should decide on where the upper chimney bracket fixing holes for installation should be.

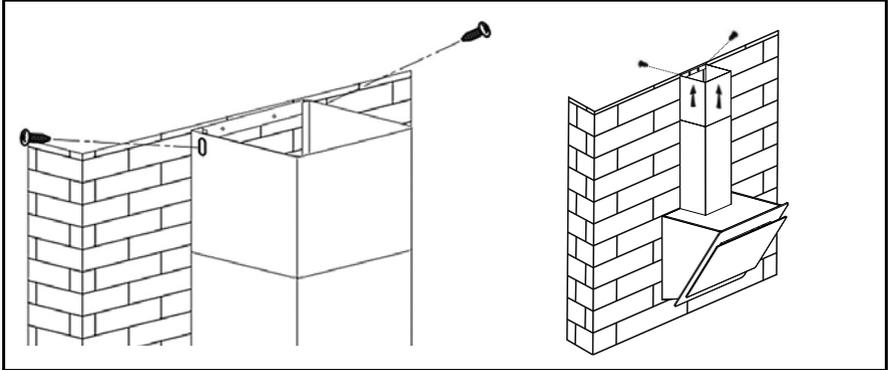


- Fasten the lower chimney to the cooker hood with 2 of the 4x8mm screws.

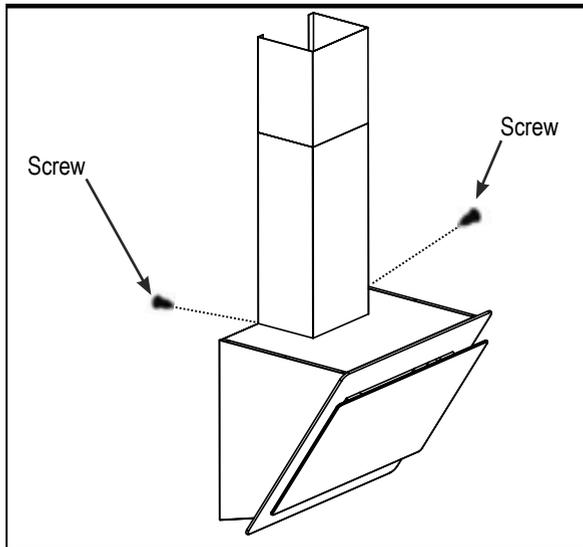


## **Installation (Vent inside)**

If you do not have an outlet to the outside, exhaust pipe is not required and the installation is similar to the one show in section “**Installation (Vent outside)**”.

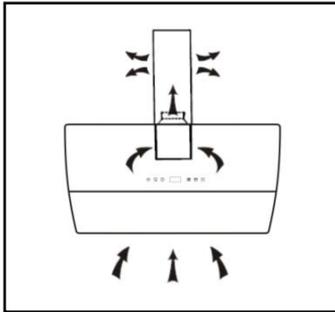


Activated carbon filter can be used to trap odors.

In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.

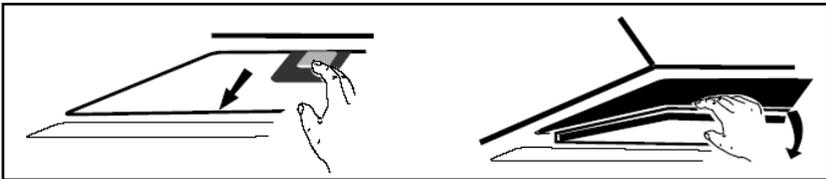

Plug the activated carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side.

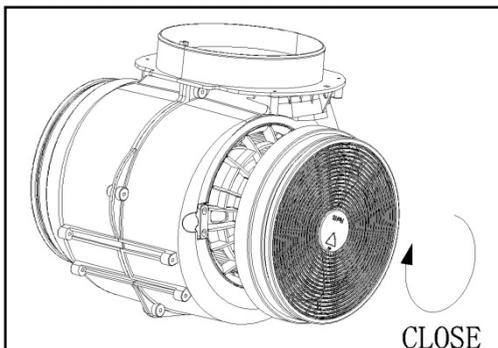

### **NOTE:**

- *Make sure the filter is securely locked. Otherwise, it would loosen and cause dangerous.*
- *When activated carbon filter attached, the suction power will be lower.*

# Touch control



## **On/Off button**

It's used for turning on/off the fan.



## **Speed plus button**

For increasing the speed of the fan



## **Speed decrease button**

For decreasing the speed of the fan.



## **Light button**



## **Digital display**

Fan speed display: "1" for Low speed, "2" for Medium speed, "3" for High speed, "4" for Booster function.

**Quick timer:** Press  &  hold for 1 second, Digital display will flashing & into 5 minutes count down, after 5 minutes motor & light will turn off automatic & Buzzer sound for 1 second.

## **Booster function**

This hood has a booster function. To activate the booster, Press  to speed 4, enter into highest speed while the hood is in use and it will increase speed for 5 minutes, before slowing down again.

---

## **MAINTENANCE**

Before cleaning switch the unit off and pull out the plug.

### **I. Regular Cleaning**

Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.

### **II. Monthly Cleaning for Grease Filter**

*ESSENTIAL: Clean the filter every month can prevent any risk of fire.*


The filter collects grease, smoke and dust..... so the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent.

### **III. Annual Cleaning for Activated Carbon Filter**

Apply SOLELY to unit that installed as a recirculation unit (not vented to the outside). This filter traps odours and must be replaced at least once a year depending on how frequent the cooker hood used.

#### IV. Bulb Replacement

1. Switch the unit off and unplug the appliance.
2. Open the cooker hood and remove the filters.
3. Release the lamp connectors and push the lamp out from inside.
4. Replace with the same type of lamp.

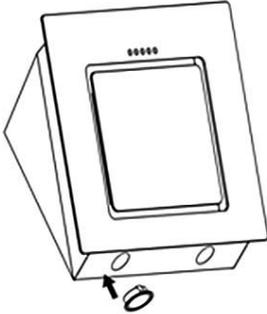

#### **TROUBLESHOOTING**

<b>Fault</b>	<b>Cause</b>	<b>Solution</b>
Light on, but fan does not work	The fan blade is jammed.	Switch off the unit and repair by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	light bulb burn.	Replace the bulb with correct rating.
	Power cord looses.	Plug into the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch off the unit and repair by qualified service personnel only.
	The fan motor is not fixed tightly.	Switch off the unit and repair by qualified service personnel only.
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in proper location.
Suction performance not good	Too long distance between the unit and the cooking plane	Readjust the distance to 65-75cm

#### **ENVIRONMENTAL PROTECTION**

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



---

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.