


WASHING MACHINE DYT 7122D2

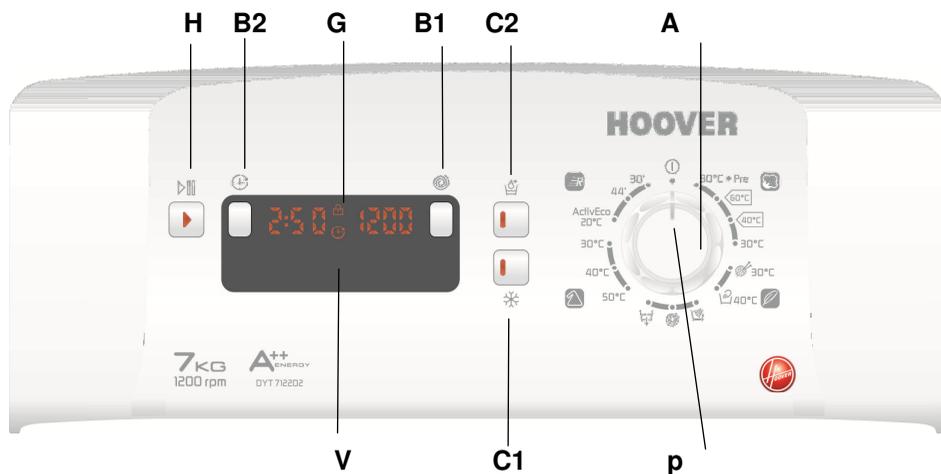

A PROGRAMME SELECTOR

Use this control to select the desired wash programme. Turn the selector (it can be turned in both directions) so that the programme is opposite the reference indicator (p). The temperature selected will depend on the programme. (See the Programme Table).

B1 SPIN SPEED SELECTOR

B2 DELAY START

C1 COLD WASH

C2 AQUAPLUS (SENSITIVE KEY)

G DOOR LIGHT

H START/PAUSE KEY

V “DIGITAL” Display

The display's indicator system allows you to be constantly informed about the status of the machine

p CONTROL POSITION INDICATOR

Programme table mod. DYT 7122D2

programme	programme for	aprox. time min.	max. temp. setting °C	spin speed rpm/min	max. load Kg.	washing powder load			option keys C	
						I	II			
COTTONS	Fast coloureds with prewash	display	90°	1200	7	•	•	•	•	•
	* Fast coloureds	display	60°	1200	7		•	•	•	•
	* Fast coloureds	display	40°	1200	7		•	•	•	•
	Delicate coloureds	display	30°	1200	7		•	•	•	•
MIXED SYNTHETICS	Fast coloureds	display	50°	1000	3		•	•	•	•
	Delicate coloureds	display	40°	1000	3		•	•	•	•
	Delicate coloureds	display	30°	1000	3		•	•	•	•
DELICATES	Woollens	display	30°	800	1		•	•	•	
	Hand wash	display	40°	800	1		•	•	•	
SPECIAL	Gentle rinse	display	-	1000	-			•		•
	Gentle spin	display	-	1200	-					
	Empty	display	-	0	-					
	ActivEco 20°	display	20°	1000	7		•	•	•	•
	Fast 44	display	40°	1000	3		•	•	•	
	Fast 30	display	30°	1000	2		•	•	•	

* Cotton wash programme requirements according to (EU) 1015/2010 e n° 1061/2010 regulations

60°C Cotton wash programme

40°C Cotton wash programme

These wash programmes are recommended for soiled cotton fabrics and are the most effective in terms of both energy efficiency and water consumption.

These programmes have been designed to comply with the recommended wash temperatures specified on the labelling: the specified temperature may differ slightly from that indicated on the wash cycle.

Recommendations on the use of detergent at various temperatures.

When washing heavily soiled whites, we recommend using cotton programs of 60°C or above and a normal washing powder (heavy duty) that contains bleaching agents that at medium/high temperatures provide excellent results.

For washes between 40°C and 60°C the type of detergent used needs to be appropriate for the type of fabric and level of soiling.

Normal powders are suitable for "white" or color fast fabrics with high soiling, while liquid detergents or "colour protecting" powders are suitable for colored fabrics with light levels of soiling.

For washing at temperatures below 40°C we recommend the use of liquid detergents or detergents specifically labeled as suitable for low temperature washing.

For washing wool or silk, only use detergents specifically formulated for these fabrics.

For dosage amounts please follow the instructions on the detergent package label.

Programme	load	time	spin.	Energy cons.	Water cons.	remaining moisture
Cotton 60°C	7 kg / 3,5 kg	210 min./140 min	1200 Rpm	1,05 kWh / 0,82 kWh	52l / 35 l	53%
Cotton 40°C	3,5 kg	130 min.		0,62 kWh	35l	53%
Synthetics 40°C	3kg	105 min.	1000 Rpm	0,49 kWh	64l	50%
Woollens 30°C	1 kg	45 min.	800 Rpm	0,45 kWh	50l	40%

Power consumption of the off-mode and of the left-on mode: 0,4W / 0,6W

IMPORTANT:

- Do not use liquid detergent for programs with a prewash cycle and/or timed start.

PREPARING THE WASH CYCLE

- 1.- Once the washing is loaded, ensure that the drum doors are properly closed..
- 2.- Add detergent and additives, not exceeding the maximum level indicator.
 - detergent for pre-wash I
 - detergent for wash programme II
 - fabric conditioner 

SELECTING THE DESIRED PROGRAMMES AND OPTIONS

- 3.- Turn the programme selector (A) to the desired programme.
- 4.- Press the key or keys for any options desired (C1, C2,).
 - .- It is advisable to select the required options before pressing the Programme Start key (H).
 - .- Remember that if the programme has already passed the stage at which an option is activated, that option will not be implemented.

C1 cold wash key

By pressing this button it is possible to transform every programme into a cold washing one, without modify other characteristics (water level, times, rhythms, etc..).

Curtains, small carpets, man-made delicate fabrics, non color fast garments can be safely washed thanks to this new device.

C2 aquaplus (sensitive key)

Thanks to the new SENSOR ACTIVA SYSTEM, by pressing the key it is possible to run a special washing cycle applicable to all programs and types of fabric, caring for their fibres and the delicate skin of the users who use them.

Taking on much more water, together with the new combined action of drum rotation cycles and taking on and discharging water allow you to obtain perfectly clean, rinsed clothes. More water is used in the wash to dissolve the detergent completely, ensuring an effective washing action. The water in the rinses has also been increased to eliminate all trace of detergent in the fibres.

This function has been specifically studied for people with delicate, sensitive skin, who can suffer irritation or allergy from the slightest detergent residue.

It is also advisable to use this function for children's clothes and delicate fabrics in general, especially for washing bathrobes, whose fibres tend to retain detergent.

This option is not available for the wool program.

- 5.- Select spin speed if required (B1)

B1 spin speed

Once the programme has been selected, the maximum spin speed allowed for that programme appears on the display. Pressing the spin button will reduce the speed by 100 rpm each time the button is pressed. The minimum speed allowed is 400 rpm, or it is possible to omit the spin by pressing the spin button repeatedly.

- 6.- To start the programme, once options have been chosen, press the key H. The washing machine will begin to operate. If you wish to cancel the option you have selected, press the key again. (The pilot light will go off.)

B2 delay start button

This button allows you to pre-programme the wash cycle to delay the start of the cycle for up to 24 hours.

To delay the start use the following procedure:

Set the required programme.

Press the button once to activate it (h00 appears on the display) and then press it again to set a 1 hour delay (h01 appears on the display); the pre-set delay increases by 1 hour each time the button is pressed, until h24 appears on the display, at which point pressing the button again will reset the delay start to zero.

Confirm by pressing the "START/PAUSE" button (the light on the display starts to flash). The countdown will begin and when it has finished the programme will start automatically.

It is possible to cancel the delay start by taking the following action:

Press and hold the button for 5 seconds until the display will show the settings for the programme selected. At this stage it is possible to start the programme previously selected by pressing the "START/PAUSE" button or to cancel the process by setting the selector to the OFF^⓪ position and then selecting another programme.

cycle duration (V)

When a programme is selected the display automatically shows the cycle duration, which can vary, depending on the options selected.

Once the programme has started you will be kept informed constantly of the time remaining to the end of the wash.

door light (G)

Once the START/PAUSE button has been pressed the light first flashes then stops flashing and remains on until the end of the wash.

2 minutes after the end of the wash the light goes off to show that the door can now be opened.

Cancel-change programs

Once you have started a program, and wish to change or cancel it, you should proceed in the following manner,

- Put the program selector in the OFF^⓪ position. At that instant, you have cancelled the program and can if you wish to do so, select a new one.
- Select the new program.
- Click the key (H) again.

The washing machine will perform the new selected program.

Programme pause

It is possible to momentarily stop the wash programme so that more washing can be added, and to do so, proceed as follows:

- Hold down the (H) key until the option key lamps begin to flash and the time remaining indicator display, and pilot lamp lights up.
- When the Door Lock lamp goes out (after approx. 2 minutes), open the door and add the desired washing.
- Correctly close the doors of the drum and the outer cover.
- Press the key H, and the washing machine will continue with the programme.

When the programme has been completed, the message "END" will appear in the indicator display, Wait until the Door Lock lamp (G) goes out (after approx. 2 minutes)

“To remove the washing, set the programme selector to the OFF ^⓪ position”, before opening the washing-machine lid and the drum doors.