


CBT6130/2W-07
CBT6130/2N-07
CBT6020/2X-07
Instruction manual

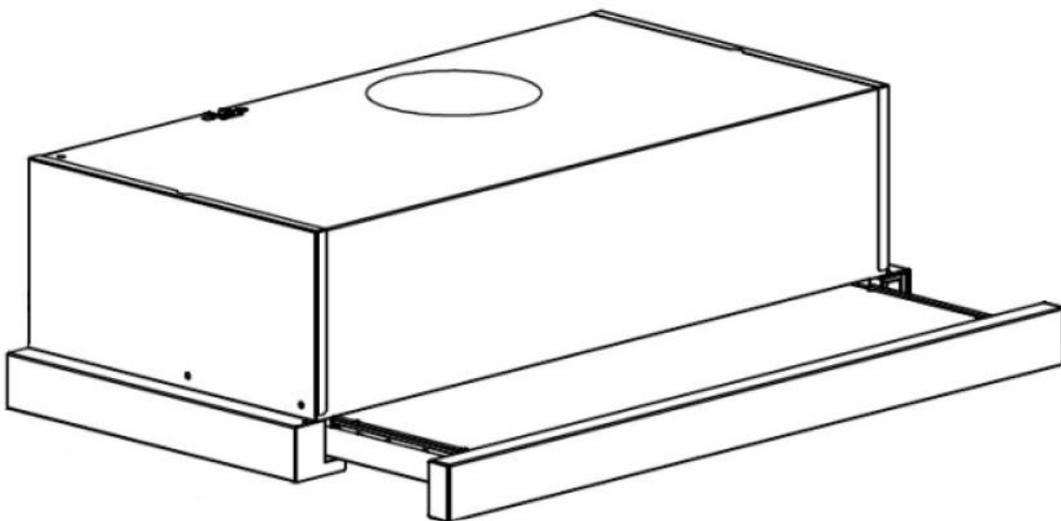

CONTENT

1.....	Introduction
2.....	Safety precaution
3.....	Installation instructions
4.....	Operation
5.....	Use and maintenance
6	Trouble shooting
7.....	Environmental protection

INTRODUCTION

Thank you for choosing this cooker hood. This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance. In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

SAFETY PRECAUTION

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The instructions shall state the substance of the following:
 - – there shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room);
 - – the details concerning the method and frequency of cleaning;
 - – there is a fire risk if cleaning is not carried out in accordance with the instructions;
 - – do not flambé under the range hood;
 - – CAUTION: Accessible parts may become hot when used with cooking appliances.

- The installation instructions shall include the substance of the following:
 - – the air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room);
 - – the minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood. (When the range hood is located above a gas appliance, this distance shall be at least 65 cm.
 - – regulations concerning the discharge of air have to be fulfilled.
- The installation instructions for range hoods with accessible metallic enclosures of class II construction shall include details that indicate the location and maximum permitted lengths for any fixing or mounting screw or other fixing device that penetrates into the range hood to


attach an accessory such as a fascia or duct fitting.

- Where fixing or mounting screws, or other fixing devices are used, that penetrate into the range hood with an accessible metallic enclosure of class II construction, to attach an accessory, the instructions shall indicate the required location of these screws or fixing devices and include the substance of the following warning.
- Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards
- For safety reason, please use only the same size of fixing or mounting screw which are recommended in this instruction manual.
- Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards

- Regarding the instructions method of fixing for the fixed appliance and how the appliance is to be fixed to its support, thanks to refer to the section **“INSTALLATION AND FIXING”**.
- Regarding the instructions for the bulb changing, thanks to refer to the section **“light changing”**. **ILCOS D code for this lamp is: IBB/C-40-230-E14-35**

3. Installation instructions

The cooker hoods should be placed at a distance of 65-75cm from the cooking surface for best effect. (See Pic 1)

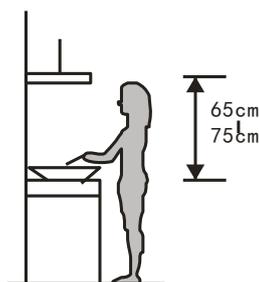

Pic 1

Way one: (See Pic 2A)


4.1.1 To install onto the wall drill 4 holes of Ø8mm on a suitable place according with the centre distance of hole in the back of the cooker hood.

4.1.2 Insert the wall plugs into the holes.

4.1.3 Insert the screws into the wall pulgs and tight the screws.

4.1.4 Put up the cooker hood onto the fixed screws.

4.1.5 Put the one air outlet and extensible pipe onto the cooker hood. (the extensible pipe is optional not supplied)

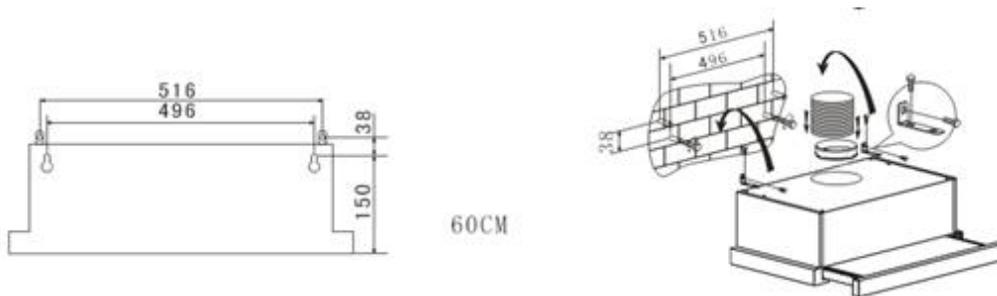


Pic 2A

Way two: (See Pic 2B)

4.2.1 Drill 6 holes of 4mm diameter at the bottom of the hanging cupboard

4.2.2 Put the air outlet on the cooker hood, then install the cooker hood on the bottom of the cupboard, tighten the hood with enclosed 6 screws.

4.3.3 Install the adjusted board on the bottom of the hood in order to keep out the gap between hood back and cupboard.

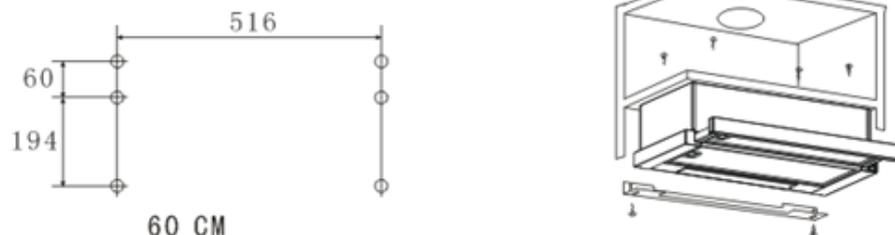

Pic 2B

- For safety reason, please use only the same size of fixing or mounting screw which are recommended in this instruction manual.
- Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards


4. OPERATION

5.1 Connect the plug into the power.

5.2 Push the switch ① into “”, the lamp be on; push into “0”, the lamp be off.

5.3 Push the switch ② into “I、II”, the motor will be on “low、high” two speeds, push into “0”, the motor will be off.

5.4 The cooker hood will working at low or high speed when pull out the front panel.

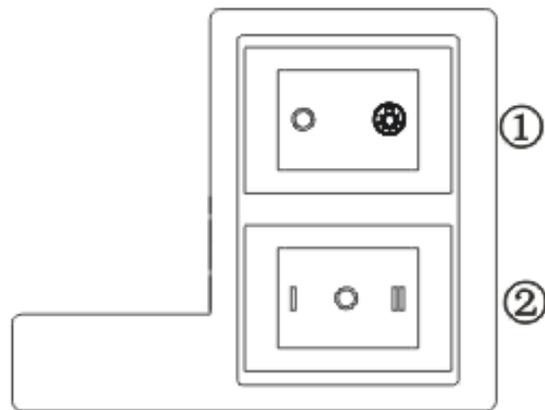

Pic 3

5. USE AND MAINTENANCE

- It is recommended to operate the appliance prior to cooking.
- There shall be adequate ventilation of the room when the cooker hood is used at the same time as appliances burning gas or other fuels(not applicable to appliances that only discharge the air back into the room.
- It is recommended to leave the appliance in operation for 15 minutes after cooking is terminated in order to completely eliminate cooking vapours and odours.
- If the appliance is not used, please turn off.
- Don't have flame under the cooker hood.
- Don't use or stop use if the appliance is damaged especially the supply cord and the case.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't immerse the appliance in liquid.
- The exhaust air must not be discharge into a flue which is used for

exhausting fumes from appliance burning gas or other fuels.


- Regulations concerning the discharge of air have to be fulfilled.
- The details concerning the method and frequency of cleaning.
- In order to prevent fire hazard, it is recommendable to clean the filter at a maximum of 2 months by carrying out the followings:

-Unplug before cleaning, then remove the filters from the cooker hood and wash them in a solution of water and neutral liquid detergent, leaving to soak.

-Rinse thoroughly with warm water and leave to dry.

-The filters may also be washed in the dishwasher.

- The aluminum panels may alter in color after several washes. This is not cause for customer complaint nor replacement of panels.

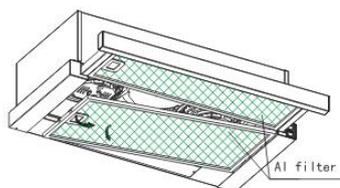


Pic 4

- Clean the surface of the cooker hood regularly using cloth moistened with denatured alcohol or non abrasive liquid detergent. (Remark: There can not clear the motor and inside part.)
- Replace filters approximately every 4 months.
- There is a fire risk if cleaning is not carried out in accordance with the

instruction.

- Replace the lamp pls see pic 5
- **ILCOS D code for this lamp is: IBB/C-40-230-E14-35**

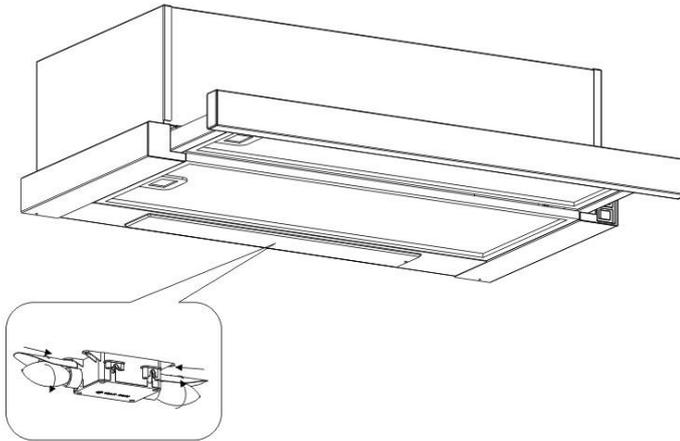

- Carbon filter (not supplied)

Carbon filter can be used to trap odors. Normally the activated carbon filter should be changed at three or six months according to your cooking habit.

Activated carbon filter cannot be washed or recycled. The installation procedure of activated carbon filter is as below.

- Slide the front part of the cooker hood.
- In order to install the activated carbon filter, the AI anti-grease filter should be detached first. Press the lock and pull it downward.
- Put the activated carbon filter into the unit and turn it in anti-clockwise direction. Repeat the same on the other side. Put back to the grease filter in position.

Note: When the activated carbon filter installed, the suction power will be lowered.

6. Trouble shooting

Problem	Possible cause	Solution
The extractor fan ceases to function.	The kitchen hood feed cable is not connected to the network. There is no electrical current in the network.	Connect feed cable to the network. Check that the network has electrical current.
Insufficient suction power.	Did not set to the right speed and/or air outlet being blocked.	If the kitchen hood is set up for recirculation, check that the charcoal filter is still effective. If the kitchen hood is set up for extraction, check that the ducting and outlets are not blocked. The kitchen is adequately vented to allow the entry of fresh air.
Hood has switched off during operation.	The safety cut-out device has been tripped.	Turn off the hood and then wait for the device to reset. If the hood has been installed below the heights indicated in the installation instructions, the motor will cut-out frequently which may damage the hood.
The lamps do not light up.	The lamps are burnt out. The lamps are loose.	Change the lamps. Tighten the lamps.
Oil leakage.	One-way valve and air ventilation entrance not tightly sealed. Leakage from the connection of U-shaped section and cover.	Seal with glue on the one-way valve. Seal with soap or paint on U-shaped section.
Hood shakes during operation.	Leaf is damage. The body or motor tightly hung.	Replace the leaf as a damaged leaf causes shaking. Lock the motor tightly or fix the body tightly, respectively.

7.ENVIRONMENTAL PROTECTION:



This product is marked with the symbol on the selective sorting of waste electronic equipment. This means that this product must not be disposed of with household waste but must be supported by a system of selective collection in accordance with Directive 2002/96/EC. It will then be recycled or dismantled to minimize impacts on the environment, electrical and electronic products are potentially dangerous for the environment and human health due to the presence of hazardous substances.

For more information, please contact your local or regional authorities.

Note:

- a. In order to reduce the environmental impact (e.g. energy use) of the cooking process, please be sure that your product is installed according to the user manual, keep the operation place ventilated, keep the extraction duct be direct and short as possible as it can be.
- b. For the product with manual operation mode, we suggest switch the motor off within 10 minutes after finishing the cooking process.
- c. Please be sure to dismantle related components according to the user manual when maintaining for non-destructive, protect the parts to make the re-installed work can be favoring and avoid damage.