

# Haier

I-MASTER  
BLENDER  
SERIES 5



<https://go.he.services/haier-um>

## INSTRUCTIONS FOR SAFE USE

---

This appliance is intended for domestic use only as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

**WARNING** To eliminate suffocation hazard for young children, discard all packaging materials immediately after removing the product.

The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall be supervised to ensure that they do not use or play with the appliance. Keep the appliance and its cord out of reach of children.

Do not pull or carry the appliance by the power cord. Always unplug the appliance from the socket by pulling the plug instead of the cord.

Do not place the power cord over sharp edges or near hot surfaces. Do not use extension cord.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorized Haier service engineer must replace the power cord.

Use only attachments, consumables or spares recommended or supplied by Haier.

**WARNING** Risk of injury! Misuse of the appliance can potentially lead to injury.

**CAUTION** Cutting blades are very sharp, be careful when handling the sharp cutting blades during assembling and disassembling, emptying the jug and during cleaning.

**CAUTION** Ensure that the blender is switched off before removing it from the stand. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

The blender is only to be used with the stand provided. Only use the appliance in accordance with the power specification on the rating plate.

Only use the appliance on a dry level surface and never move it when working.

The appliance is only intended to blend or mix food with recommended size and quantity in the instructions. It must not be used for other than intended use.

Do not use a glass jug right after being taken out from dishwasher or refrigerator. Be sure it stays at room temperature for at least 5 min before use.

Do not operate the appliance until the blade unit is securely fastened and the lid is properly assembled to the blender jug.

Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming. Never fill the blender jug with ingredients hotter than 70°C.

Switch off the appliance and disconnect from power supply before changing accessories or approaching parts that move in use.

Never insert your fingers into the blender jug to touch the sharp blades or remove the ingredients when the appliance is plugged in.

Never insert your fingers or an object into the blender jug while the appliance is working.

If some ingredients stick to the sides of the blender jug, switch off and unplug the appliance, then use the provided spatula to remove the ingredients from the sides. Disconnect from power supply and allow the cutting blades to completely stop before removing any parts and before cleaning or any maintenance. Never immerse the motor base in liquid. Do not operate the appliance with wet hands.

Pay attention to clean surfaces which are intended to come into contact with food! Please note the information on cleaning in the instructions.

Do not continue to use your appliance if it appears faulty.

**Haier service:** To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorized Haier service engineer.

### Recipe

Vegetable/Fruit juice (Max speed for 2 min maximum)

Food size: 1.5 cm x 1.5 cm x 1.5 cm

Glass jug: 680 g carrots + 1020 g water

Personal cup: 240 g carrots + 360 g water

Smoothie (Program setting for 1 min)

Food size: 1.5 cm x 1.5 cm x 1.5 cm  
Glass jug: 680 g carrots + 1020 g water  
Personal cup: 240 g carrots + 360 g water

Ice crush (Program setting for 1 min)  
Food size: 2 cm x 2 cm x 2 cm  
Glass jug: 200 g ice cube  
Personal cup: 100 g ice cube

Auto clean (Program setting for 30 s)  
Glass jug: 1.7 L water  
Personal cup: Max scale (0.6 L) water

### Note on the recipe:

- 1) For each use, the consecutive operation time should be less than 2 minutes. At least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.
- 2) If you want to stop the machine during operation, turn the knob to I position anytime.

### The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for



waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

 This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via Comolli 16, 20861 Brugherio (MB) Italy

EU 2023/826	
Power Consumption Off Mode	N.A.
Power Consumption StandBy Mode	0.4W
Power Consumption StandBy Mode with info display	N.A.
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	3min