

# Haier

I-MASTER  
KETTLE  
SERIES 7



<https://go.he.services/haier-um>

## INSTRUCTIONS FOR SAFE USE

---

This appliance is intended for domestic and similar use, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

**WARNING** To eliminate suffocation hazard for young children, discard all packaging materials immediately after removing the product.

This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Keep children under 8 years of age away from the appliance and connecting cable and do not allow them to use the appliance. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

Only use the appliance indoors and at altitudes not exceeding 2000m above sea level.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Haier service engineer must replace the power cord.

Use only attachments, consumables or spares recommended or supplied by Haier.

Only use the appliance in accordance with the power specification on the rating plate.

This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential

type environments;

- bed and breakfast type environments.

If the kettle is overfilled, boiling water may be ejected. The appliance is only to be used with the base provided.

**WARNING** Avoid spillage on the connector. Never immerse the appliance.

**WARNING** Risk of injury! A misuse of the appliance can potentially lead to injury.

**CAUTION** The heating element surface is subject to residual heat after use.

Pay attention to clean surfaces which are intended to come into contact with food! Please note the information on cleaning in the instructions.

**WARNING** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

To avoid a fire hazard, do not place the kettle on or near hot surfaces, e.g., gas range, hobs. Never operate the kettle on the floor to avoid entangled in or tripping over or possible injury to the children.

Do not pull or carry the appliance by the power cord. Always unplug the appliance from the socket by pulling the plug instead of the cord. Do not place the power cord over sharp edges or near hot surfaces. Do not use an extension cord. Do not operate the kettle on an inclined surface or move it

when working.

Ensure that the kettle is used on a firm and flat surface where the children can't touch.

When using the appliance, please keep far away from the children or animal to avoid accidental injury. Do not use the appliance for other than its intended use.

The surface will become hot while in use, do not touch hot metal surface. Always use the handle to pick it up.

Follow the operation guide to position the lid so that steam is directed away from the handle.

To avoid scalding from steam, do not open the lid or reach across top of spout when the water is boiling.

Unplug from the socket after use and before cleaning the appliance or any maintenance task.

Allow the appliance to cool down before removing any parts and before cleaning.

Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.

Be careful when opening the lid for refilling when the kettle is hot.

Do not continue to use your appliance if it appears faulty.

**Haier service:** To ensure the continued safe and efficient operation of this appliance we

recommend that any servicing or repairs are only carried out by an authorised Haier service engineer.

Frequency bands	2412 MHz to 2472 MHz
Maximum RF power transmitted in the frequency band	802.11 b: +19.5 dBm 802.11 g: +18 dBm 802.11 n HT20:+18 dBm 802.11 n HT40:+18 dBm

The Environment



The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household

and waste disposal service or the shop where you purchased the appliance.

**CE** This appliance complies with the European Directives 2014/53/EU and 2011/65/EU. To receive a copy of the declaration of conformity,

please contact the manufacturer through the website:

[www.candy-group.com](http://www.candy-group.com)

CANDY HOOVER GROUP S.r.l.

Via Comolli, 16

20861 Brugherio (MB) Italy

EU 2023/826	
Power Consumption Off Mode	N.A.
Power Consumption StandBy Mode	0.5W
Power Consumption StandBy Mode with info display	N.A.
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	15min

