## 10

## MENU

PULSE			,	≤60s
MANUAL MODE				≤60s
PROGRAM MODE	Multi-serve Jug	BLEND	SMOOTH MEDIUM THICK	60s
		CRUSH	FINE MEDIUM COARSE	60s
		CREAM	SMOOTH MEDIUM THICK	30s
		СНОР	FINE MEDIUM COARSE	40s
		KNEAD	FAST MEDIUM SLOW	40s
		AUTO CLEAN		30/60s
	Personal Blender	BLEND	SMOOTH MEDIUM THICK	60s 30s 15s
		CRUSH	FINE MEDIUM	60s 40s
		AUTO CLEA	COARSE	20s 30/60s
	Chopper	СНОР	FINE MEDIUM COARSE	60s
		CRUSH	FINE MEDIUM COARSE	60s
		CREAM	SMOOTH MEDIUM THICK	30s
		AUTO CLEA	AN	30/60s

	<b>\</b>	<b>-</b>	
PROGRAM MODE	SETTINGS	WI-FI MODULE	ON/OFF
		RESET NETWORK SETTINGS	YES/NO
		LANGUAGE	ENGLISH, FRANÇAIS,ITALIANO, DEUTSCH,ESPAÑOL, PORTUGUÊS,POLSKI
		RESET	YES/NO