

					
MANUAL MODE 	TOAST	Level 1-7			105-175S
	CRISPY SIDE				
	SMALL TOAST				
	CRISPY SIDE SMALL				
 PROGRAM MODE	ENTIRE BREAD	FRESH or FROZEN	NORMAL or SMALL	Level 1-7	32-165S
	SLICE BREAD				
	HALF BREAD				
	BUN				
	BAGEL				
	WAFFLE				
	PANCAKE				
	PIZZA				
	SANDWICH				
	MELTING				
	REHEAT				
	DEFROST				

PROGRAM MODE	SETTINGS	WI-FI MODULE	ON/OFF
		RESET NETWORK SETTINGS	YES/NO
		LANGUAGE	ENGLISH, FRANÇAIS, ITALIANO, DEUTSCH, ESPAÑOL, PORTUGUÊS, POLSKI
		SILENT MODE	ON/OFF
		RESET	YES/NO