

Haier

I - MASTER MULTI
HANDBLENDER
SERIES 5



<https://go.he.services/haier-um>

INSTRUCTIONS FOR SAFE USE

This appliance is intended for domestic use only as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

WARNING To eliminate suffocation hazard for young children, discard all packaging materials immediately after removing the product.

The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall be supervised to ensure that they do not use or play with the appliance. Keep the appliance and its cord out of reach of children.

This appliance (with cream whippers, egg beaters accessory) can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if

they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Do not pull or carry the appliance by the power cord. Always unplug the appliance from the socket by pulling the plug instead of the cord. Do not place the power cord over sharp edges or near hot surfaces. Do not use extension cord.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Haier service engineer must replace the power cord.

Use only attachments, consumables or spares recommended or supplied by Haier.

WARNING Risk of injury! Misuse of the appliance can potentially lead to injury.

CAUTION Cutting blades are very sharp, be careful when handling the sharp cutting

blades during assembling and disassembling, emptying the jug and during cleaning.

CAUTION Ensure that the appliance is switched off and stop running before removing it from the jug.

Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, cleaning or in the event of an error.

Only use the appliance in accordance with the power specification on the rating plate.

Only use the appliance on a dry level surface and never move it when working.

The appliance is only intended to blend or mix food with recommended size and quantity in the instructions. It must not be used for other than intended use.

Do not use a glass jug right after being taken out from dishwasher or refrigerator. Be sure it stays at room temperature for at least 5 min before use.

Do not operate the appliance until the blade unit is securely fastened and immersed by the ingredients. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the

appliance due to a sudden steaming. Take care when processing hot food which may splash.

Switch off the appliance and disconnect from power supply before changing accessories or approaching parts that move in use.

Do not operate the appliance by means of an external timer or separate remote-control system.

Disconnect from power supply and allow the cutting blades to completely stop before removing any parts and before cleaning or any maintenance.

Never immerse the motor base in ingredient while in use or clean it under running water. Do not operate the appliance with wet hands. Pay attention to clean surfaces which are intended to come into contact with food! Please note the information on cleaning in the instructions.

Do not continue to use your appliance if it appears faulty.

HAIER SERVICE: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Haier service engineer.

Recipe:

Vegetable/Fruit juice (30 sec on / 1 min off, maximum 5 cycles)

Beaker: 280 g carrots + 420 g water

Honey butter sauce (5 s on / 2 min off, maximum 3 cycles)

Chopper glass jug: 200 g butter + 300 g honey

Sponge cakes (maximum 10 min)

Beaker: 720 g egg whites

Potato mud: 1 min, 100 g cooked potato (in 4 pieces)

Note on the recipe:

1) For each use, the consecutive operation cycle or time and food quantity should be no more than stated as above. At least 10 minutes rest time must be maintained so that the unit cool to room temperature before performing next operation;

2) If you want to stop the machine during operation, release the ON/OFF trigger button anytime.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead, it must be handed over to the applicable



collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

CE This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via
Comolli 16, 20861 Brugherio(MB), ITALY

EU 2023/826	
Power Consumption Off Mode	0.2W
Power Consumption StandBy Mode	N.A.
Power Consumption StandBy Mode with info display	N.A.
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	N.A.