


Haier

Multi-Beverage
Series 5

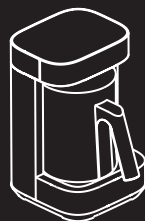

<https://go.he.services/haier-um>

INSTRUCTIONS FOR SAFE USE

This appliance is intended for domestic use only, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Keep children under 8 years of age away from the appliance and connecting cable and do not allow them to use the appliance. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

Only use the appliance indoors and at altitudes not exceeding 2 000m above sea level.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorized Haier service engineer must replace the power cord.

Use only attachments, consumables or spares recommended or supplied by Haier.

Only use the appliance in accordance with the power specification on the rating plate.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

The appliance is only to be used with the base provided.

CAUTION: Never fill the container above the maximum level since hot foaming coffee or other liquids (e.g. milk) might overflow during heating.

WARNING Avoid spillage on the connector. Never immerse the appliance.

WARNING Risk of injury! A misuse

of the appliance can potentially lead to injury.

CAUTION The heating element surface is subject to residual heat after use.

Pay attention to clean surfaces which are intended to come into contact with food! Please note the information on cleaning in the instructions.

To avoid a fire hazard, do not place the appliance on or near hot surfaces, e.g., gas range, hobs.

Never operate the appliance on the floor to avoid entangled in or tripping over or possible injury to the children.

Do not operate the appliance on an inclined or wet surface. Do not move it when working.

The container surface will become hot while in use, do not touch hot metal surface. Always use the handle to pick it up.

Unplug from the socket after use and before cleaning the appliance or any maintenance task.

Allow the appliance to cool down before removing any food ingredient and before cleaning.

Do not continue to use your appliance if it appears faulty.

HAIER SERVICE: To ensure the continued safe and efficient operation of this appliance we

recommend that any servicing or repairs are only carried out by an authorized Haier service engineer.

The Environment



The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead, it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l.
Via Comolli, 16, 20861 Brugherio (MB) Italy

EU 2023/826	
Power Consumption Off Mode	N.A.
Power Consumption StandBy Mode	0.5W
Power Consumption StandBy Mode with info display	N.A.
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	10min