

# Haier

## Drying cabinet CCE L02LU1



Download  
the hOn  
Smart-Home app.



### Instruction manual

- Please read this manual carefully before use
- The company reserves the right to interpret the instructions
- Please refer to the product itself for its physical appearance.
- Please store safely after reading
- In the event of product technology or software upgrades, no further information will be provided

# Haier



## Deodorizing

The Deodorizing function uses luminous plasma + OxyPure + rapid natural ventilation to easily remove the smell of tobacco, cooking or perfume.

## Anti crease function

With the anti crease function, steam softens and smooths garments in order to remove creases.

## Aromatherapy function

Place an aromatherapy bag before starting the care procedure to leave your clothes fragrant afterward.

## Large capacity

The large capacity means up to five garments can be handled at the same time.



## Sanitize function

It features a sanitize function that can kill common bacteria and viruses, ensuring the health and safety of you and your family.

## Delay

A special delayed programming function allows you to set the care time as you choose.

## Deluxe Care function

The Deluxe Care function restores the lustre and elasticity of cotton, linen, wool, silk and mink garments.

## Heat pump drying + auxiliary heating

Heat pump drying removes moisture in the clothes as condensed water, a more convenient and comfortable process for users. It is also equipped with auxiliary heating for faster warming.

Please read these instructions carefully, as they will help you to use the product safely and comfortably. In order to use the product safely, please read the safety instructions carefully before using the product.

# Contents

Safety instructions .....	3
Presentation of appearance and components .....	6
Component parts of the drying cabinet (front) .....	6
Component parts of the drying cabinet (rear) .....	7
Accessories .....	7
Installation settings before use .....	8
Issues requiring specific attention .....	8
Adjusting foot .....	8
Attaching the noise reduction pads (optional) .....	8
Installing the water collection tray .....	8
Adding an aromatherapy bag (optional) .....	9
Connecting the power supply .....	9
Installing the drying support (optional) .....	9
Preparation before care .....	10
Checks .....	10
Pre-treatment .....	10
Prohibited clothing and items .....	11
Instructions before use .....	11
Operating steps .....	12
Introduction to the care programmes and functions .....	14
Display screen .....	14
1. Description of icons displayed on the interface .....	15
2. Selection of care programmes .....	16
3. Additional function .....	20
4. Starting a programme .....	21
5. Auxiliary functions .....	23
Treatment programme instructions .....	25
Daily maintenance and upkeep .....	26
Any questions? Take a look here first! .....	29
Alarm and troubleshooting methods .....	30
Technical data .....	32
Customer service .....	33

# Safety instructions

Thank you for purchasing a Haier product.

Before using this appliance, read these instructions carefully. The instructions contain important information to help you get the most out of the appliance and ensure safe and correct installation, use and maintenance.



Prohibited actions or operations



Actions or operations to follow



Important Incorrect operation may result in personal injury, or damage to goods and property.



## Disposal

Help protect the environment and human health. Put the packaging in the appropriate containers for recycling. Help to recycle waste electrical and electronic equipment. Do not dispose of appliances bearing this symbol with household waste. Return the product to your local recycling centre or contact your local council.

## Electrical

### Power supply



Ensure that the electrical information on the nameplate corresponds to the power supply. If this is not the case, contact an electrician.

### Earthing



Use a separate earthed socket for the power supply, easily accessible after installation. The appliance must be earthed.



**UK only:** the appliance power cable is fitted with a 3-pin (earthed) plug that fits into a standard 3-pin (earthed) socket. Never cut or remove the third (earth) pin. Once the appliance is installed, the socket must be accessible.

### Power cord and plug



1. It is prohibited to damage, manipulate, bend, squeeze, twist, pull, tie or place heavy objects on the power cord and plug.



2. The power cord plug should be fully inserted into the socket, remain firmly in contact with the socket, and any dust should be regularly removed. Failure to do so may result in poor insulation and represent a fire hazard! Stop using if the power cord and plug are damaged, or the socket is loose.



3. Do not touch the plug or unplug the appliance with wet hands. If the drying cabinet is not in use or cleaned for long periods, be sure to unplug it.



4. Do not use multi-socket adapters or extension cables.



5. If you need to replace the power cord, have it replaced by a professional or contact our customer service centre.

### In the event of flammable gas leaks



Immediately close the gas leak valve, then open doors and windows.



Do not unplug or plug in the drying cabinet or other electrical appliances.

# Safety instructions

## II Use

### Environment in which it is placed

-  1. The drying cabinet must not be placed in bathrooms, on carpet, outdoors or in cold and damp environments, as this may result in malfunctions, deformations, electric shocks or fire. If the cabinet accidentally gets wet or suffers a leak, it must be ventilated and dried to ensure the safety of electrical components before use.
-  2. Flammable and explosive materials must not be stored near the drying cabinet. Do not use flammable sprays near the drying cabinet when in use.
-  3. Please place the drying cabinet in a well-ventilated location to avoid any other accidents.

### Use

-  1. This appliance may be used by children aged 8 and over and by persons with reduced physical, sensory or intellectual capabilities or without experience and knowledge, if they are under appropriate supervision or if they have been informed of how to use the appliance safely and understand the risks involved. Children must not play with the appliance.
-  2. Keep children under 3 years of age away from the appliance, unless they are supervised at all times.
-  3. To prevent electric shock and other accidents, do not touch or use this drying cabinet with wet hands and feet, or when barefoot.
-  4. Do not use with items containing rubber or similar elastic materials, or waterproof materials such as raincoats and bicycle covers.
-  5. Use of this cabinet with garments containing flammable cleaning agents, dry cleaning solvents, spot removers, acetone, edible oil, petrol, kerosene, alcohol, turpentine, wax and products for removing wax or other substances is prohibited.
-  6. It is recommended not to open the machine door before the end of the drying cabinet programme, since steam or hot air leaks will affect the care process. Discharged steam will condense into water droplets and fall on the floor, while the clothes will be contaminated externally.
-  7. The water used must be pure water, otherwise this will shorten the service life of internal components and contaminate clothing.
-  8. When the aromatherapy bag is not in use, please seal it and place it out of reach of children to avoid any risk of accidental ingestion.
-  9. Do not place heavy objects or containers with liquids, such as vases, water cups, cosmetics, medicines, etc., on the drying cabinet, as this may cause fires, electrocution, or accidents due to falling objects.
-  10. Be careful not to trap your fingers when opening and closing the door, as your fingers will be trapped by the doors on both sides.
-  11. Do not put metal items such as coins or ballpoint pens into the steam outlet to avoid machine noise or other malfunctions.
-  12. To avoid the risk of injury, do not hang from the hangers or sit inside the drying cabinet.
-  13. Do not place pets inside the drying cabinet to avoid injury or burns.
-  14. Do not climb or place items on top of the drying cabinet.
-  15. When handling the drying cabinet, its maximum angle of inclination must not exceed 45°. If tilting, remove the water tank to prevent the water in the tank from overflowing as a result of the cabinet tilting. Before the first use, leave the cabinet upright for 2 hours before turning on the power.

# Safety instructions

## || Other

---

### Cleaning

-  1. Clean the filter and water tank before or after each use.
-  2. Clean the cabinet after each use.
-  3. Do not rinse the casing or the cabinet directly with water. Use a damp cloth or add neutral detergent to wipe, and do not use corrosive or volatile products such as diluent, petrol, alcohol, etc.

### Repair


-  You can not dismantle, repair or modify the drying cabinet yourself.

### Special care relating to children, and other issues

-  1. To prevent hidden dangers of child safety accidents, you must prohibit and prevent children from:
  - Using this product alone;
  - Looking inside the cabinet, entering the cabinet;
  - Touching the drying cabinet control panel;
  - Hanging from the door of the drying cabinet.
-  2. It is strictly prohibited to place babies, pets, etc. in the cabinet, in order to prevent serious accidents resulting in suffocation and death.
-  3. After unpacking the drying cabinet, do not let children play with the unpacked cardboard boxes, plastic bags, foam and other packaging materials.

# Presentation of appearance and components

## Component parts of the drying cabinet (front)

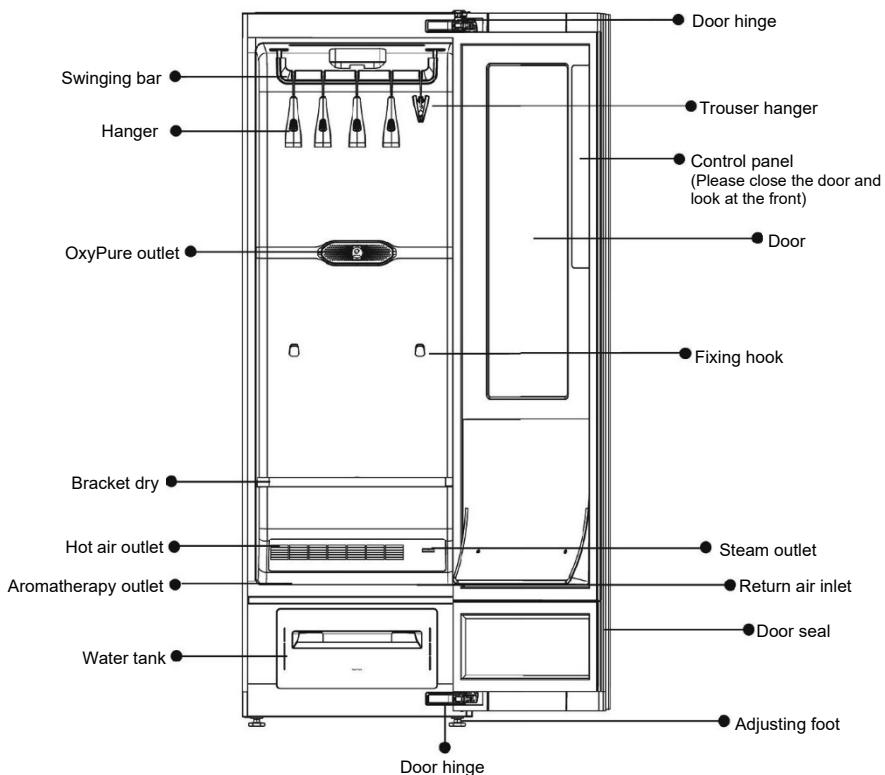

This image is a schematic diagram.


This product contains two class G light sources. Due to product improvements and series expansion, the appearance and functional components of the product you own may not be consistent with this picture.

Please refer to the product itself.

# Presentation of appearance and components

## Component parts of the drying cabinet (rear)

---

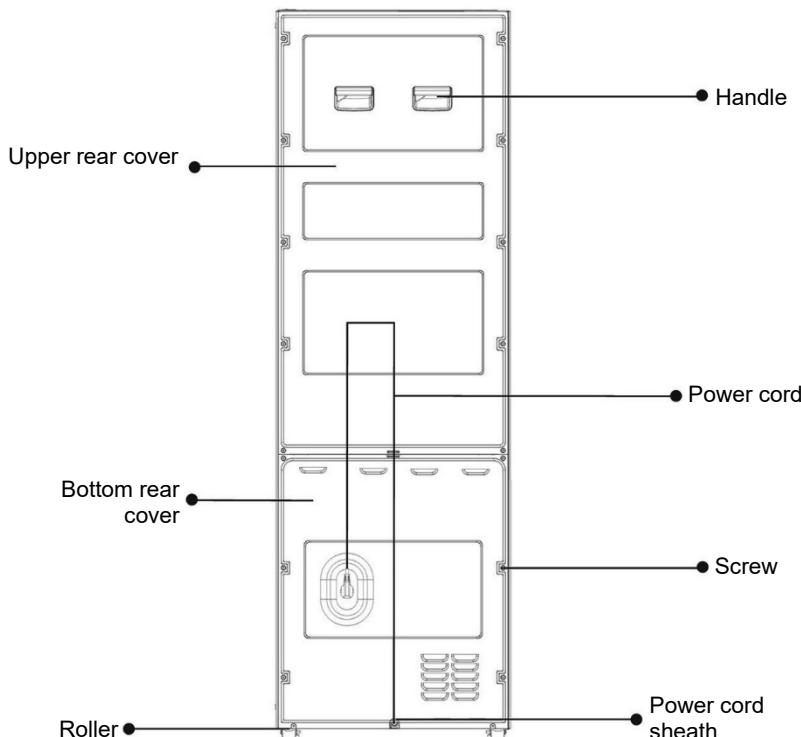

## Accessories

---



Hanger × 4



Trouser hanger × 1



Water collection tray



Instructions



Bracket dry

 


Aromatherapy bag



Noise reduction pads

# Installation settings before use

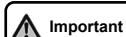

Please install and adjust the drying cabinet according to the instructions in the manual to ensure safe and correct use.

## Issues requiring specific attention

**1**


1. Ensure that the drying cabinet has not been damaged during transportation. You must not power on a damaged drying cabinet. If damaged, please contact the product supplier.
2. The drying cabinet must be installed in a dry, ventilated environment. It must not be installed in damp locations containing steam or dripping water (such as bathrooms or outdoor balconies), and must not be placed in direct sunlight.
3. Do not use stoves, gas appliances, etc. near the drying cabinet to avoid any risks.
4. For optimal operation of the drying machine, the ambient temperature should not be lower than 5°C or higher than 35°C.

**2**

## Adjusting foot

The drying cabinet must be installed horizontally. If the feet are uneven, the cabinet may fall over. Be sure to level the drying cabinet before use.

1. Use a wrench or other tool to loosen the locking nut.
2. Adjust the level of the drying cabinet by adjusting the foot height.
3. After levelling the feet, use a wrench to tighten the locking nut in the locking direction.

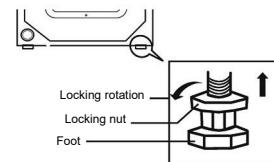


## Attaching the noise reduction pads (optional)

**3**

Take the noise reduction pads, remove the double-sided adhesive protective film from the pads, and stick the pads on the left, right and rear sides of the bottom of the cabinet, as illustrated. The two shorter pads should be stuck on the left and right sides.



If necessary, please contact after-sales personnel for installation. When sticking the noise reduction pads, do not tilt the machine.

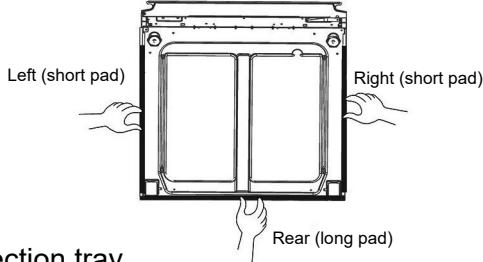


## Installing the water collection tray

**4**

The water collection tray is mainly used to collect condensation that appears on the door seal during machine operation, or drips when opening the door, to prevent it from dripping onto the floor.

Place the water collection tray on the ground during installation, slightly lift the back end, push it inward in the direction shown in the picture, and clamp the water collection tray slot to the foot.

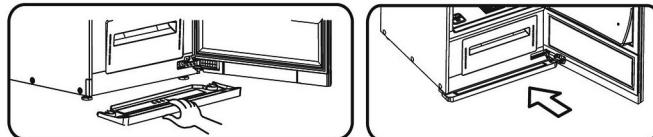

Position of the water collection tray


# Installation settings before use

## Adding an aromatherapy bag (optional)


5

When using the aromatherapy bag, take the return air inlet trim panel on the front and lower side of the cabinet, put the aromatherapy bag into the compartment (area shown in figure 2), and then put the return air inlet trim panel back in its original position. Instructions and precautions for using aromatherapy bags can be found on the outer packaging of the bag.

1

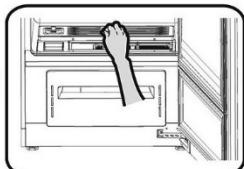

2

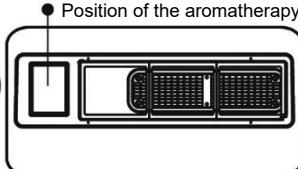

Position of the aromatherapy bag




After use, remove the aromatherapy package. Seal it and place it out of reach of children to prevent them from ingesting it.

## Connecting the power supply

6

Check the following before turning on the power

1. Can the power socket withstand the maximum power of the drying cabinet?
2. The power supply and voltage are compliant with requirements.
3. The power socket must correspond to the plug of the drying cabinet.
4. The socket must be reliably earthed.

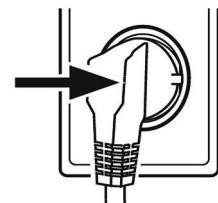


7

## Installing the drying support (optional)

The drying support is mainly used for items such as clothing, accessories and cuddly toys that cannot be hung up.

Method of installing the drying support

1. After placing the shelf flat, turn the side with the arrow upwards and point the arrow towards the cabinet, as shown in the figure on the right.
2. Insert the drying support into the support frames on both sides of the cabinet, from left to right. To remove the drying support, perform these steps in reverse order. When not in use, hang the drying support on the hook at the back of the cabinet.

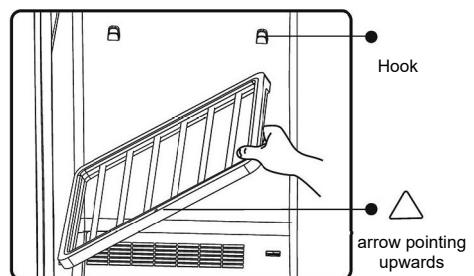

The drying support can only hold clothes or clothing-related accessories. Do not place or store heavy objects on it, in order to avoid damaging the product.

Items placed on the shelf should not exceed the width and length of the shelf to avoid blocking the circulation of air inside the cabinet and affecting the care process. Do not allow children to climb on or play with the shelf, in order to avoid injury.


# Preparation before care

## Checks

- Check that the water collection tray is correctly installed.
- Check that the filter under the return air inlet trim panel is clean and correctly installed.
- Check and confirm that the water tank has been filled with purified water and installed properly before care. Add water up to the MAX line to ensure that there is sufficient water in the tank. Water is required for the Deodorizing programme (Intensive) and the Deluxe Care programme (Mix, Wool, Silk).
- Check if the aromatherapy package is installed properly and confirm that it has sufficient fragrance.
- To prevent any damage to the fabric, read the clothing label before care, check whether steam can be used, whether the garment can be dried, and whether the temperature is in line with the requirements on the label.

## Pre-treatment

- Clean out pockets and remove any items such as coins, sand, keys, etc.
- Fasten ties, do up buttons and fasten zips to prevent items from falling.
- Do not overload the cabinet. Please unfold and shake out the clothes to allow them to hang loose before putting them into the drying cabinet.

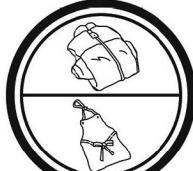

# Preparation before care

## Prohibited clothing and items


1. Flammable clothes stained with substances such as beauty oil, massage oil, edible oil, animal fat, machine oil, dry cleaning solvents, volatile agents, diluents, petrol, resin, etc.
2. Waterproof clothing such as raincoats and bicycle covers.
3. Clothing contaminated with chemical products.
4. Shoes, products with sponges and products manufactured using glue.
5. Electric blankets, large blankets, carpets and heavy clothing such as winter jackets.



## Instructions before use

1. The drying cabinet does not have a washing function. Please wash and dry dirty clothes before using this machine.
2. Creases and odours caused by long-term storage are difficult to remove.
3. Odours in clothing contaminated by lamp black are not easy to eliminate.
4. Clothing with strong odours should be deodorised or treated separately.
5. Clothing creases in fabrics such as cotton and linen may not be completely removed.
6. Please sort your clothes by category, and choose the corresponding programme for different clothes.
7. The OxyPure function is activated by default. During deodorising and sterilisation, it may react with the rubber and plastic parts of the clothing. Please use this function with caution.
8. 84 disinfectant, potassium permanganate, hydrogen peroxide, iodine, alcohol and other commonly used household solutions can cause damage to clothing. Avoid any contamination before the care process.

# Operating steps

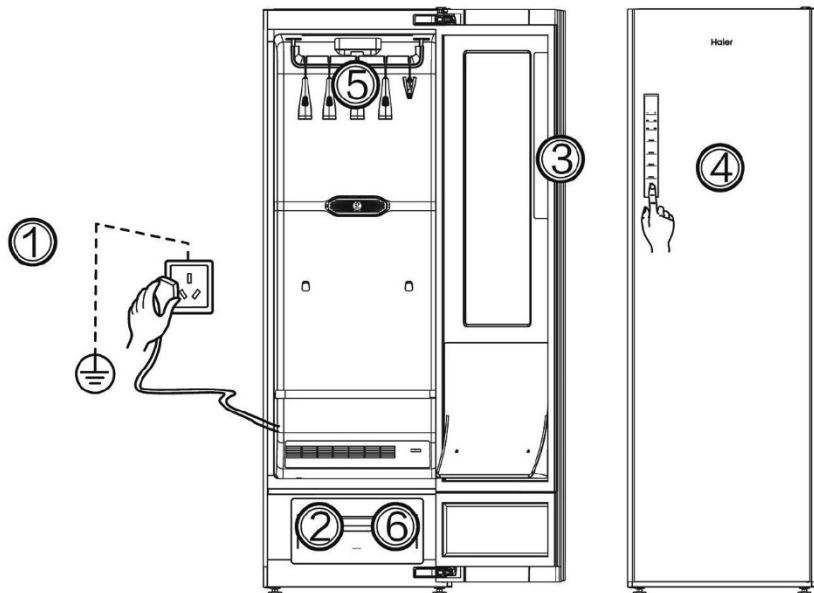

1

Connect the power, press , and power on the appliance in 0.5 seconds.

2

Open the cabinet door, take out the water tank and add purified water to the MAX line, then put it back in place.

3

Hang up the clothes and close the door.

4

Select the programme and start the cabinet.

5

After the care process, open the machine door, remove the clothes and unplug the cabinet.

6

Empty the water tank and put it in place, then close the door.



1. If you wish to use the aromatherapy bag, put it in place before using the drying cabinet.
2. The hangers used in this machine are special hangers, do not use ordinary hangers.


## Operating steps

- ① Be sure to shape the clothes before placing them in the drying cabinet.
- ② Choose different procedures according to the type of clothes.
- ③ Clean the cabinet regularly with a damp towel.
- ④ After using the drying cabinet, empty the water tank and clean it.
- ⑤ Warm fabric feels slightly damper to the touch than at normal atmospheric temperature, spread clothing out to allow it to dry.
- ⑥ When using the aromatherapy function, it is recommended to reduce the number of items of clothing in order to facilitate absorption of the fragrance.
- ⑦ In order to ensure effective treatment, do not open the door during the programme.


# Introduction to the care programmes and functions

This product has a touch screen: care programmes can be selected and adjusted by touching the buttons.

## Display screen

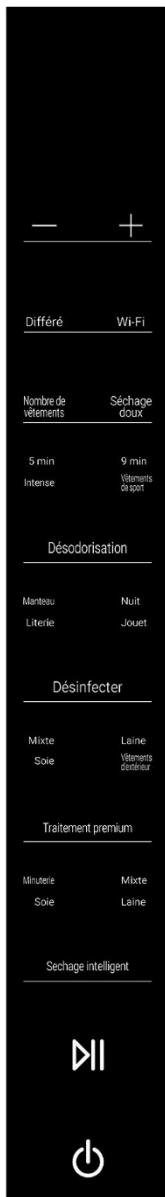

Shutdown status

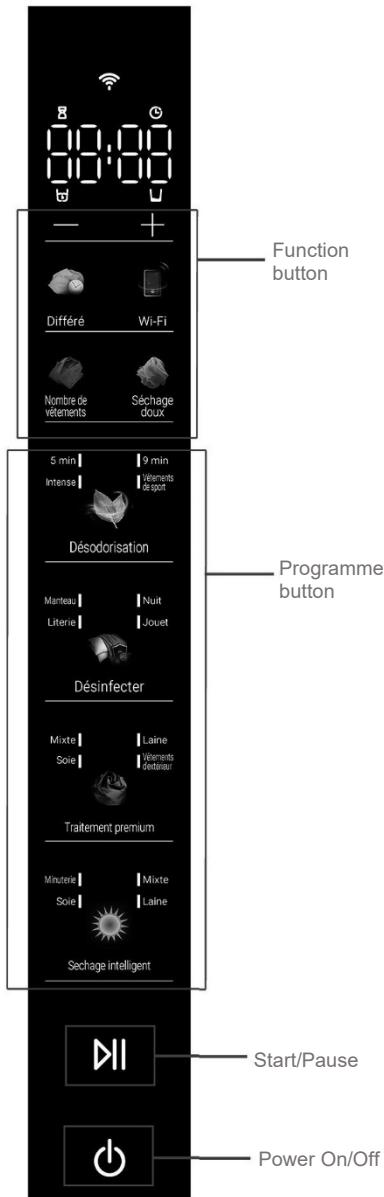

Full display status

# Introduction to the care programmes and functions

## 1. Description of icons displayed on the interface

	Press  for 0.5 seconds to turn on/off the drying cabinet.
	When the machine is turned on, press  for 0.5 seconds to start/pause the drying cabinet programme.
	This icon is displayed when the drying cabinet is connected to the network. Press  for 5 seconds when stopped, this icon will light up and flash, and the Remote function of the drying cabinet will be activated.
	Press this button briefly to activate/deactivate remote control of the appliance via the hOn app. NOTE: to start the pairing procedure, follow the instructions in the app. For more information, see chapter 5 on the hOn app.

- Press  for 0.5 seconds to power on, select the programme after the display lights up.
- If the machine is not used after starting up, it will automatically turn off after 2 minutes.
- Press the text buttons for “Deodorizing”, “Sanitize”, “Deluxe Care” and “Smart Dry” when selecting the care scenarios.

## 2. Selection of care programmes


### ■ Selection of treatment scenarios

Users can select the appropriate programme based on the needs for different scenarios, ensuring that various care requirements are suitably met.

The main display interface has four main sections, each with four programmes to choose from. Once the programme starts, if you need to change the programme, please stop and restart, then select the programme you need.

Users can extend or shorten the duration of certain programmes by pressing the "+" and "-" buttons at the top of the display interface.

### ■ Deodorizing

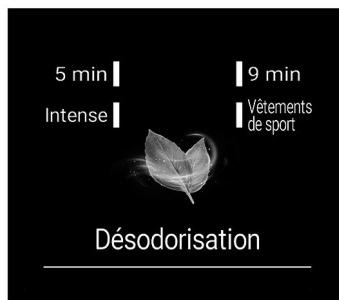

Easy deodorizing section, based on the user's quick deodorizing needs, with four programmes to choose from: 5 min, 9 min, Intensive, Sports Wear. Users can press the "Easy deodorizing" button to select the programme corresponding to their needs.

Notice to users

1. After pressing , the indicator light will light up, and the user can select the Easy deodorizing programme. After the corresponding indicator light flashes, click on Start/Pause.
2. It is normal for the machine to make a "gurgling" sound during operation.
3. After operating the machine, there may be a small amount of water droplets on the door seal, this is completely normal.

Issues requiring specific attention

Do not open the door when the machine is running to avoid affecting the removal of the odour from the clothes. When the OxyPure function is activated, a small amount of OxyPure may escape during the Intensive programme and the 9 minute programme, accompanied by a faint smell of OxyPure.

# Introduction to the care programmes and functions

## ■ Sanitize



The Sanitize sections are mainly used for sanitising coats, nightwear, bedding, toys and other items requiring sanitisation.

Four programmes are available: Coat, Pajamas, Bedding, Toy. Users can select the required programme by pressing the "Sanitize" button.

- Notice to users

  - ▶
    1. Ensure that sheets are firmly secured during sanitisation so that they do not fall down.
    2. Toys, clothes, etc. that are difficult to secure should be placed on the drying support.
  
  - Issues requiring specific attention

    - ▶
      1. Do not open the door when the machine is running to avoid affecting the sanitisation of the clothes. When the OxyPure function is activated, a small amount of OxyPure may escape, accompanied by a faint smell of OxyPure.
      2. When placing long garments such as coats and dresses, hang the drying support in the back of the cabinet or remove it so as not to prevent the garments from being fully

# Introduction to the care programmes and functions

## ■ Deluxe Care



Deluxe Care allows the treatment and removal of creases for corresponding garments via one of four programmes: Mix, Wool, Silk and Outdoor.

Notice to users



Choose the "Mix" program for clothing made of various materials or materials that cannot be distinguished.


Issues requiring specific attention



Do not open the door when the machine is running to avoid affecting the treatment of garments and the removal of creases, and to ensure no condensation drips onto the floor.

# Introduction to the care programmes and functions

## ■ Smart Dry

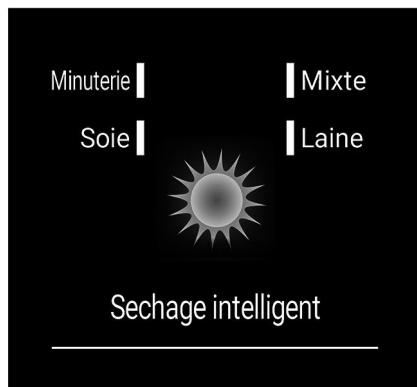

The Smart Dry programme is mainly used to dry clothes that have been spin-dried. Users can choose from four programmes, depending on the type of garment: Timer, Mix, Silk and Wool.

Notice to users



1. Clothes that have just been washed must be spin dried before they can be put into the cabinet. The drying time of the clothes will be automatically adjusted according to the type, quantity, degree of drying, and ambient temperature of the clothes.
2. Thicker garments may not dry evenly. It is recommended to flip the clothes over and then dry them again.

Issues requiring specific attention




1. Do not open the door when the machine is running to avoid affecting the treatment and drying of garments, and to ensure no condensation drips onto the floor.
2. Do not place dripping clothes in the cabinet.

# Introduction to the care programmes and functions
 
## 3. Additional function

### ■ Delay function

After pressing the Delay button, the Delay function is activated and the delay time is displayed. The user can continue to press the “+” and “-” buttons to set the time. After pressing the Delay button again, the Delay function is deactivated.

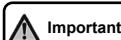

1. The delay time set in the programme cannot exceed 24 hours.
2. The delay time is the time at which the programme ends. The delay time must therefore be greater than the programme running time and cannot be changed after the programme has started.  
Due to the high moisture content of the clothes, the drying time may increase automatically. When the delay end time arrives, the programme may not have finished. This is completely normal.
3. If you change the main programme before starting, you must reset the Delay function.

### ■ Selecting the number of garments

After selecting the required programme, you can select the number of garments. On the upper part of the display interface, press the “Cloth Qty” button to adjust the number of garments. After selecting the programme and the number of garments, the treatment time of the corresponding programme will be adjusted according to the number of garments.




1. When the Cloth Qty icon is lit, it means that the current programme can adjust the number of garments. When it is not lit, it means that the current programme does not have this function.
2. When pressing the Cloth Qty icon, the screen displays “3” by default, meaning that there are currently 3 garments. Adjust the number using the +/- buttons on the screen. The number of garments can vary from 1 to 5.

# Introduction to the care programmes and functions

## ■ Gentle Dry


With Deluxe Care and Smart Dry, Gentle Dry can be activated. Once Gentle Dry is turned on, the treatment temperature is more gentle, which can better protect clothing with plant-based dyes.

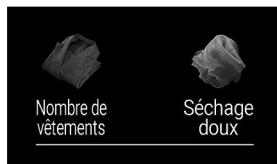

1. Deodorizing and Sanitize do not have this function.
2. When the plant-based dye function is activated, the treatment and drying time may increase due to the lower temperature.

## 4. Starting a programme

After setting the programmes and the delayed end, press  at the bottom of the display interface to start the treatment process.

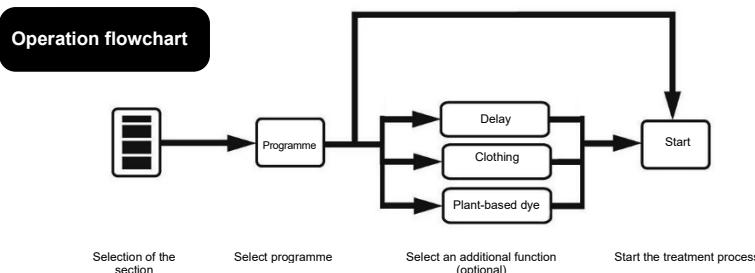

# Introduction to the care programmes and functions

## ■ Function key setting table

No.	Programme name	Additional function			
		Delay	Clothing	Gentle Dry	Remote
1	Deodorizing	5 min	✓	x	x
2		9 min	✓	x	x
3		Intensive	✓	✓	x
4		Sports Wear	✓	✓	x
5	Sanitize	Coat	✓	x	x
6		Pajamas	✓	x	x
7		Bedding	✓	x	x
8		Toy	✓	x	x
9	Deluxe Care	Mix	✓	✓	✓
10		Wool	✓	✓	✓
11		Silk	✓	✓	✓
12		Outdoor	✓	✓	✓
13	Smart Dry	Timer	✓	x	✓
14		Mix	✓	✓	✓
15		Silk	✓	✓	✓
16		Wool	✓	✓	✓

### ■ Warning

1. Users can extend or shorten the programme time by pressing the “+” and “-” buttons depending on the condition of the clothes (the 5 min and 9 min programmes cannot be adjusted using these buttons).
2. The “✓” in the additional function section means that it can be selected, “x” means that it cannot be selected, while “/” indicates that there is no connection.

## 5. Auxiliary functions

### ■ Beep function

- After the drying cabinet is powered on, if it has not been started, press the “Deodorizing” and “” buttons simultaneously to activate or deactivate the audible signal on the display panel.
- The message “ on” indicates that the beep is activated, while the message “ off” indicates that the beep is deactivated.

### ■ hOn app

#### 1. General information

This device is equipped with Wi-Fi technology for remote control via the hOn app.



Observe the safety measures indicated in this manual, even when using the appliance via the app. Compliance with these instructions is essential for safe use.

#### 2. Requirements

- Wi-Fi network: A router compatible with the 802.11 b/g/n standard and the 2.4 GHz band is required. Networks operating at 5 GHz and public networks are not supported. The network name (SSID) must be between 1 and 32 characters long, and the password between 8 and 64 characters. The encryption options are open, WPA-PSK and WPA2-PSK.
- Compatible devices: The app is available for Android, iOS and Huawei devices, on both tablets and smartphones.
- Placement: Install the appliance in a location with a strong Wi-Fi signal.

#### Wi-Fi technical specifications:

- Frequency: 2400 MHz - 2483.5 MHz
- Maximum power: 20 dBm
- Standard: IEEE802.11 b/g/n and BLE V4.2

#### 3. Downloading and installing the hOn app

Download the app by scanning the QR code below, or visit [go.haier-europe.com/download-app](http://go.haier-europe.com/download-app).



#### Registration

It is only necessary to create a profile (registration) when using the app for the first time, or if the account has been deleted/deactivated. For subsequent use, simply log in with your e-mail address and password. See the app's DEMO mode to find out about Wi-Fi features.

# Introduction to the care programmes and functions

## 4. Pairing the appliance



Warning

The home network must be set to 2.4 GHz; networks operating on 5 GHz are not supported. Ensure that your smartphone is connected to the same 2.4 GHz Wi-Fi network as the one you want to use to configure the appliance.

1. Open the hOn app and create a new profile (or log in if you already have one).
2. Press "Add an appliance", and follow the instructions on your smartphone screen to complete the configuration.

## 5. Activating the remote control

1. Check that the router is switched on and connected to the internet.
2. Load the clothing and close the door.
3. Switch on the appliance.
4. Briefly press the Remote control button .
5. The remote control can also be activated during the cycle by briefly pressing the Remote control button .



Warning

### Expiry of the remote control

You can send a command from the app up to 24 hours after activating the remote control.

## 6. Deactivating the remote control

1. During a cycle, you can deactivate the remote control by briefly pressing the button ; the cycle will continue. You can view the status of the cycle in the app, but you will not be able to send commands (stop/pause, for example).
2. To resume remote control via the app, ensure that the door is closed, then briefly press the Remote control button again: .

## 7. End of cycle with remote control

1. At the end of the cycle, remote control is deactivated.
2. After 2 minutes, the appliance switches off automatically.

## 8. Deactivating the Wi-Fi module and erasing network identification details

To delete the information saved on the Wi-Fi network and switch off the Wi-Fi module:

1. Switch on the appliance.
2. Without starting a cycle, press the Remote control button  for 5 seconds, until the message "rEST" appears.
3. Press and hold the "Delayed end" button for another 5 seconds until the message "donE" appears.
4. The configuration information will be deleted. Select a programme, or switch off the appliance to exit.
5. To reconfigure the device, remove it from the hOn app and start a new pairing procedure.



Warning

Only use this procedure if you intend to sell the appliance.

# Treatment programme instructions

Programme functions	Programme	Applicable section	Treatment instructions
Deodorising	5 min	Fresh care for delicate clothes with a mild odour.	Avoid placing too many garments in the cabinet at once.
	9 min	Fresh care for thin clothes suitable for moderate odour, with OxyPure care for better deodorisation effect.	Depending on their size and thickness, place between 1 and 3 garments in the cabinet for optimal results. The quantity can be adjusted using the "+" and "-" buttons.
	Intensive	Intense fresh care suitable for heavy odours or thick garments, with OxyPure treatment for optimal deodorisation.	
	Sports Wear	Suitable in particular for the care of fur clothing.	Excessive smoke and musty odours may be difficult to remove. Please clean them in advance before treatment in the cabinet.
Sanitize	Coat	Treatment once a day. Once back at home, the coat and clothing should be sanitised before wearing again.	Avoid placing too many garments in the cabinet at once.
	Pajamas	Suitable for deep sanitisation and sterilisation before and after wearing personal clothing such as nightwear and underwear.	Depending on their size and thickness, place between 1 and 3 garments in the cabinet for optimal results. The quantity can be adjusted using the "+" and "-" buttons.
	Bedding	Suitable for sterilising and thoroughly sanitising sheets such as bedspreads and duvet covers brought back from daily or business trips.	
	Toy	Suitable for sterilising and sanitising cloth and cuddly toys. It is recommended to place them on the drying support for treatment.	For improved sanitisation and sterilisation, you can choose the OxyPure function for best results.
Deluxe Care	Mix	Suitable for treating cotton, chemical fibre and mixed-fibre clothing.	This function is mainly used to improve the texture of clothing and relieve wrinkles.
	Wool	Suitable for the care of wool sweaters and overcoats.	Avoid placing too many garments in the cabinet at once. Depending on their size and thickness, ideally between 1 and 3 garments should be placed in the cabinet.
	Silk	Suitable for the care of silk shirts, skirts and trousers.	For garments requiring delicate or special treatment, click on the "plant-based dye" function, for materials such as camel hair, viscose, scented cloud yarn, special fur, etc.
	Outdoor	Suitable for treating fur.	
Smart Dry	Timer	You can set a fixed time to dry clothes according to your needs, with the programme stopping automatically after the set time.	Washed clothes must be spin dried before being placed in the cabinet.
	Mix	Suitable for drying cotton blended shirts and coats.	Thick garments are difficult to dry. It is recommended to place fewer garments in the cabinet, and adjust the quantity using the buttons.
	Silk	Suitable for drying silk shirts, skirts and trousers.	
	Wool	Suitable for drying wool garments. Place clothing that can easily lose its shape on the drying support.	If the clothing is still not dry once the programme is complete, please repeat the programme.



1. The drying time of clothing will be automatically adjusted based on the following factors:
  - a. Type of clothing
  - b. Number of garments
  - c. Degree of drying
  - d. Ambient temperature
2. Before drying clothing, please carefully check the instructions on the clothing label. Do not put clothing that cannot be dried into the drying cabinet to dry.
3. Wool fabrics are relatively soft and cannot be dried completely.
4. Valuable clothing such as fur should not be dried frequently.
5. Clothing with strong odours should be treated separately.

# Daily maintenance and upkeep




**Important** Please unplug the appliance from the socket before any cleaning or maintenance operations.

## Cleaning the drying cabinet

Clean the dust and stains on the surface of the machine body and door with a damp cloth, then dry them with a dry cloth.  
Do not use directly after cleaning, wait until the surface of the machine is dry before using.



**Important** Do not use organic solvents or corrosive products for cleaning to avoid damaging the machine.

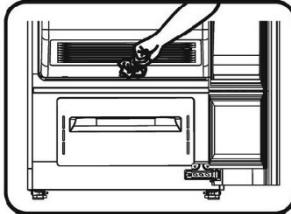


## Cleaning the water tank


During operation, steam condensate will enter the water tank. Once the programme has finished, the water tank should be emptied promptly.

1. Open the door of the drying cabinet, grasp the handle of the water tank and pull it out.
2. Open the water tank cover, pour out the water in the tank, replace the cover and put the water tank back into the cabinet.

1

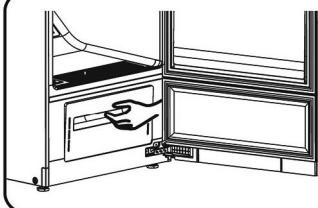

2

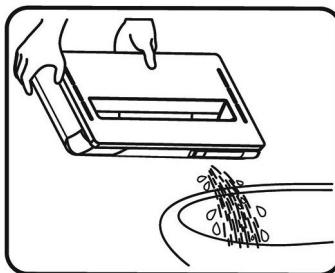

**Important** Condensed water must not be used for drinking or food preparation.

# Daily maintenance and upkeep

## Descaling

In order to ensure a good steaming effect during the treatment process, descaling must be carried out once every 300 cycles or after one year of use of the machine.

1. In standby mode, simultaneously press the "Delay" + "Cloth Qty" buttons for 5 seconds. The message "CL ER" flashes on the screen and the machine switches to descaling mode.
2. Open the door of the drying cabinet, remove the water tank and pour 500 ml to 2000 ml of citric acid into the water tank (configured according to the instructions for citric acid).
3. Put the water tank back in the machine, close the door and start the machine. The message "CL ER" on the screen is always lit. About one hour later, the message "CL ER" flashes on the screen and the indicator light "W" comes on.
4. Open the door, remove the water tank, pour out the wastewater, add fresh water again, put the water tank back in the machine, close the door and start the machine. The message "CL ER" on the screen is always lit, while the indicator light "W" is unlit. After 5 minutes, the message "CL ER" flashes on the screen and the indicator light "W" comes on again.
5. Open the door again, remove the water tank, pour out the wastewater, put the water tank back in the machine, turn it off, and the machine enters the normal working state. The entire descaling process is complete.


# Daily maintenance and upkeep

## Cleaning the filter


In order to ensure the ventilation effect of the treatment process, please clean the filter after each use.

1. Open the door of the drying cabinet.
2. Remove the return air inlet trim panel.
3. Remove the filter from the machine.
4. Use a wet towel or a soft brush to clean the fluff from it.

1

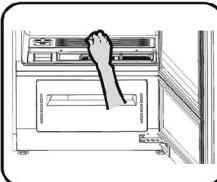


2

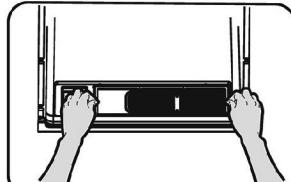


Important After cleaning, put the filter back in place.

3

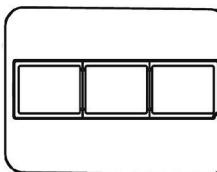

4

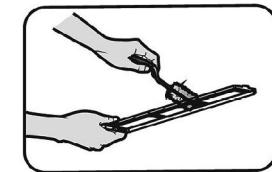


## Replacing the aromatherapy bag


Extended use of aromatherapy bags will cause the scent to dissipate. To ensure the freshness of clothing, please replace the aromatherapy bag in good time.

1. Open the door of the drying cabinet.
2. Remove the return air inlet trim panel.
3. Remove the aromatherapy bag from the filter support.
4. Put in place the new aromatherapy bag and reinstall the return air inlet trim panel.

1

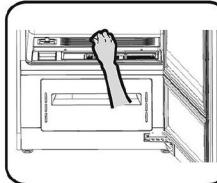

2

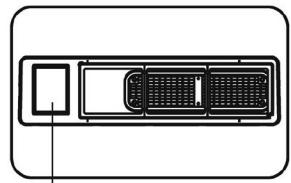


Position of the aromatherapy bag




Important The compartment cover can be closed when not in use.

Open position

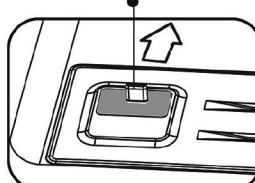

Closed position

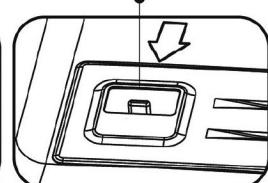

# Any questions? Take a look here first!

Problem	The machine cannot be started.
Causes	<ul style="list-style-type: none"> <li>a. The appliance is not plugged in.</li> <li>b. There is no power supply.</li> <li>c. You have not pressed the power button.</li> </ul>
Solutions	<ul style="list-style-type: none"> <li>a. Check that the appliance is plugged in.</li> <li>b. Check the power supply.</li> <li>c. Ensure that you have pressed the power button.</li> </ul>
Problem	The machine does not start.
Causes	<ul style="list-style-type: none"> <li>a. The water tank is not filled with water and the water shortage icon is flashing.</li> <li>b. The door of the drying cabinet is not closed properly.</li> <li>c. You have not pressed the Start button.</li> </ul>
Solutions	<ul style="list-style-type: none"> <li>a. Add water to the water tank to the max line.</li> <li>b. Close the door of the drying cabinet.</li> <li>c. Press the Start button.</li> </ul>
Problem	The drying time is too long.
Causes	<ul style="list-style-type: none"> <li>a. Incorrect programme settings.</li> <li>b. The return air outlet filter is blocked.</li> <li>c. The clothes are too wet.</li> <li>d. There are too many garments in the drying cabinet.</li> </ul>
Solutions	<ul style="list-style-type: none"> <li>a. Ensure that the programme is set correctly.</li> <li>b. Clean the return air outlet filter.</li> <li>c. Clothing should be spin dried before placing in the cabinet.</li> <li>d. Reduce the number of garments in the cabinet.</li> </ul> <p>Other problems should be reported for repair.</p>
Problem	The remaining time of the display screen stops or skips.
Causes	<ul style="list-style-type: none"> <li>The remaining time is adjusted according to the following factors.</li> <li>a. Temperature of clothing.</li> <li>b. Types of clothing.</li> <li>c. Number of garments.</li> <li>d. Ambient temperature.</li> </ul>
Solutions	For automatic drying programmes, it is normal for the drying time to stop for a while or skip.
Problem	The machine displays "End"
Causes	The programme is complete.
Solutions	
Problem	Clothing emits an odour.
Causes	<ul style="list-style-type: none"> <li>a. The machine has been used for too long.</li> <li>b. The water in the tank has a peculiar smell.</li> <li>c. The return air inlet filter is blocked.</li> <li>d. Moisture inside the cabinet.</li> </ul>
Solutions	<ul style="list-style-type: none"> <li>a. Clean the drying cabinet.</li> <li>b. Regularly clean the water tank and use purified water.</li> <li>c. Clean the return air outlet filter.</li> <li>d. Run the drying programme to dry the cabinet.</li> </ul> <p>Other problems should be reported for repair.</p>

# Alarm and troubleshooting methods

Please perform troubleshooting based on the following code, and using the method specified in the table.

Problem	Solutions
Advice content	
“  ” flashes	Water shortage, remove the water tank and add water
“  ” flashes	Quick drainage, remove the water tank to drain it
SHHE	Put in place the water tank, or remove it and put it back in
The programme cannot start	The door is not closed, close it and start

If the following code appears, please restart. If it appears again, please contact the after-sales department.

Problem	Alarm Information
Advice content	
E1	Water manifold drainage alarm
E4	Steam generator water inlet alarm
F2	Steam generator drainage alarm
F31	Abnormal outlet temperature of the press
F32	Abnormal outlet temperature of the condenser
F4	Abnormal steam heating tube
F7	Fan motor anomaly
F9	Temperature anomaly at the air duct outlet
F10	Abnormal temperature at the air inlet
F11	Abnormal humidity at the air inlet
FC0	Bus communication anomaly


# Alarm and troubleshooting methods

Problem	Alarm Information
Advice content	
FC2	Anomaly in communication between the display board and the power supply board
FCP	Anomaly in communication between the display board and the processing board
FCF	Anomaly in communication between the display board and the fan drive board
FCt	Anomaly in communication between the display board and the touchscreen
FCD	Compressor malfunction
FH	Wi-Fi connection anomaly and IoT configuration failed
Fd	PTC heating element anomaly

 **Important** If other codes appear on the digital tube, please turn off the drying cabinet and contact the maintenance personnel.

# Technical data

Product size and installation conditions (diagram)

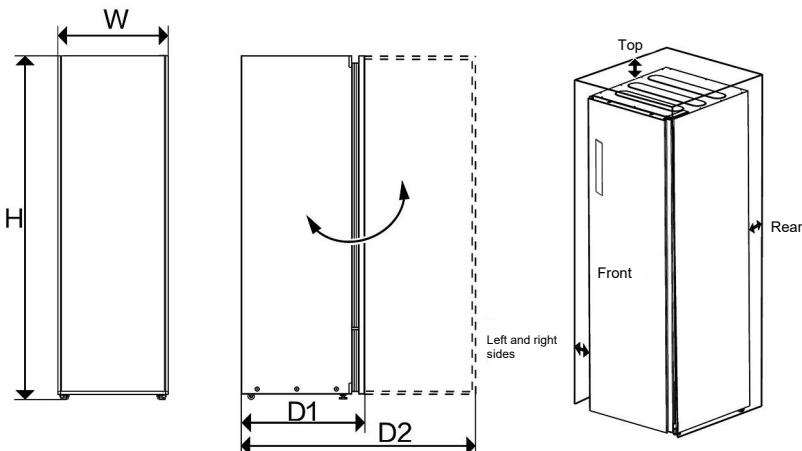

Model	CCE L02LU1
Name	Drying cabinet
Rated voltage/frequency	220 V - 240 V/50 Hz
Maximum power	1900 W
Rated capacity	5 items
Colour	Ceylon blue
Net weight	104 kg
Total size (width/depth/height) in mm	600 x 671 x 1860
Recommended installation space (width/depth/height) in mm	620 x 711 x 1880

Product dimensions	W	600 mm
	D1	671 mm
	D2	1240 mm
	H	1860 mm
Installation requirements	Top	More than 20 mm
	Left	More than 10 mm
	Right	More than 10 mm
	Rear	More than 40 mm

## Comments

The figures in this manual are diagrams. However, due to the improvement and expansion of product serialisation, the product appearance, colour and accessories you have may be inconsistent with the figures in this manual. Please refer to the product itself.

## Customer service

We recommend our Haier customer service, and the use of original spare parts. Domestic washing machine parts will last a minimum of 10 years.

If you have any problems with your appliance, start by consulting the **TROUBLESHOOTING** section. If you cannot find the solution to your problem there:

- ▶ contact your local dealer;
  - ▶ visit the Service & Support section at [www.haier-europe.com](http://www.haier-europe.com), where you will find phone numbers and FAQs, and where you can submit a service request.

For specific product information, please visit the official Haier website at [https://www.haier-europe.com/en\\_GB/technical-assistance/](https://www.haier-europe.com/en_GB/technical-assistance/), and search for your model. Click on the product to access the detailed page, then click on "documents" to find the user manual and download it. You can also find product information on this page.

To contact our service, please make sure you have the following details.

This information can be found on the nameplate.

Model Serial number

Please also refer to the Warranty card supplied with the product in the event of a warranty claim.

For general enquiries, please find below our addresses in Europe:

Haier European addresses			
Country*	Postal address	Country*	Postal address
Italy	Haier Europe Trading SRL Via De Cristoforis, 12 21100 Varese ITALY	France	Haier France SAS 3-5 rue des Graviers 92200 Neuilly-sur-Seine FRANCE
Spain Portugal	Haier Iberia SL Pg. Garcia Faria, 49-51 08019 Barcelona SPAIN	Belgium-FR Belgium-NL Netherlands Luxembourg	Haier Benelux SA Anderlecht Route de Lennik 451 BELGIUM
Germany Austria	Haier Deutschland GmbH Hewlett-Packard-Str. 4 D-61352 Bad Homburg GERMANY	Poland Czech Republic Hungary Greece Romania Russia	Haier Poland Sp. zo.o. Al. Jerozolimskie 181B 02-222 Warszawa POLAND
United Kingdom	Haier Appliances UK Co.Ltd. One Crown Square Church Street East Woking, Surrey, GU21 6HR UK		

\*For more information, visit [www.haier-europe.com](http://www.haier-europe.com).

Information on models is available in the product database at <https://eprel.ec.europa.eu/>, searching for the identifier of the model indicated in the Model field of the label affixed to the product; the link to the model in the product database can be found below for each model identifier:



CCFL03L111

# Haier



Collection points can be found at [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr).  
If possible, repair or donate your appliance!

