


Haier

I-MASTER
TOASTER
SERIES 5

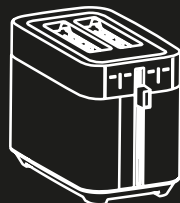

<https://go.he.services/haier-um>

INSTRUCTIONS FOR SAFE USE

This appliance is intended for domestic and indoor use only as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

WARNING To eliminate suffocation hazard for young children, discard all packaging materials immediately after removing the product.

This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the appliance and its cord out of reach of children less than 8 years.

If the power cord is damaged stop using the appliance

immediately. To avoid a safety hazard, an authorised Haier service engineer must replace the power cord.

Use only attachments, consumables or spares recommended or supplied by Haier.

Only use the appliance in accordance with the power specification on the rating plate.

WARNING Risk of scalding! The outer surface may get hot when the appliance is in use and after operation. The heating element is subject to residual heat after use. Do not touch hot metal surfaces in particularly of the top surface and toasting slots.

The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

Do not operate the appliance by means of an external timer or separate remote-control system. Use on worktop only. Do not place the toaster near the edge of a worktop.

Do not pull or carry the appliance by the power cord. Always unplug

the appliance from the socket by pulling the plug instead of the cord. Do not place the power cord over sharp edges or near hot surfaces. Do not use an extension cord.

Never immerse the appliance or main unit in water or other liquid.

WARNING Risk of fire! Do not cover the appliance or crumb tray with combustible material while in use.

WARNING Risk of injury! A misuse of the appliance can potentially lead to injury.

CAUTION Take care when inserting or removing the bread during use.

Pay attention to clean surfaces which are intended to come into contact with food! Please note the information on cleaning in the instructions.

The appliance is intended to toast food with recommended size and quantity in the instructions. It must not be used for other than intended use. Do not insert food that is too big for the toasting slots or too little for the rack to carry. Do not insert the food which may drip during the toasting process.

Do not insert forks or other utensils into the toaster to remove bread. As well as damaging the toaster, there is a high risk of electric shock.

Prevent food touch with heating elements. Excessive or oversized food loads, paper, cardboard, plastic or metal foil packages must not be inserted which may cause risk of fire.

Do not operate the toaster on an inclined surface and move it when working.

Do not operate the toaster without crumb tray equipped.

Do not leave the toaster unattended while in use.

Regularly clean the crumb tray, otherwise it may smoke or burn. Do not put any objects (as a dish, cloth, or lid) on the appliance to allow proper cool down.

Unplug from the socket after use and before cleaning the appliance or any maintenance task.

Allow the appliance to cool down before removing any parts and before cleaning.

Do not continue to use your appliance if it appears faulty.

 
Haier Service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Haier service engineer.



For indoor use only.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP SRL
via Privata Eden Fumagalli snc
20861 Brugherio (MB) - ITALY

EU 2023/826	
Power Consumption Off Mode	0.4W
Power Consumption StandBy Mode	N.A.
Power Consumption StandBy Mode with info display	N.A.
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	1min