

Haier

User Manual

Refrigerator-Freezer

HCW99F18DHMB(UK)



<u>4 Safety information</u>	•	<u>Before first use</u>	5
		<u>Installation</u>	5
<u>8 Intended use</u>	•	<u>Daily use</u>	6
<u>9 Product description</u>	•		
<u>10 Control panel</u>	•		
<u>11 Use</u>	•	<u>Adjust the temperature for fridge</u>	13
		<u>Adjust the temperature for freezer</u>	14
		<u>Super-Cool function</u>	15
		<u>Super-Frz function</u>	15
		<u>ECO function</u>	16
		<u>Holiday mode</u>	17
		<u>Ice maker function</u>	17
		<u>Fast Ice maker function</u>	19
		<u>Wi-Fi function</u>	20
		<u>Using the water dispenser</u>	21
		<u>Magic Zone function</u>	21
<u>27 Equipment</u>	•	<u>Inject water</u>	25
<u>29 Energy saving tips</u>	•	<u>Ice Maker</u>	26
<u>30 Care and cleaning</u>	•		
<u>33 Troubleshooting</u>	•		
<u>39 Installation</u>	•		
<u>43 Technical data</u>	•		
<u>45 Customer service</u>	•		

Thank you for purchasing a Haier Product.

Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance.

Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass this manual so that the new owner can become familiar with the appliance and safety warnings.

Accessories

Check the accessories and literature in accordance with this list:



Energy lable



Warranty card



User manual



 
Warranty certificate



Quick Guide



Spacer×3



Warning card



wrench



WARNING – Important Safety information



NOTICE-General information and tips



Environmental information



Disposal

Help protect the environment and human health. Put the packaging in applicable containers to recycle it. Help to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with this symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.



WARNING: Risk of fire/flammable material

The symbol indicates there is a risk of fire since flammable materials are used. Take care to avoid causing a fire by igniting flammable material.



WARNING!

Risk of injury or suffocation!

Refrigerants and gases must be disposed of professionally. Ensure that the tubing of the refrigerant circuit is not damaged before being properly disposed of. Disconnect the appliance from the mains supply. Cut off the mains cable and dispose of it. Remove the trays and drawers as well as the door catch and seals, to prevent children and pets to get closed in the appliance.

Before switching on the appliance for the first time read the following safety hints!



WARNING!

Before first use

- ▶ Make sure there is no transport damage.
- ▶ Handle the appliance always with at least two persons because it is heavy.

Installation

- ▶ The appliance should be placed in a well-ventilated place. Ensure a space of at least 10 cm above and around the appliance.
- ▶ Never place the appliance in a damp area or location where it might be splashed with water. Clean and dry water splashes and stains with a soft clean cloth.
- ▶ Do not install the appliance in direct sunlight or in the near of heat sources (e.g. stoves, heaters).
- ▶ Install and level the appliance in an area suitable for its size and use.
- ▶ Keep ventilation openings in the appliance or in the in-built structure clear of obstruction.
- ▶ Make sure that the electrical information on the rating plate agrees with the power supply. If it does not, contact an electrician.
- ▶ The appliance is operated by a 220-240 VAC/50 Hz power supply. Abnormal voltage fluctuation may cause the appliance to fail to start, or damage to the temperature control or compressor, or there may be an abnormal noise when operating. In such case, an automatic regulator shall be mounted.
- ▶ Do not use multi-plug adapters and extension cables.
- ▶ Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- ▶ Ensure that the power cable is not trapped by the refrigerator. Do not step on the power cable.
- ▶ Use a separate earthed socket for the power supply which is easy accessible. The appliance must be earthed.
Only for UK: The appliance's power cable is fitted with 3-cord (grounding) plug that fits a standard 3-cord (grounded) socket. Never cut off or dismount the third pin (grounding). After the appliance is installed, the plug should be accessible.
- ▶ Do not damage the refrigerant circuit.



WARNING!

Daily use

- ▶ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ▶ Children aged from 3 to 8 years are allowed to load and unload, but not allowed to clean or install the refrigerating appliances.
- ▶ Keep away children under 3 years of age from the appliance unless they are constantly supervised.
- ▶ Children shall not play with the appliance.
- ▶ If cool gas or other inflammable gas is leaking in the vicinity of the appliance, turn off the valve of the leaking gas, open the doors and windows and do not unplug a plug in the power cable of the refrigerator or any other appliance.
- ▶ Notice that the appliance is set for operation at a specific ambient range between 10 and 43°C. The appliance may not work properly if it is left for a long period at a temperature above or below the indicated range.
- ▶ Do not place unstable articles (heavy objects, containers filled with water) on top of the refrigerator, to avoid personal injury caused by falling or electric shock caused by contact with water.
- ▶ Do not pull on the door shelves. The door may be pulled slant, the bottle rack, may be pulled away, or the appliance may topple.
- ▶ Open and close the doors only with the handles. The gap between the doors and between the doors and the cabinet is very narrow. Do not extend your hands in these areas to avoid pinching your fingers. Open or close the refrigerator doors only when there are no children standing within the range of door movement.
- ▶ Do not store or use inflammable, explosive or corrosive materials in the appliance or in the vicinity.
- ▶ Do not store medicines, bacteria or chemical agents in the appliance. This appliance is a household appliance. It is not recommended to store materials that require strict temperatures.
- ▶ Never store liquids in bottles or cans (besides high percentage spirits) especially carbonated beverages in the freezer, as these will burst during freezing.
- ▶ Check the condition of food if a warming in the freezer has taken place.
- ▶ Do not set unnecessarily low temperature in the refrigerator compartment. Minimum temperatures may occur at high settings. Attention: Bottles can burst
- ▶ Do not touch frozen goods with wet hands (wear gloves). Especially do not eat ice lollies immediately after removal from the freezer compartment. There is the risk to freeze or the formation of frost blisters. FIRST aid: keep immediately under running cold water. Do not pull away!
- ▶ Do not touch the inside surface of the freezer storage compartment when in operation, especially with wet hands, as your hands may freeze onto the surface.



WARNING!

Daily use

- ▶ Unplug the appliance in the event of a power interruption or before cleaning. Allow at least 7 minutes before restarting the appliance, as frequent starting may damage the compressor.
 - ▶ Do not use electrical devices inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Maintenance / cleaning
- ▶ Make sure children are supervised if they carry out cleaning and maintenance.
 - ▶ Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
 - ▶ Hold the plug, not the cable, when unplugging the appliance.
 - ▶ Do not clean the appliance with hard brushes, wire brushes, detergent powder, petrol, amyl acetate, acetone and similar organic solutions, acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage.
 - ▶ Do not scrape off frost and ice with sharp objects. Do not use sprays, electric heaters like heater, hair dryer, steam cleaners or other sources of heat in order to avoid damage to the plastic parts.
 - ▶ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - ▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - ▶ Do not try to repair, disassemble or modify the appliance by yourself. In case of repair please contact our customer service.
 - ▶ Eliminate the dust on the back of the unit at least once in the year to avoid hazard by fire, as well as increased energy consumption.
 - ▶ Do not spray or flush the appliance during cleaning.
 - ▶ Do not use water spray or steam to clean the appliance.
 - ▶ Do not clean the cold glass shelves with hot water. Sudden temperature change may cause the glass to break.

Refrigerant gas information

- ▶ The appliance contains the flammable refrigerant ISOBUTANE (R600a). Make sure the refrigerant circuit is not damaged during transportation or installation. Leaking refrigerant may cause eye injuries or ignite. If a damage has occurred, keep away open fire sources, thoroughly ventilate the room, do not plug or unplug the power cords of the appliance or any other appliance. Inform the customer service.
- ▶ In case of eyes get into contact with the refrigerant, rinse immediately it under running water and call immediately the eye specialist.

Intended use

This appliance is intended for cooling and freezing food. It has been designed exclusively for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments as well as in bed-and-breakfast and catering business. It is not intended for commercial or industrial use.

Changes or modifications to the device are not allowed. Unintended use may cause hazards and loss of warranty claims.


Standards and directives




This product meets the requirements of all applicable EC directives with the corresponding harmonised standards, which provide for CE marking.



CAUTION!

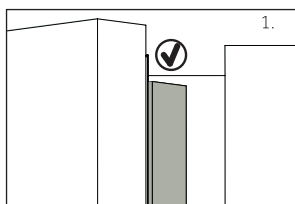

When you close the door, the vertical door strip on the left door should be bent inside (1).

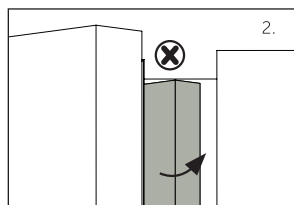


If you try to close the left door and the vertical door strip is unbent (2), you should bend it firstly, otherwise the door strip will hit the fixing shaft or right door. Thus a damage to the door slip or a leak will occur.

There is a heating thread inside the frame. The temperature of the surface will rise a little, which is normal and won't affect the function of appliance.

i NOTICE

Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

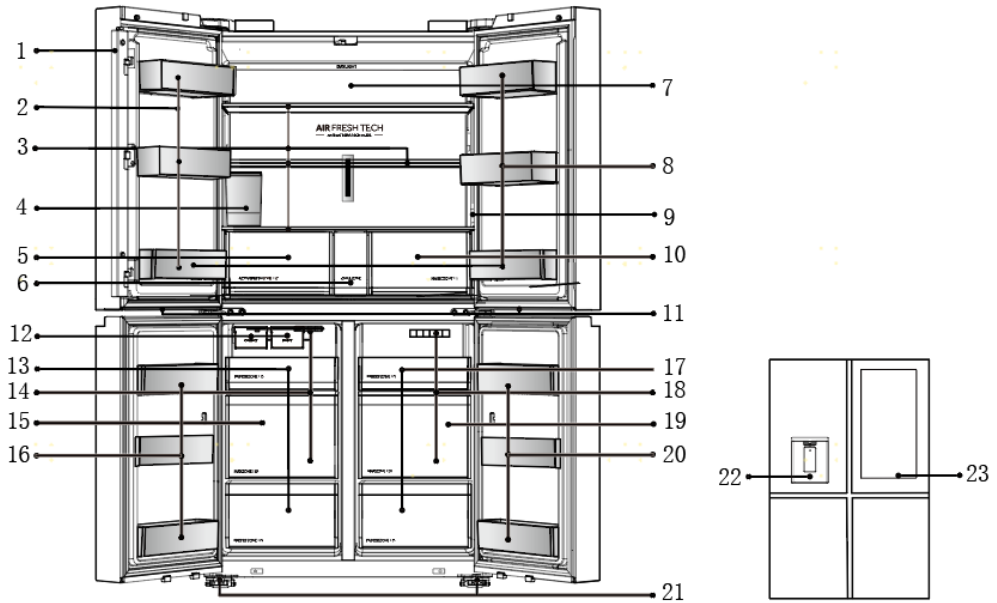


A: Refrigerator compartment

- 1 Door beam
- 2 Bottle holder
- 3 Glass shelves
- 4 Water tank
- 5 ACTIVEFRESH ZONE drawer
- 6 CHILL ZONE box
- 7 Fridge compartment light
- 8 Bottle holder
- 9 Control panel
- 10 MAGIC ZONE drawer
- 11 Freezer lamp
- 22 Water Dispenser
- 23. Glass door

B: Freezer compartment

- 12 Cubed Ice maker
- 13 FREEZE ZONE drawer
- 14 Air duct
- 15 MAX ZONE drawer
- 16 Bottle holder
- 17 FREEZE ZONE drawer
- 18 Air duct
- 19 MAX ZONE drawer
- 20 Bottle holder
- 21 Adjust feet

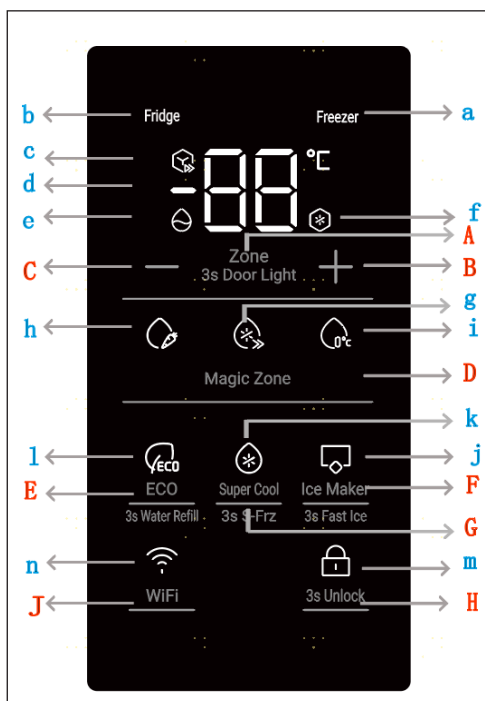

Keys:

- A Fridge & Freezer temperature mode switchover selector
- B Raise the temperature function selector
- C Reduce temperature function selector
- D Magic zone function selector
- E ECO function selector
- F Ice Macker function selector
- G Super-Cool function selector
- H Panel lock/unlock function selector
- J WiFi function selector

Indicators:


- a Freezer indicator
- b Fridge indicator
- c Fast ice making function
- d Temperature display function
- e Water shorting alert function
- f Super-freeze function
- g Cool drink function
- h Fruit&Veg function
- i 0°C Fresh function
- j Ice-making function
- k Super-Cool function
- l ECO function
- m Lock/unlock function
- n WiFi function

Before first use

- ▶ Remove all the packaging, especially the white EPS foam on both sides of the refrigeration duct and keep out of children's reach. dispose them in an environmentally friendly manner.
- ▶ Clean the inside and outside of the appliance with water and a mild detergent before putting any food in it.
- ▶ After the appliance has been levelled and cleaned, wait for at least 2-5 hours before connecting it to the power supply. See Section INSTALLATION.
- ▶ Precool the compartments at high settings before loading with food. The function Power- Freeze helps to cool down the compartments quickly.
- ▶ The refrigerator temperature and freezer temperature are automatically set to 5° C and -18° C respectively. These are the recommended settings. If desired, you can change these temperatures manually. Please see ADJUST THE TEMPERATURE.

EPS removal method

First, remove the upper and middle shelves (the method for removing the shelves is described on page 25), and then take out the two EPS.

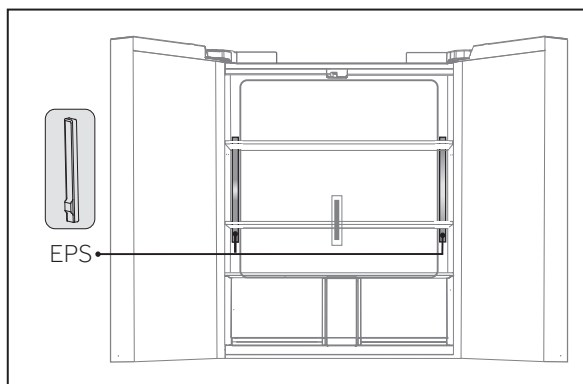

Sensor keys

The buttons on the control panel are sensor keys, which already respond when lightly touched with the finger.

Switch on /off the appliance

The appliance is in operation as soon as it is connected to the power supply.

When the refrigerator is first powered on, the indicator "d" illuminates. The fridge temperature and freezer temperature are automatically set to 5° C and -18° C respectively.

Maybe the panel lock is active.



NOTICE

The appliance is preset to the recommended temperature of 5 °C (Refrigerator) and -18 °C (Freezer). Under normal ambient conditions you need not to set a temperature.

When the appliance is switched on after disconnection from the main power supply, it may take up to 12 hours for the correct temperatures to be reached.

Empty the appliance before switching off. To switch off the appliance, pull the power cord out of the power socket.

Lock/unlock panel

Automatic lock: When the fridge door is closed and there is no key operation within 30 seconds, the display screen will be automatically extinguished and locked. After the refrigeration door remains open for 7 minutes, the display panel goes off and is locked. Touching the display panel again lights it up.

Manual lock: When the display screen is unlocked, press the key "H" (Panel lock selector) and hold for 3 seconds, the buzzer rings once, the indicator "m" (Panel lock) illuminates, and the display is locked. Under Lock state, long press key "H" for 3 seconds, the buzzer rings once, the indicator "m" (panel locked) has gone out, the panel lock will be unlocked.



Manual adjusting mode

If you want to manually adjust the temperature of the appliance, you can set the temperature via a temperature adjust button (refer to ADJUST THE TEMPERATURE)

Door alarm

Door alarm will trigger when door opens for long time or not closed properly, as a reminder.

 
Adjust the temperature

The indoor temperatures are influenced by the following factors:


Ambient temperature, Frequency of door opening, Amount of stored foods, Installation of the appliance.

Adjust the temperature for fridge

1. When the display screen is unlocked, press the button "A". The buzzer rings once, The indicator "b" flashes, and then here comes the temperature setting mode of the fridge
2. Press the button "C" every time, the buzzer rings once, the set temperature of the fridge will be reduced by 1°C. The fridge temperature will display in the sequence of "9°C > 8°C > 7°C > 6°C > 5°C > 4°C > 3°C > 2°C > 1°C".



 3. Press the button "B" every time, the buzzer rings once, the set temperature of the fridge will be increased by 1°C. The fridge temperature will display in the sequence of "1°C->2°C->3°C->4°C->4°C->5°C->6°C->7°C->8°C->9°C".




NOTICE

After setting the temperature, if there is no operation within 5 seconds, the system will be automatically determined and save the set temperature.


Adjust the temperature for freezer

1. When the display screen is unlocked, press the button "A". The buzzer rings once, The indicator "a" flashes, and then here comes the temperature setting mode of the freezer.

2. Press the button "C" everytime, the buzzer rings once, the set temperature of the freezer will be reduced by 1°C. The freezer temperature will display in the sequence of "-14°C > -15°C > -16°C > -17°C > -18°C > -19°C > -20°C > -21°C > -22°C > -23°C > -24°C".

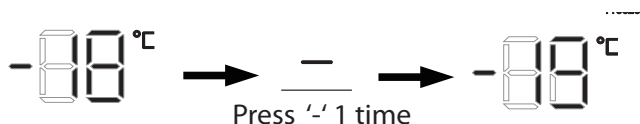

3. Press the button "B" every time, the buzzer rings once, the set temperature of the freezer will be increased by 1°C. The freezer temperature will display in the sequence of "-24°C > -23°C > -22°C > -21°C > -20°C > -19°C > -18°C > -17°C > -16°C > -15°C > -14°C".

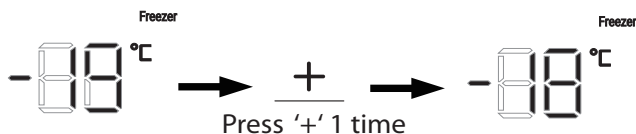


NOTICE

After setting the temperature, if there is no operation within 5 seconds, the system will be automatically determined and save the set temperature.

Super-Cool function

 1. When the display screen is unlocked, press the button "G", the buzzer rings once, the indicator "k" illuminates, and then the Super-Cool function will be turned on.
2. When the indicator "k" illuminates, press the button "G", the buzzer rings once, the indicator "k" goes off, and then the Super-Cool function will be turned off.
3. After the Super-Cool function is turned on, the refrigerator will automatically turn off the function when it reaches the set condition. If you want to exit manually, you can press the button "G" to turn it off.



NOTICE

1. Under Super-cool state, the fridge temperature cannot be adjusted. If either button "C" (Temperature adjustment button "-") or button "B" (Temperature adjustment button "+") is pressed to adjust the temperature of fridge, the indicator "k" will flash with a prompt sound to indicate that this operation cannot be carried out.
2. In the state of Super-cool function, Both the ECO function and Holiday function cannot be turned on due to different control modes. When you choose one function that conflicts with another function, the original function will automatically exit.

Super-Frz function

1. When the display screen is unlocked, Press and hold the "G" button for 3 seconds. the buzzer rings once, the indicator "f" illuminates, and then the Super-Freeze function will be turned on.
2. When the indicator "f" illuminates, Press and hold the "G" button for 3 seconds, the buzzer rings once, the indicator "f" goes off, and then the Super-Freeze function will be turned off.
3. After the Super-Freeze function is turned on, the refrigerator will automatically turn off the function when it reaches the set condition. If you want to exit manually, you can press and hold the button "G" to turn it off.





NOTICE

1. Under Super-Freeze state, the freezer temperature cannot be adjusted. If either button "C" (Temperature adjustment button "-") or button "B" (Temperature adjustment button "+") is pressed to adjust the temperature of freezer, the indicator "F" will flash with a prompt sound to indicate that this operation cannot be carried out.
2. Super-Freeze function is designed to keep nutrition value of frozen food, it will be freeze food in the shortest time. At this time, the freezing speed of the freezer is improved, food can be frozen quickly, the nutrition of food is effectively kept, and the storage becomes quite. If you need to freeze a large amount of food once, it is recommended to set the Super Freeze function on ahead for 24 hours before the usage of freezer compartment.

ECO function

1. When the display screen is unlocked, press the button "E", the buzzer rings once, the indicator "I" illuminates, and then the ECO function will be turned on.
2. When the indicator "I" illuminates, press the button "E", the buzzer rings once, the indicator "I" goes off, and then the ECO function will be turned off.
3. After the ECO function is turned on, the appliance automatically adjusts the refrigerator and freezer zones based on changes in the ambient temperature and the temperature inside the box. If you want to exit manually, you can press the button "E" to turn it off.



NOTICE

1. When the ECO function is turned on, it is not possible to adjust the temperature of the refrigerator and freezer compartments. If the temperature of the refrigerator and freezer compartments is adjusted, the indicator "I" will flash and accompanied by a prompt sound to indicate that this operation cannot be performed.
2. When the ECO function is turned on, if the Super-Cool, Super-Freeze function and Holiday function is set, the ECO function will be turned off.

Holiday mode

Holiday mode is designed for not using the fridge for a long time. When the Holiday mode is turned on, the freezer is under normal control, and the temperature of fridge is automatically set to be 17°C. which prevents peculiar smell caused by over-temperature, and helps reduce energy consumption at the same time.



NOTICE

1. The holiday function is only available on the APP ,and cannot be operated on the display board.
2. Before using the Holiday function, please empty the fridge to prevent food goes bad in it. After activating the "Holiday Mode", if the Super Cool function is enabled, the Holiday Mode will be deactivated and the Super Cool function will be activated.

Ice maker function

1. When the display screen is unlocked, press the button "F" , the buzzer rings once, the indicator "j" illuminates, and then the Ice maker function will be turned on.
2. When the indicator "j" illuminates, press the button "F" , the buzzer rings once, the indicator "j" goes off, and then the Ice maker function will be turned off.





NOTICE

1. The ice maker is off by default when the refrigerator is powered on for the first time.
2. The ice maker will automatically dispense ice into the ice storage bin and it will stop when it detects the bin is full. The longer the ice-making function operates, the more ice it will produce.
3. The ice storage capacity of the ice box can be automatically confirmed by the ice detector. (In order to correctly determine the ice storage capacity, do not place the ice cubes flatly) After the storage reaches a certain amount, stop ice-making. Please confirm the amount of ice stored in the ice box. If there is too much ice, it will not be able to make ice, or it may affect the normal opening and closing of the drawer.
4. If you are just beginning to use the icemaker, or it has not been used to make ice in a long time, you should discard the first several ice cubes, so that impurities in the water can get run out.
5. When the ice-making function is activated, the system will check the water level in the water box. If there is insufficient water in the box, the indicator "e" illuminates. It is necessary to refill the water in the water container, and then press and hold the button "E" for 3 seconds, the indicator "e" goes off. Now you can use the ice-making function normally.
6. After stable operation of the refrigerator, the ice making time is approximately 105 minutes per time.
7. The ice release time may vary depending on the actual usage status of the refrigerator. When the following situations occur, the ice making time may be extended:
 - ①. Before the refrigerator is used for the first time and runs stably, it needs to wait for each room to cool down sufficiently before the automatic water filling and ice making process, so it takes about 24 hours or more to make ice cubes.
 - ②. When using the ice making function for the first time or for a long time without using it again, the first ice making may take more than 5 hours;
 - ③. When the refrigerator door is opened and closed multiple times, or when a large amount of food is put in at once;
 - ④. When the ice making process encounters defrosting of the refrigerator.
 - ⑤. When the room temperature is low or high, such as in winter or summer.
 - ⑥. When the surrounding environment of the refrigerator affects heat dissipation.

Fast Ice maker function

1. When the display screen is unlocked, Press and hold the "F" button for 3 seconds. the buzzer rings once, the indicator "c" illuminates, and then the Fast Ice-making function will be turned on.
2. When the indicator "c" illuminates, Press and hold the "F" button for 3 seconds, the buzzer rings once, the indicator "c" goes off, then the Fast Ice-making function will be turned off, and the Ice-making function will be turned on.



NOTICE

1. After the Fast Ice-making function is turned on, If you press the button "F" once, both the Fast ice-making function and the Ice-making function will be turned off.
2. After stable operation of the refrigerator, the shortest rapid ice making time is about 60 minutes per time for the cubed ice maker.
3. The first ice making time is relatively long, and then operate according to the shortest ice making time mentioned above. (This ice making time is tested at an ambient temperature of 25 °C without opening or closing the door.).
4. After about 6 hours of fast ice making, it will automatically exit to the normal ice making state.
5. The ice release time may vary depending on the actual usage status of the refrigerator, When the following situations occur, the ice making time may be extended:
 - ①. Before the refrigerator is used for the first time and runs stably, it needs to wait for each room to cool down sufficiently before the automatic water filling and ice making process, so it takes about 24 hours or more to make ice cubes.
 - ②. When using the ice making function for the first time or for a long time without using it again, the first ice making may take more than 5 hours;
 - ③. When the refrigerator door is opened and closed multiple times, or when a large amount of food is put in at once;
 - ④. When the ice making process encounters defrosting of the refrigerator.
 - ⑤. When the room temperature is low or high, such as in winter or summer.
 - ⑥. When the surrounding environment of the refrigerator affects heat dissipation.

Wi-Fi function

Step 1: Download the "HON" APP

1. Scan the QR code below, download and install the "HON" app;



2. Registration and login: On the homepage of the "HON" app, follow the guide to complete account registration and login.

Step 2: Enable Wi-Fi function

In the unlocked state, long press the "WiFi" button for 3 seconds, and the buzzer will sound once to enter the configuration mode.

The Wi-Fi function icon starts flashing.

Definition of the status of the interconnection indicator light:

1. The interconnection indicator light is constantly on: the network connection is successful;
2. Internet indicator light flashing slowly: network not connected or weak network connection status or abnormal network connection;
3. Internet indicator light flashing: in network configuration;

Wi-Fi usage precautions:

1. Wireless networks only support the 2.4GHz frequency band (compliant with 802.11b/g protocol);
2. Please set the Wi-Fi name to English letters or numbers (special characters such as a, *, - are not supported);
3. The refrigerator should be placed in a location that can receive wireless router signals. If the connection between the refrigerator and the wireless router is poor, the mobile client software will display an offline prompt message;
4. Due to functional iterations, the product may have inconsistencies between the App interface and the user manual. Please refer to the actual App interface for accuracy.
5. The factory default interconnection function is turned on, that is, the Wi-Fi indicator light is on, and the Wi-Fi module enters configuration mode without operation for 30 minutes before automatically exiting.

Using the water dispenser

Press the dispenser paddle with a glass or other container to dispense water.



NOTICE

1. When the refrigeration door is opened, water cannot be taken. If the door is opened during the water dispensing process, the water dispensing function will be automatically deactivated. After closing the door, the micro-switch needs to be released, and then it can be used to take water normally again.
2. When the water-taking time exceeds the water-taking warning time (45 seconds), the buzzer starts to alarm (ding-dong, ALERT_TONE sound), and when it exceeds the water-taking protection time (60 seconds), water taking is forcibly stopped, and the water-taking protection state is triggered; the alarm interval of the buzzer is 5 seconds each time, and the buzzer alarm sound stops until the micro-switch is released.
3. During the ice-making process, there may be a slight delay in cold water dispensing. This is a normal phenomenon. Please use the appliance with confidence.

Turn on/off the door light

1. The door lights are turned on by default when the device is powered on.
2. When the display screen is unlocked, Press and hold the "A" button for 3 seconds. the buzzer rings once, door light will be turned off.
3. When the door light is in the off state, Press and hold the "A" button for 3 seconds, the buzzer rings once, door light will be turned on.

Magic Zone function

When the display screen is unlocked, Press the "D" button to cycle through the functions of Fruit&Veges, Cool Drink and 0°C Fresh mode.

1. Fruit&Veg function:

This function is suitable to store fresh fruits and vegetables. When this function is selected, the indicator "h" illuminates.

2. Cool Drink function:

This function allows to store products such as water, coke and juice. When this function is selected, the indicator "g" illuminates.

3. 0°Fresh function:

This function is suitable to store fresh food such as meat or fish. When this function is selected, the indicator "i" illuminates.



Magic Zone



NOTICE

1. The default setting upon startup is the Cool drink function.
2. For Fruit&Veg. function: Cold-sensitive fruits like pineapple, avocado, bananas, grapefruits and vegetables such as potatoes, aubergines, beans, cucumbers, zucchini and tomatoes and cheese should not be stored in the Magic Zone drawer.
3. For 0°Fresh function: Due to different water contents of meat. Some meat with more moisture will be frozen at temperatures lower than 0°C. So "immediately cut" meat should be stored in Magic Zone drawer, with temperatures min. 0°C.
4. The three functions of the Magic Zone cannot be opened at the same time, only one can be illuminated. To reduce the refrigerator compartment temperature use the Cool Drink function, to increase the refrigerator compartment temperature use the Fruit&Veg function.

Tips on storing fresh food

Storing into the refrigerator compartment


- Keep your fridge temperature below 5°C.
- Hot food must be cooled to room temperature before storing in the appliance.
- Foods stored in the refrigerator should be washed and dried before storing.
- Food to be stored should be properly sealed to avoid odour or taste alterations.
- Do not store excessive quantities of food. Leave spaces between foods to allow air flowing around them, for a better and more.
- Foods eaten daily should be stored at the front of the shelf.

- ▶ Leave a gap between foods and the inner walls, allowing air flowing. In special way don't store foods against the rear wall: foods could freeze against rear wall. Avoid direct contact of food (especially oily or acidic food) with the inner liner as oil/acid can erode the inner liner. Clean away oily/acid dirt whenever it is found.
- ▶ Defreeze frozen food in the fridge storage compartment. This way, you can use the frozen food to decrease the temperature in the compartment and save energy.
- ▶ The ageing process of fruit and vegetables such as courgettes, melons, papaya, banana, pineapple, etc. can be accelerated in the refrigerator. Therefore, it is not advisable to store them in the refrigerator. However, the ripening of strongly green fruits can be promoted for a certain period. Onions, garlic, ginger and other root vegetables should also be stored at room temperature.
- ▶ Unpleasant odours inside the fridge are a sign that something has spilled cleaning is required. See CARE AND CLEANING.
- ▶ Different foods should be placed in different areas according to their properties.



NOTICE

Please keep the distance more than 10 mm between the food placed and air duct or sensors to ensure the cooling effect.

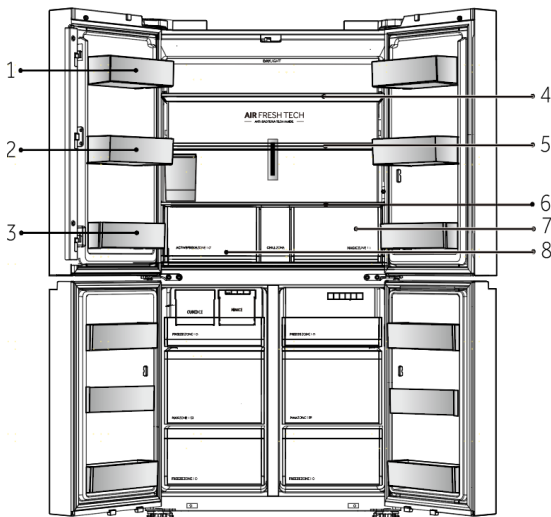

1. Butter, cheese, etc.
2. Eggs, cans, canned food, spices, etc.
3. Drinks and bottled foods.
4. Pickled foods, canned food, etc.
5. Meat products, snack foods, pasta, canned food, milk, tofu, dairy etc.
6. Cooked meat, sausages, etc.
7. MAGIC ZONG drawer: Fruit, vegetables, salad, etc.
8. ACTIVEFRESH ZONE drawer: Fruit, vegetables, salad, etc.

Storage into the freezer compartment

1. Keep the freezer temperature at -18°C.
2. 24 hours before freezing switch on the Super-freeze function; for small quantities of food 4-6 hours are sufficient.
3. Hot food must be cooled to room temperature before storing in the freezer compartment.
4. Food cut into small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5 kg.
5. It is better to pack food before putting it into the freezer. The outside of the packaging must be dry to avoid bags sticking together. Packaging materials should be odour-free, airtight, non-poisonous and nontoxic.
6. In order to avoid expiration of storage periods, please note the freezing date, time limit and name of the food on the packaging according to the storage periods of different foods.

1. WARNING! Acid, alkali and salt etc. could erode the internal surface of the freezer. Do not place the food having these substances (e.g. sea fish) directly on the internal surface. Salt water in the freezer should be cleaned up immediately.

2. Do not exceed the food storage times recommended by the manufacturers. Only take the required amount of food out of the freezer.
3. Consume defrosted food quickly. Defrosted food cannot be re-frozen unless it is first cooked, otherwise it may be less edible.
4. Do not load excessive quantities of fresh food in the freezer compartment. Refer to the freezing capacity of the freezer - See TECHNICAL DATA or data at the type plate.
5. Food can be stored in the freezer at a temperature of at least -18°C for 2 to 12 months, depending on its properties (e.g., meat: 3-12 months, vegetables: 6-12 months)
6. When freezing fresh food, avoid bringing it in contact with already frozen or thawing!

When storing commercially frozen foods, please follow these guidelines:

1. Always follow manufacturers' guidelines for the length of time you should store food for. Do not exceed these guidelines.
2. Try to keep the length of time between purchase and storage as short as possible to preserve food quality.
3. Buy frozen foods, which have been stored at a temperature of 18 °C or below.
4. Avoid buying food which has ice or frost on the packaging - This indicates that the products might have been partially defrosted and refrozen at some point temperature rises affect the quality of food.



NOTICE

Please keep the distance more than 10 mm between the food placed and air duct to ensure the cooling effect.

Preparation for using the water and ice maker

Before the first use, it is necessary to clean the water storage tank and the ice storage tank. Then, fill the water storage tank with clean water and use the water dispenser to draw at least 2 liters of water to remove impurities or residual air from the tank and the pipes.





NOTICE

1. Ensure the ice collection tray is free of foreign objects (e.g., food, ice scoops).
2. Verify that the water temperature in the reservoir does not exceed 60°C.
3. Use only potable water. Do not pour leftover bottled water, juice, tea, or other liquids into the water tank.
4. When using well water or dechlorinated water (e.g., alkaline ionized water, filtered water), increase the frequency of cleaning and maintenance to prevent scale buildup.

Inject water

1. Remove the water tank: Lift the front edge of the water storage box upwards ①, and then pull the water tank outward ②.
2. Open the lid and Inject water up to the MAX line ③
3. Before using the water injection function, please remove all the protective foam pads inside the refrigerator compartment.

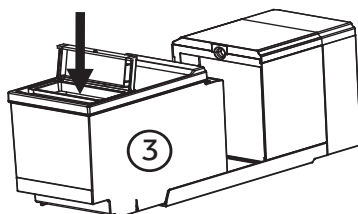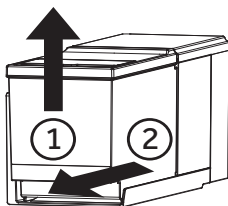

Ice Maker

1. Press control panel button "F" to turn on the ice maker function.
2. Once your Ice maker is turned on the first bin of ice may be discoloured. This is not harmful and normal during the flushing process. Discard the first full bin of ice made. Your Ice maker is now ready for use.



NOTICE

1. The ice maker will typically begin producing ice approximately 24 hours after the initial installation of the unit.
2. Ice production will automatically stop when the ice storage bin is full.
3. If ice cubes remain in the storage bin for an extended period, they may clump together and become difficult to separate. In such cases, empty the ice storage bin and produce a new batch of ice.
4. You may occasionally hear some "crunching" sounds, but these are just normal sounds that are emitted during ice making, so do not worry.
5. The capacity of the ice storage drawer is approximately 5 L.


How the Icemaker Works

The ice making capacity is 2.40kg/24 hours (this figure is the test result at 32°C ambient temperature condition). During the daily use of the appliance, due to the different ambient temperature, the ice making capacity may differ a little.

Do not store ice cubes, which are produced during the first batch of cubes following appliance start up, or after a prolonged break. Discard these cubes. To allow the ice cube tray to fill to maximum capacity, you will need to rearrange the ice cubes periodically. Some ice cubes may stick together when dropped into the storage box - you will need to separate these to allow maximum use of the icebox. If the cubed ice becomes smaller, this may suggest that the filter is blocked from the impurities.


Multi-air-flow

1. The refrigerator is equipped with a multi-air-flow system, with which cool air flows are located on every shelf level. This helps to maintain a uniform temperature to ensure that your food is kept fresher for longer.

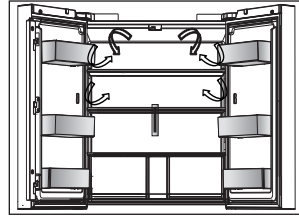


Adjustable shelves

1. The height of the shelves can be adjusted to fit your storage needs.
2. To relocate a shelf, remove it first by uplifting its front edge ① and pulling it out ②.
3. To reinstall it, put it on the lugs on both sides and push it to the most rearward position until the rear of the shelf is fixed inside the slots in the sides.

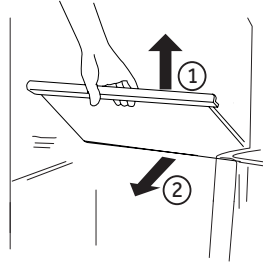

Adjust middle shelf

1. Remove the shelf stand:
First, lift the front edge ① of the shelf stand up by 7 cm, then lift the hind edge ② of the shelf stand, so that the claw on the cantilever side can be separated from the installation hole. Finally, pull out the shelf stand outward ③.
2. Install the shelf stand:
Push the shelf stand into place according to the inclined angle shown in the diagram, then lower the front edge ① of the shelf stand, so that the claw on the cantilever side can fit into the installation hole.

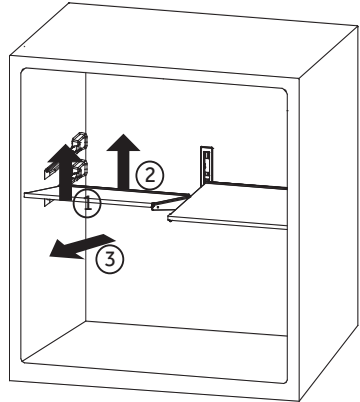

NOTICE

Ensure that all ends of a shelf are level.


Humidity box drawer

1. In this compartment the humidity level is higher than fridge compartment. It is controlled automatically by the system and is suitable to store fruits, vegetables, salads etc.




NOTICE

1. Do not remove the plastic cover inside the two zones.
2. They maintain the humidity.
3. Cold-sensitive fruits like pineapple, avocado, bananas,
4. grapefruits are not recommended to be stored in these two drawers.

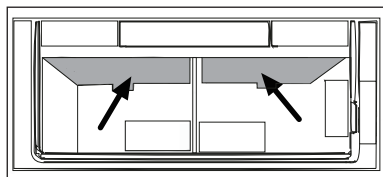

Removable door racks/bottle holder

1. The door racks can be removed for cleaning:
2. Place hands on each side of the rack, lift it upwards ① and pull it out ②.
3. In order to insert the door rack, the above steps are carried out in reverse order.

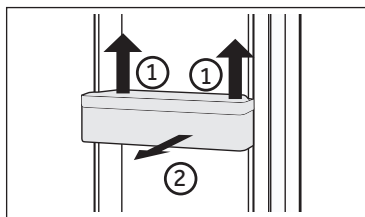


NOTICE

When the appliance is switched on, it may take up to 12 hours for the correct temperatures to be reached.

Removable drawer

To remove the drawer out, pull out to the maximum extent ①, lift and remove ②.

In order to insert the drawer, the above steps are carried out in reverse order.

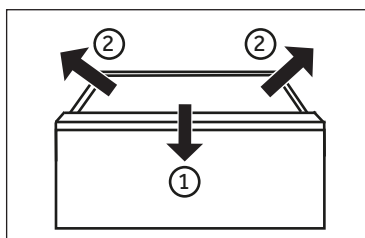

The Light

The LED interior light comes on when the door is opened and it will automatically go off if the door is left open for more than 7 minutes. The performance of the lights is not affected by any of the appliances other settings.



Energy saving tips

- ▶ Make sure the appliance is properly ventilated (see INSTALLATION).
- ▶ Do not install the appliance in direct sunlight or in the near of heat sources (e.g. stoves, heaters).
- ▶ Avoid unnecessarily low temperature in the appliance. The energy consumption increases the lower the temperature in the appliance is set.
- ▶ Functions like POWER- FREEZE consume more energy.
- ▶ Allow warm food to cool down before placing it in the appliance.
- ▶ Open the appliance door as little and as briefly as possible.
- ▶ Do not overfill the appliance to avoid obstructing the air flow.
- ▶ Avoid air within the food packaging.
- ▶ Keep door seals clean so that the door always closes correctly.
- ▶ Defreeze frozen food in the fridge storage compartment.
- ▶ The most energy-saving configuration requires the appliance keep drawers, food box and shelves on factory-fresh condition, and food should be places as far as possible without blocking the air outlet of the duct.



WARNING!

Disconnect the appliance from the power supply before cleaning.


Cleaning

1. Clean the appliance when only little or no food is stored.
2. The appliance should be cleaned every four weeks for good maintenance and to prevent bad stored food odors.



WARNING!


- ▶ Do not clean the appliance with hard brushes, wire brushes, detergent powder, petrol, amyl acetate, acetone and similar organic solutions, acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage.
- ▶ Do not spray or flush the appliance during cleaning.
- ▶ Do not use water spray or steam to clean the appliance.
- ▶ Do not clean the cold glass shelves with hot water. Sudden temperature change may cause the glass to break.
- ▶ Do not touch the inside surface of the freezer storage compartment, especially with wet hands, as your hands may freeze onto the surface.
- ▶ In case of heating check the condition of frozen goods.

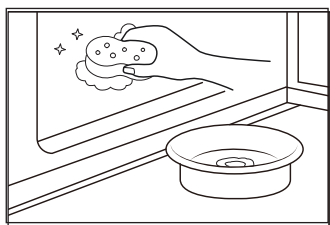

- ▶ Always keep the door gasket clean.
- ▶ Clean the inside and housing of the appliance with a sponge dampened in warm water and neutral detergent.
- ▶ Please scrub the interior and exterior of the refrigerator, including door sealing, door rack, glass shelves, boxes and so on, with a soft towel or sponge dipped in warm water (you may add neutral detergent into the warm water).
- ▶ If there is liquid spilled, remove all the contaminated parts, directly rinse with the flow water, dry and place it back into the fridge.
- ▶ If there is spilled cream (such as the cream, melting ice cream), please remove all the contaminated parts, put into the warm water with about 40 °C for some time, then rinse with the flow water, dry and place it back into the fridge.
- ▶ In case some small part or component gets stuck inside of the fridge (between shelves or drawers), use small soft brush to release it. If you could not reach the part, please contact Haier service.
- ▶ Rinse and dry with soft cloth.
- ▶ Do not clean any of the parts of the appliance in a dishwasher.
- ▶ Allow at least 5 minutes before restarting the appliance as frequent starting may damage the compressor.

Water tank cleaning

- ▶ Remove the lid, water pipe, filtering fixture, and cotton filter.
- ▶ Dip a soft sponge in water and clean the water tank and its components. When removing stubborn stains, use diluted dishwashing detergent. After cleaning, rinse thoroughly with water.
- ▶ Assemble the water tank by following the opposite procedure to the removal sequence.

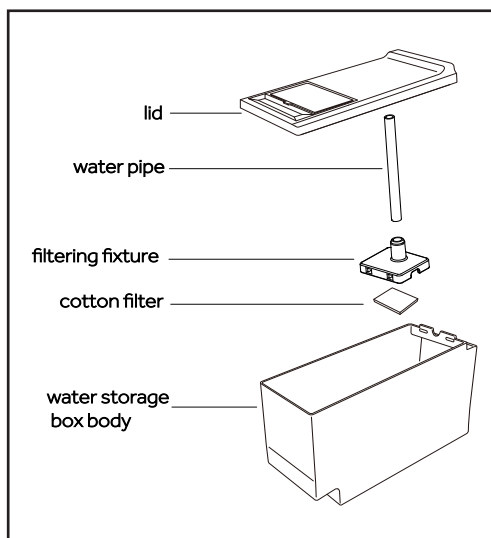

NOTICE

Regarding Maintenance:

It is recommended to clean the water tank filter once a week. Allow it to dry completely before placing it back. Do not use detergents, steel wool, or similar items to clean the filter. Instead, rinse the filter gently with water.

Regarding Replacement:

The water tank filter should be replaced approximately every three years. If the filter is damaged, it must be replaced immediately. If you need to replace the filter, please contact the store where you made the purchase for assistance.

Defrosting

The defrosting of the refrigerator and the freezer compartment are done automatically; no manual operation is needed.

Replacing the LED-lamps



WARNING!

Do not replace the LED lamp yourself, it must only be replaced by either the manufacturer or the authorised service agent.

The lamps adopts LED as its light source, featuring low energy consumption and long service life. If there is any abnormality, please contact the customer service. See CUSTOMER SERVICE.

Parameters of the lamps:

Refrigerator compartment: 12 V max 12 W

Freezer compartment: 12 V, 2 W*2

Door ambient LED: 2.4W*2

Distributor ambient LED: 1.5W

Distributor LED: 0.5W*2

Non-use for a longer period

If the appliance is not used for an extended period of time, and you will not use the Holiday-function for the refrigerator:

Take out the food.

Unplug the power cord.

Clean the appliance as described above.

Keep the doors open to prevent the creation of bad odours inside.



NOTICE

Turn the appliance off only if strictly necessary.

Moving the appliance

1. Remove all food and unplug the appliance.
2. Secure shelves and other moveable parts in the fridge and the freezer with adhesive tape.
3. Do not tilt the refrigerator more than 45° to avoid damaging the refrigerating system.



WARNING!

- ▶ Do not lift the appliance by its handles.
- ▶ Never place the appliance horizontally on the ground.

Many occurring problems could be solved by yourself without specific expertise. In case of a problem please check all shown possibilities and follow below instructions before you contact an after sales service. See CUSTOMER SERVICE.



WARNING!

- ▶ Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- ▶ Electrical equipment should be serviced only by qualified electrical experts, because improper repairs can cause considerable consequential damages.
- ▶ A damaged supply should only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Problem	Possible Cause	Possible Solution
The compressor does not work.	• Mains plug is not connected in the mains socket. • The appliance is in the defrosting cycle	• Connect the mains plug. • This is normal for an automatic defrosting
The appliance runs frequently or runs for a too long period of time.	• The indoor or outdoor temperature is too high. • The appliance has been off power for a period of time. • A door of the appliance is not tightly closed. • The door has been opened too frequently or for too long. • The temperature setting for the freezer compartment is too low. • The door gasket is dirty, worn, cracked or mismatched. • The required air circulation is not guaranteed.	• In this case, it is normal for the appliance to run longer. • Normally, it takes 8 to 12 hours for the appliance to cool down completely. • Close the door/drawer and ensure the appliance is located on a level ground and there is no food or container jarring the door. • Do not open the door/drawer too frequently. • Set the temperature higher until a satisfactory refrigerator temperature is obtained. It takes 24 hours for the refrigerator temperature to become stable. • Clean the door/drawer gasket or replace them by the customer service. • Ensure adequate ventilation.
The inside of the refrigerator is dirty and/or smells.	• The inside of the refrigerator needs cleaning. • Food of strong odour is stored in the refrigerator.	• Clean the inside of the refrigerator. • Wrap the food thoroughly..

Problem	Possible Cause	Possible Solution
It is not cold enough inside the appliance.	• The temperature is set too high. • Too warm goods has been stored. • Too much food has been stored at one time. • The goods are too close to each other. • A door/drawer of the appliance is not tightly closed. • The door/drawer has been opened too frequently or for too long.	• Reset the temperature. • Always cool down goods before storing them. • Always store small quantities of food. • Leave a gap between several foods allowing air flowing. • Close the door/drawer. • Do not open the door/drawer too frequently.
It is too cold inside the appliance.	• The temperature is set too low. • The Super-Frz/Super-Coolfunction is activated or is running too long.	• Reset the temperature. • Switch off the Super-Frz/Super-Cool function
Moisture formation on the inside of the refrigerator compartment.	• The climate is too warm and toodamp. • A door/drawer of the appliance is not tightly closed. • The door/drawer has been opened too frequently or for too long. • Food containers or liquids are left open.	• Increase the temperature. • Close the door/drawer. • Do not open the door/drawer too frequently. • Let hot foods cool to room temperature and cover foods and liquids.
Moisture accumulates on the refrigerators outside surface or between the doors/door and drawer.	• The climate is too warm and too damp. • The door is not closed tightly. The cold air in the appliance and the warm air outside it condensates.	• This is normal in damp climate and will change when the humidity decreases. • Ensure that the door/drawer is tightly shut.

Problem	Possible Cause	Possible Solution
Strong ice and frost in the freezer compartment.	- The goods were not adequately packaged . - A door/drawer of the appliance is not tightly closed. - The door/drawer has been opened too frequently or for too long. - The door/drawer gasket is dirty, worn, cracked or mismatched. - Something on the inside prevents the door/drawer to close properly.	- Always pack the goods well. - Close the door/drawer. - Do not open the door/drawer too frequently. - Clean the door/drawer gasket or replace them by new ones. - Reposition the shelves, door racks, or internal containers to allow the door/drawer to close.
The sides of the cabinet and door strip get warm.		This is normal.
The appliance makes abnormal sounds.	- The appliance is not located on level ground. - The appliance touches some object around it.	- Adjust the feet to level the appliance. - Remove objects around the appliance.
A slight sound is to be heard similar to that of flowing water.		This is normal.
You will hear an alarm beep.	The fridge storage compartment door is open.	Close the door.
You will hear a faint hum.	The anti-condensation system is working	This prevents condensation and is normal
The interior lighting or cooling system does not work.	- Mains plug is not connected in the mains socket. - The power supply is not intact. - The LED-lamp is out of order.	- Connect the mains plug. - Check the electrical supply to the room. Call the local electricity company! - Please call the service for changing the lamp.

Problem	Possible Cause	Possible Solution
Water leaking or dripping from the water dispenser spout.	- The water tank is not installed correctly - The water dispenser spout is not screwed tight to the tank. - The white silicon O ring is missing from the water spout.	- Refit the water tank into the fridge door, ensure it is pushed fully into the door. - The water spout is screwed in firmly to the water tank. - Check the water spout has a white silicon O ring at the tank end before fitting the water spout to the water tank.
Do not make ice.	- The water tank is running out of water. - The "Ice-Making" function is not turned on.	- Inject water to the water tank - Turn on the "Ice-making" function.
The produced ice cubes are few, small and partially melting.	- The refrigerator door is opened and closed frequently or isn't closed tightly. - The ice storage box is uneven or mixed with other things	- Close the refrigerator door tightly, and try to open and close it as less frequently as possible. - Use an ice shovel to flatten the ice cubes and remove the mixed foreign matter.
The produced ice cubes are cloudy. The ice cubes produced have white suspensions.	Ice is made with water that contains minerals.	This is normal and there is no need to worry.
The ice cubes are in strange shapes: - Ice cubes agglomerate or differ in size from each other. - Ice cubes are rounded. - Ice cubes have protrusions.	- The refrigerator is slanted. - The ice cubes have been placed for too long. - There are concave and convex water supply channels on the ice box.	- The feet can be adjusted properly to ensure the refrigerator is placed smoothly. - Use ice cubes as soon as possible, or remake. - This is normal and there is no need to worry.

Problems	Possible Causes	Possible Solutions
Water does not come out.	• The water dispenser tank may be empty. • The water supply hose bent. • Use unfiltered water. • Water in reservoir is frozen because the controls are set too cold.	• Fill the water dispenser tank. • Straighten the water supply pipe. • Replace the cotton filter in advance. • Set the refrigerator control to a warmer setting and wait 24 hours. If the water does not dispense after 24 hours, call for service.
Water is leaking from dispenser.	• Air may be present in the water line system, causing water to drip after being dispensed.	• Dispense water for at least 3 minutes to remove air from system.
Water tastes strange.	• The cold water not been used for an extended period of time.	• Dispense water for at least 3 minutes .

To contact the technical assistance, visit our website: <https://corporate.haier-europe.com/en/>

Under the section "website", choose the brand of your product and your country. You will be redirected to the specific website where you can find the telephone number and form to contact the technical assistance.

Power interruption

In the event of a power cut, food should remain safely cold for about 5 hours. Follow these tips during a prolonged power interruption, especially in summer:

- ▶ Open the door/drawer as few times as possible.
- ▶ Do not put additional food into the appliance during a power interruption.
- ▶ If prior notice of a power interruption is given and the interruption duration is longer than 5 hours, make some ice and put it in a container in the top of the refrigerator compartment.
- ▶ An inspection of the goods is required immediately after the interruption.
- ▶ As temperature in the refrigerator will rise during a power interruption or other failure, the storage period and edible quality of food will be reduced. Any food that defrosts should be either consumed, or cooked and refrozen (where suitable) soon afterwards in order to prevent health risks.

Memory function during power interruption

After restoration of power the appliance continues with the settings that were set before the power failure.

Unpacking



WARNING!




- ▶ The appliance is heavy. Always handle with at least two persons.
- ▶ Keep all packaging materials out of children's reach and dispose them in an environmentally friendly manner.
- ▶ Take the appliance out of the packaging.
- ▶ Remove all packaging materials.

Environmental conditions

The room temperature should always be between 10° C and 43° C, since it can influence the temperature inside the appliance and its energy consumption. Do not install the appliance near other heat-emitting appliances (ovens, refrigerators) without isolation.

Space recommendation


Recommended space when door is opened (Fig. 1.2.)

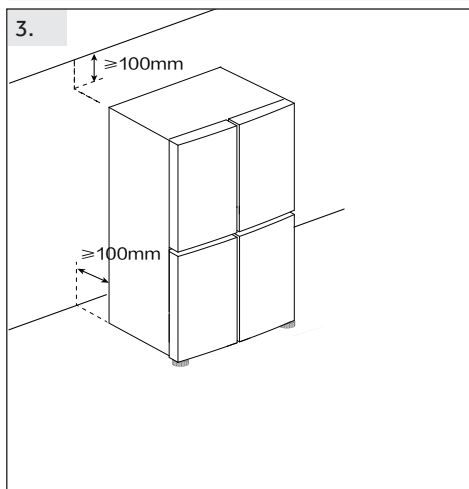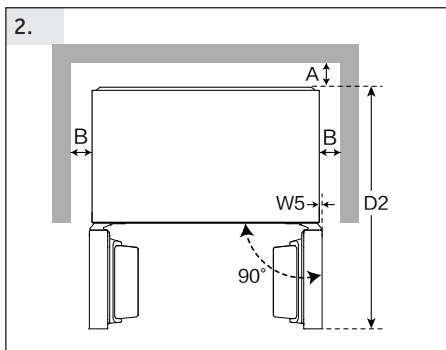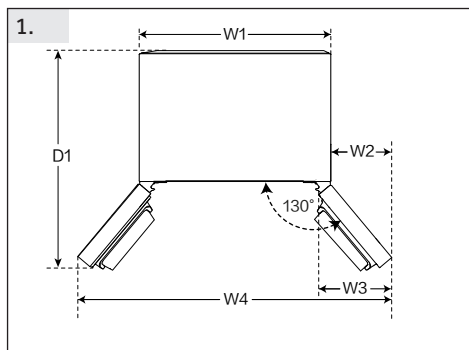

(Unit : mm)	Model#	
Width	W1	905
	W2	327
	W3	368
	W4	1559
	W5	51
	W	905
	D1	1061
	D2	1101
	D	738
Distance to back wall	A	100
Distance to lateral walls	B	100
Distance to ceiling	C	100
Overall Height	H	1825

Ventilaton cross-section


To achieve sufficient ventilation of the appliance for safety reasons, the information of the required ventilation cross sections must be observed.

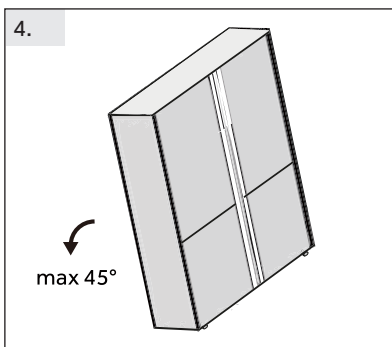

Aligning the appliance (Fig.4.5.6.)


The appliance should be placed on a flat and solid surface.

4. Tilt the refrigerator slightly backwards.

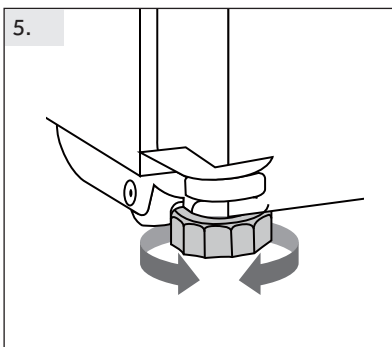

5. Set the feet to the desired level.

Make sure the distance to the wall on the hinge side is at least 10 mm for the door to open properly.

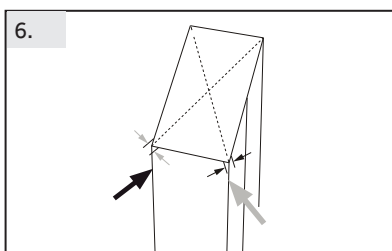


6. The stability can be checked by alternately bumping on the diagonals. The slightly swaying should be the same in both directions. Otherwise the frame can warp; possible leaking door seals are the result. A low tendency to the rear facilitates the closing of the doors.



NOTICE

For a free standing appliance: this refrigerating appliance is not intended to be used as a built-in appliance

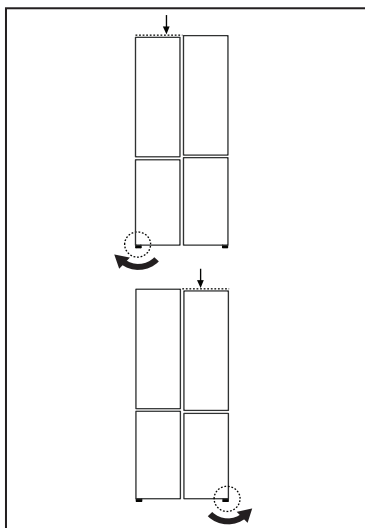


Fine tuning of the doors

If the doors are not in one level, this mismatch can be remedied by following:


Using adjustable foot

Rotate the adjustable foot according to the direction of arrow to turn up or down the foot.

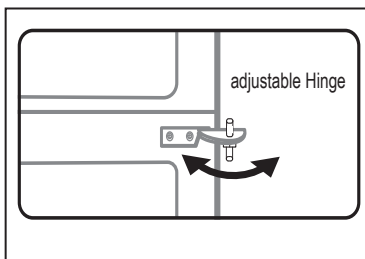


Door position adjustment

- ▶ When the two doors are not at the same height, adjustable hinges can be fine-tuned with the accompanying wrench to level the two doors. Please do not install it brutally to prevent scratches or bumps on the door trim.

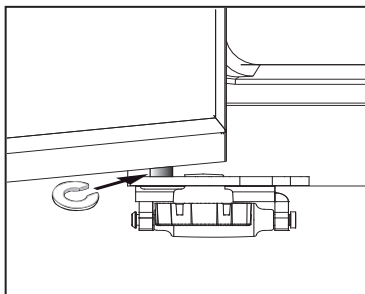

Using spacers

- ▶ Open the freeze door and lift it.
- ▶ Carefully clip the spacer (enclosed in the accessory bag) in the axle of the lower hinge by hand or using tools like pliers. Do not scratch or bruise the door.

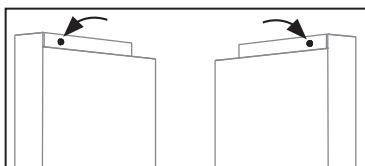


Using adjustment knob

- ▶ If the door of Refrigerator Compartment isn't level, you can rotate the adjustable knob on the upper part of the door to make fine adjustments.



NOTICE

In the future use of refrigerator, doors uneven phenomenon may occur to the weight of stored food. Then please adjust according to the above methods.

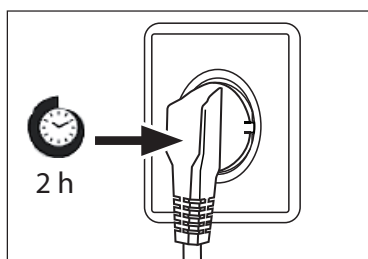

Waiting time

To the maintenance-free lubrication oil is located in the capsule of the compressor. This oil can get through the closed pipe system during slanting transport. Before connecting the appliance to the power supply you have to wait at least 2 hours so that the oil runs back into the capsule.

Electrical connection

Before each connection check if:

- ▶ power supply, socket and fusing are appropriate to the rating plate.
- ▶ the power socket is earthed and no multi-plug or extension.
- ▶ the power plug and socket are strictly according.

Connect the plug to a properly installed household socket.



WARNING!

To avoid risks a damaged power cord must be replaced by the customer service (see warranty card).

Product fiche according to regulation EU No. 2019/2016

Brand	Haier
Model name / identifier	HCW99F18DHMB(UK)
Category of the model	Refrigerator-freezer
Energy efficiency class	D
Annual energy consumption(kWh/year)(1)	243
Total volume(L)	700
Volume refrigerator(L)	413
Volume freezer(L)	250
Two-star section(L)	37
Star rating	
Frost-free system	Yes
Freezing capacity(kg/24h)	14
Climate rating(2)	SN-N-ST-T
Noise emission class and airborne acoustical noise emissions(db(A) re 1pW)	B(35)
Temperature rise time (h)	13
Ice making capacity	2.40kg/24h
Type of appliance	freestanding

Explanations:

- Yes, featured

- (1) Based on the results of the standards conformance test over 24 hours. The actual consumption depends on the use and the location of the appliance.
- (2) Climate rating SN: This appliance is intended for use in an ambient temperature of between + 10°C and +32°C

Climate rating N: This appliance is intended for use in an ambient temperature of between + 16°C and +32°C

Climate rating ST: This appliance is intended for use in an ambient temperature of between + 16°C and +38°C

Climate rating T: This appliance is intended for use in an ambient temperature of between + 16°C and +43°C

Additional technical data

Voltage / Frequency	220-240V ~/ 50Hz
Input current (A)	1.5
Main fuse (A)	16
Coolant	R600a 70g
Dimensions (W/D/H in mm)	905 / 738 / 1825

We recommend our Haier Customer Service and the use of original spare parts. If you have a problem with your appliance, please first check section TROUBLE-SHOOTING.

If you cannot find a solution there, please contact

- ▶ your local dealer or
- ▶ our European Call Service-Center (see listed phone numbers below) or
- ▶ the Service & Support area at www.haier.com where you can activate the service claim and also find FAQs.

To contact our Service, ensure that you have the following data available. The information can be found on the rating plate.

Model _____

Serial No. _____

Also check the Warranty Card supplied with the product in case of warranty.

European Call Service-Center		
Country*	Phone number	Costs
Haier Italy (IT)	199 100 912	
Haier Spain (ES)	902 509 123	
Haier Germany (DE)	0180 5 39 39 99	14 Ct/Min Landline - max 42 Ct/Min Mobile
Haier Austria (AT)	0820 001 205	14,53 Ct/Min Landline - max 20 Ct/Min all others
Haier United Kingdom (UK)	0333 003 8122	
Haier France (FR)	0980 406 409	

* For other countries please refer to www.haier.com

Haier Europe Trading S.r.l

Branch UK

Westgate House, Westgate, Ealing

London, W5 1YY

*Duration of the guarantee of the refrigerating appliance:

Minimum guarantee is: 2 years for EU Countries, 3 years for Turkey, 1 year for UK, 1 year for Russia, 3 years for Sweden, 2 years for Serbia, 5 years for Norway, 1 year for Morocco, 6 months for Algeria, Tunisia no legal warranty required.

*The period of spare parts for the repair of the appliance:

Thermostats, temperature sensors, printed circuit boards and light sources are available for a minimum period of seven years after placing the last unit of the model on the market.

Door handles, door hinges, trays and baskets for a minimum period of seven years and door gaskets for a minimum period of 10 year, after placing the last unit of the model on the market.

*For further information about the product, please consult <https://eprel.ec.europa.eu/> or scan the QR on the energy label supplied with the appliance.

CERTIFICATE OF QUALITY

DESIGNATION: REFRIGERATOR

Q.C.PASSED

CHECKER No.

QC01

Haier

专用号条码

0060544736
2026 Version A