



TOUCH CONTROL VITROCERAMIC COOKING HOBS

INSTALLATION ADVICES - INSTRUCTIONS FOR THE USE

GB

- CH95CE

Dear Customer,

Thank you for having purchased and given your preference to our product.

The safety precautions and recommendations reported below are for your own safety and that of others. They will also provide a means by which to make full use of the features offered by your appliance.

Please preserve this booklet carefully. It may be useful in future, either to yourself or to others in the event that doubts should arise relating to its operation.

This appliance must be used only for the task it has explicitly been designed for, that is for cooking foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous.

The manufacturer declines all responsibility in the event of damage caused by improper, incorrect or illogical use of the appliance.

DECLARATION OF CE CONFORMITY

- This appliance has been designed to be used only for cooking. Any other use (such as heating a room) is improper and dangerous.
- This appliance has been designed, constructed, and marketed in compliance with:
 - Safety requirements of the “Low voltage” Directive 2014/35/EU;
 - Safety requirements of the “EMC” Directive 2014/30/EU;
 - Requirements of EU Directive 93/68/EEC;
 - Requirements of EU Directive 2011/65/EU.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



IMPORTANT SAFETY PRECAUTIONS AND RECOMMENDATIONS

IMPORTANT: This appliance is designed and manufactured solely for the cooking of domestic (household) food and is not suitable for any non domestic application and therefore should not be used in a commercial environment.

The appliance guarantee will be void if the appliance is used within a non domestic environment i.e. a semi commercial, commercial or communal environment.

Read the instructions carefully before installing and using the appliance.

- This appliance has been designed and manufactured in compliance with the applicable standards for the household cooking products and it fulfills all the safety requirements shown in this manual, including those for surface temperatures.
Some people with sensitive skin may have a more pronounced temperature perception with some components although these parts are within the limits allowed by the norms.
The complete safety of the appliance also depends on the correct use, we therefore recommend to always pay a extreme attention while using the product, especially in the presence of children.
- After having unpacked the appliance, check to ensure that it is not damaged.
In case of doubt, do not use it and consult your supplier or a professionally qualified technician.
- Packing elements (i.e. plastic bags, polystyrene foam, nails, packing straps, etc.) should not be left around within easy reach of children, as these may cause serious injuries.
- Some appliances are supplied with a protective film on steel and aluminium parts. **This film must be removed before using the appliance.**
- **IMPORTANT:** The use of suitable protective clothing/gloves is recommended when handling or cleaning this appliance.
- Do not attempt to modify the technical characteristics of the appliance as this may become dangerous to use. The manufacturer declines all responsibility for any inconvenience resulting from the inobservance of this condition.

- Do not operate your appliance by means of an external timer or separate remote-control system.
- Do not carry out cleaning or maintenance operations on the appliance without having previously disconnected it from the electric power supply.
- Do not use a steam cleaner because the moisture can get into the appliance therefore making it unsafe.
- Do not cover the hob with aluminium foils.
- Do not touch the appliance with wet or damp hands (or feet).
- Do not use the appliance whilst in bare feet.
- If you should decide not to use this appliance any longer (or decide to substitute another model), before disposing of it, it is recommended that it be made inoperative in an appropriate manner in accordance to health and environmental protection regulations, ensuring in particular that all potentially hazardous parts be made harmless, especially in relation to children who could play with unused appliances.
- The various components of the appliance are recyclable. Dispose of them in accordance with the regulations in force in your country. If the appliance is to be scrapped, remove the power cord.
- After use, ensure that the controls are in the off position.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The manufacturer declines all liability for injury to persons or damage to property caused by incorrect or improper use of the appliance.

- **WARNING:** During use the appliance and its accessible parts become hot; they remain hot for some time after use.
 - Care should be taken to avoid touching heating elements on the hob.
 - To avoid burns and scalds, young children should be kept away.
- Make sure that electrical cables connecting other appliances in the proximity of the cooktop cannot come into contact with the hob.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- Do not place or leave empty pans on the glass ceramic hob.
- Do not allow heavy or sharp objects to drop on the glass ceramic hob.
- Do not scratch the hob with sharp objects. Don't use the hob as a work surface.
- **WARNING:** If the hob is cracked or otherwise damaged by falling objects etc., disconnect the appliance from the electrical power supply to avoid the possibility of electric shock and call Customer Service.
- **WARNING:** When correctly installed, your product meets all safety requirements laid down for this type of product category. However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- Models provided with power supply cable. If the power supply cable is damaged, it must be replaced only by an authorised service agent in order to avoid a hazard.

- If the appliance is not fitted with a supply cord and a plug, or with other means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions, means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- **WARNING:** The appliance and its accessible parts become hot during use.
Care should be taken to avoid touching heating elements.
Children less than 8 years of age shall be kept away unless continuously supervised.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

ENERGY LABELLING/ECODESIGN

- Commission regulation (EU) No 66/2014 (implementing Directive 2009/125/EC of the European Parliament and of the Council).

Reference to the measurement and calculation methods used to establish compliance with the above requirements:

- Standard EN 60350-2 (hobs: electric cooking zones and/or areas).

USE OF THE APPLIANCE, ENERGY SAVING TIPS

HOB

ELECTRIC COOKING ZONES AND/OR AREAS

- Avoid pouring liquids on the zones/areas while they are hot.
- Use flat-bottomed (electric hotplate type) pots and pans only.
- Use cooking receptacles which cover as much of the surface of the cooking zone/area as possible.
- To save electricity, use lids whenever possible.
- When the pan comes to the boil, turn the heat down to the level desired. Remember that the cooking zone/area will continue to produce heat for about five minutes after it has been turned off.

Advice for the installer

IMPORTANT:

- The appliance is designed and approved for domestic use only and should not be installed in a commercial, semi commercial or communal environment.
Your product will not be guaranteed if installed in any of the above environments and could affect any third party or public liability insurances you may have.
- This appliance is to be installed only by an authorised person according to the current local regulations and in observation of the manufacturer's instructions.
Failure to comply with this condition will render the guarantee invalid.
- Incorrect installation, for which the manufacturer accepts no responsibility, may cause personal injury or damage.
- This appliance shall only be serviced by authorized personnel.
- Always disconnect the cooktop from mains power supply before carrying out any maintenance operations or repairs.
- **Important: The use of suitable protective clothing/gloves is recommended when handling or installing this appliance.**
- **The appliance must be housed in heat resistant units.**
- **The walls of the units must not be higher than work top and must be capable of resisting temperatures of 70 °C above room temperature.**
- **We would point out that the adhesive which bonds the plastic laminate to the furniture must withstand temperatures not less than 150 °C to avoid delamination.**
- **Do not install the appliance near inflammable materials (eg. curtains).**

WARNING

When correctly installed, your product meets all safety requirements laid down for this type of product category.

However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.

STANDARD INSTALLATION

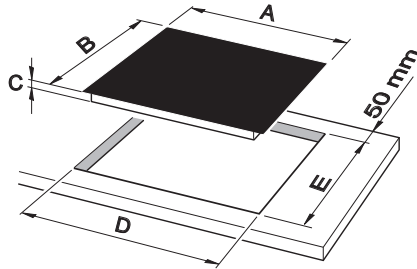


Fig. 1.1a

FLUSH INSTALLATION (MODELS WITHOUT METAL TRIM/S ONLY)

If you wish to install the hob flush with the work surface, it is necessary to execute/carry out a milling in the hole of the cut-out as indicated in fig. 1.1b.

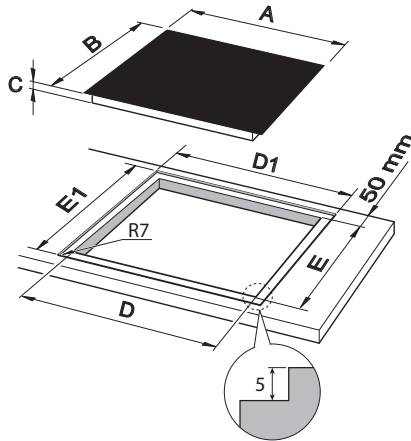


Fig. 1.1b

| Description | Measures (mm) | | | | | | |
|------------------|---------------|-------|---------------------------------|-----|-----|-----|-----|
| | A (*) | B (*) | C (**) | D | D1 | E | E1 |
| 80cm wide models | 780 | 520 | 50 or 55 for flush installation | 740 | 785 | 480 | 525 |
| 90cm wide models | 900 | | | 840 | 905 | | |

(*) For models with metal trim/s add 4mm to the measurement for each trim.
Example: front metal trim= B+4mm.

(**) from the top of countertop to bottom of cooktop.

FITTING REQUIREMENTS

This cooktop can be built into a working surface from 20 mm thick and 600 mm deep.

In order to install the ceramic hob into the kitchen fixture, a hole with the dimensions shown in figures 1.1a and 1.1b has to be made, keeping in consideration the following:

- A 20 mm ventilation gap must be provided between the bottom of the appliance and any cabinetry, draw unit or oven (fig. 1.3).
- If the cooktop is installed above an oven, the oven shall be provided with cooling fan. The two appliances should be connected to the electrical supply with independent connections.
- The ceramic hob must be kept no less than 50 mm away from any side wall (from side edge of cutout).
- The rear wall must be at least 50 mm from the ceramic hob (from rear edge of cutout).
- There must be a distance of at least 650 mm between the hob and any wall cupboard or extractor hood positioned immediately above (see fig. 1.2).
- Standard installation (not flush): Do not seal the cooktop into the benchtop with silicone or glue; this makes future servicing difficult. The manufacturer will not cover the costs of removing the cooktop, or of damage caused by this removal.
- **The walls surrounding the cooktop must be made of heat-resistant material.**
- **Do not install the appliance near inflammable materials (eg. curtains).**

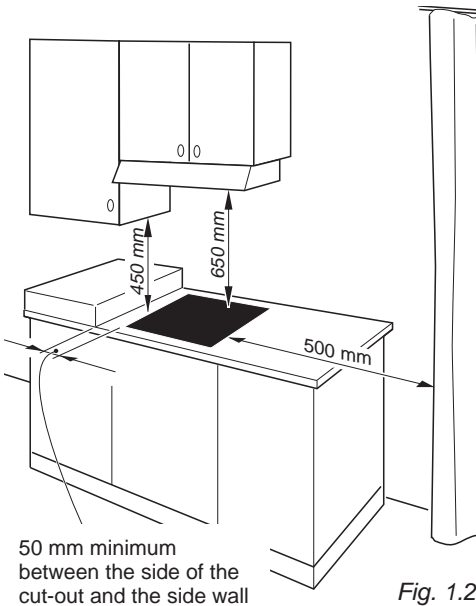


Fig. 1.2

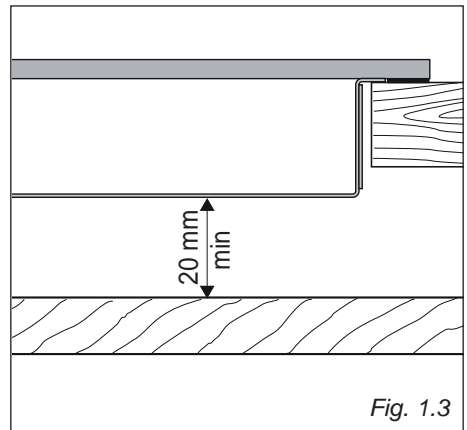



Fig. 1.3

FASTENING THE COOKTOP


Each cooktop is provided with an installation kit including brackets and screws for fastening the cooktop to benches from 20 mm thick. Before you install the cooktop, make sure that the work surface is square and level, and no structural members interfere with space requirements previously indicated.

The kit includes four metal clips “B” and four self-threading screws “A” (fig. 1.4).

- Cut the unit according to the dimensions in fig. 1.1a or 1.1b.
- Turn the hob upside down and rest the glass side on a soft surface.
- Spread the seal “D” around the edge of the hob (fig. 1.5).
- Fasten the metal clips “B” into the hole “C” using the screws “A”. Make sure that the metal clips are mounted correctly as shown in the figure 1.4.
- Put the cooktop into the cutout and position it correctly.
- Using a sharp cutter or trimmer knife, trim the excess sealing material around the edge of the cooktop. Take care not to damage the workbench.
- In case to install the hob flush with the work surface, fill any gaps between the glass and along the perimeter of the work surface with insulating silicone, and wipe away any excess.

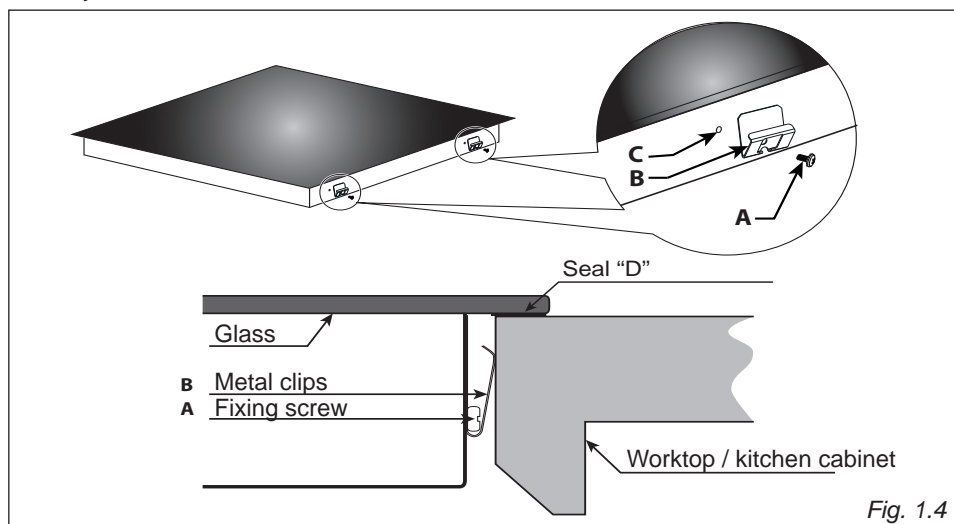

IMPORTANT: Spread the sealing material “D” around the edge of the hob (edge of the glass). The sealing material “D” must be installed correctly to guarantee a perfect seal between the appliance and the unit. Incorrect installation may cause irreparable damage to the appliance.

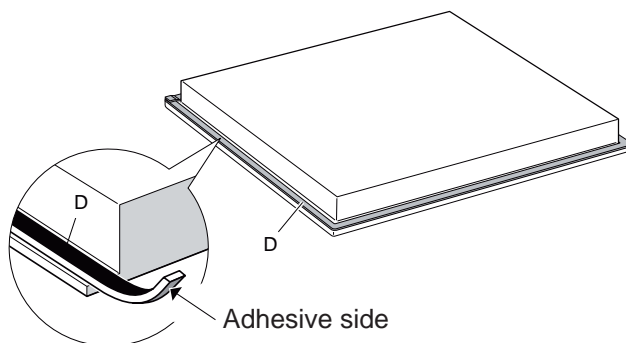

2 ELECTRICAL SECTION

IMPORTANT: Installation must be carried out according to the manufacturer's instructions. Incorrect installation may cause harm and damage to people, animals or property, for which the manufacturer accepts no responsibility.

Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains.

Connection to a good earth wiring system is absolutely essential.

The manufacturer accepts no responsibility for any inconvenience caused by failure to comply with this rule.

If the hob surface is cracked disconnect the appliance from the mains and contact the After-Sales Service.

ELECTRICAL REQUIREMENTS

- Connection to the electric power supply must be carried out by a qualified technician and following the appropriate safety regulations.
- The appliance must be connected to the mains checking that the voltage corresponds to the value given in the rating plate and that the electrical cable sections can withstand the load specified on the plate.
- The appliance should be connected directly to the mains placing an omnipolar switch with minimum opening between the contacts of 3 mm between the appliance and the mains.
- The power supply cable must not touch the hot parts and must be positioned so that it does not exceed 50°C above ambient.
- Once the appliance has been installed, the switch must always be in a accessible position.
- **If the power supply cable is damaged it must be substituted by a suitable cable available in the after sales service.**

N.B. For connections to the mains power supply, never use adaptors, reductions or multiple power points as these may overheat and catch fire.

In the event that installation should require modifications to the mains supply wiring system, it is recommended that a qualified technician be called to carry out substitution.

He should also check that the domestic electrical system is suitable for the power absorbed by the appliance.

CONNECTION OF THE POWER SUPPLY CABLE

Important! This cooktop must be connected to the electricity supply only by an authorised person.

To connect the feeder cable to the hob it is necessary to carry out the following operations:

- Unhook the terminal board cover “A” by inserting a screwdriver into the two hooks “B” (fig. 2.1). Open completely the terminal block cover “A”.
- Unscrew the screw “C”, then unhook the cable clamp “D” by inserting a screwdriver into the hook “E”. Remove completely the cable clamp “D” (fig. 2.1).
- Connect the phase, neutral and earth wires to terminal board “F” according to the diagrams in fig. 2.2; the U bolts “G” (fig. 2.1) shall be used as indicated in the diagrams in fig. 2.2 (they are supplied already fitted to the terminals or inside the terminal board, behind the cover).
- Strain the feeder cable and block it with cable clamp “D” (by hooking hook “E” and screwing screw “C”).
- Close the cover “A” of the terminal board “F” (check the two hooks “B” are correctly hooked).

NOTE: The earth conductor must be left about 3 cm longer than the others.

The operations must be executed by a qualified technician.

MODELS SUPPLIED WITH POWER CORD ALREADY FITTED TO THE APPLIANCE

FEEDER CABLE SECTION “Type H05RR-F, H07RN-F or H05V2V2-F (resistance to temperatures of 90°C)”

For 80 cm models:

| | |
|-----------------------|--|
| 220-240 V ac (V 2 ac) | 3 x 2,5 mm ² (*) (**) or 3 x 4 mm ² (*) or 5 x 1,5 mm ² (*) |
| 380-415 V 2N ac | 5 x 1,5 mm ² (*) (***), some models only |
| 380-415 V 3N ac | 5 x 1,5 mm ² (*) (***), some models only |

For 90 cm models:

| | |
|-----------------------|---|
| 220-240 V ac (V 2 ac) | 3 x 2,5 mm ² (*) (**) or 3 x 4 mm ² (*) or 3 x 6 mm ² (*) or 5 x 2,5 mm ² (*) |
| 380-415 V 2N ac | 5 x 2,5 mm ² (*) (***), some models only |
| 380-415 V 3N ac | 5 x 2,5 mm ² (*) (***), some models only |

(*) Connection with wall box connection.

(**) Diversity factor applied. A diversity factor may be applied to the total loading of the appliance only by a suitably qualified person.

(***) See also “MODELS SUPPLIED WITH POWER CORD 5x1,5 mm² OR 5x2,5 mm² ALREADY FITTED TO THE APPLIANCE”

MODELS SUPPLIED WITHOUT POWER CORD ALREADY FITTED TO THE APPLIANCE

FEEDER CABLE SECTION “Type H05RR-F or “H05V2V2-F (resistance to temperatures of 90°C)”

| | |
|-----------------------|---|
| 220-240 V ac (V 2 ac) | 3 x 2,5 mm ² (*) (**) |
| 380-415 V 2N ac | 4 x 2,5 mm ² (*) for 90 cm models, or 4 x 1,5 mm ² (*) for 80 cm models |
| 380-415 V 3N ac | 5 x 1,5 mm ² (*) |

(*) Connection with wall box connection.

(**) Diversity factor applied. A diversity factor may be applied to the total loading of the appliance only by a suitably qualified person.

Fig. 2.1


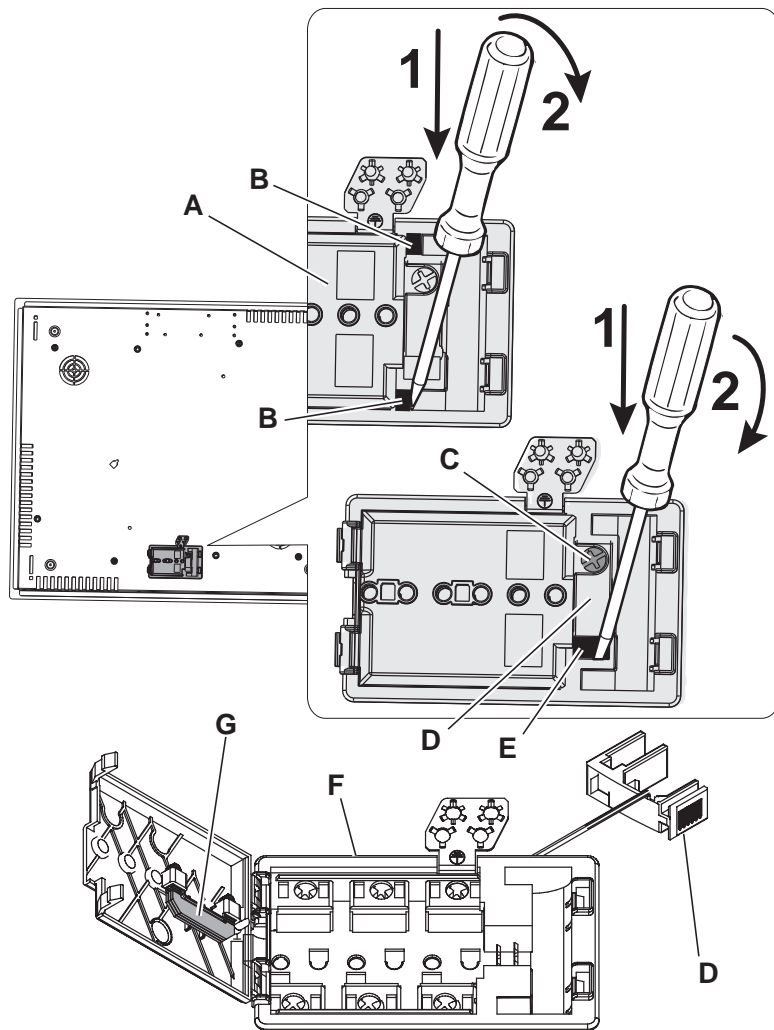


Fig. 2.2

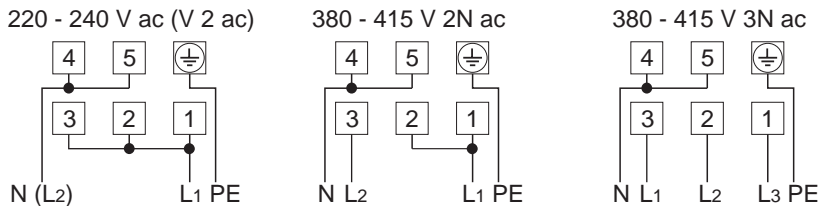

MODELS SUPPLIED WITH POWER CORD 5x1,5 mm² OR 5x2,5 mm² ALREADY FITTED TO THE APPLIANCE

- The cooktop is supplied with a power cord already fitted to the appliance and it is suitable for a single-phase type electrical connection (fig. 2.3).
- For the two-phase type electrical connection (fig. 2.4):
 - separate the black and brown wires by removing the metallic terminal;
 - remove about 5 mm of the insulation sheathing from the terminal end of the black and brown wires;
 - tightly fit a new metallic terminal (1,5 mm or 2,5 mm, depending on wire size) on the terminal end of each wire (black and brown).
- For the three-phase type electrical connection (fig. 2.5):
 - disconnect the blue and gray crimped wires from the terminal block and separate them by removing the metallic terminal on both ends (to access the terminal block see chapter “CONNECTION OF THE POWER SUPPLY CABLE”). Remove about 5 mm of the insulation sheathing from both the terminal ends of the blue and gray wires. Tightly fit a new metallic terminal (1,5 mm or 2,5 mm, depending on wire size) on both the terminal ends of each wire (blue and gray). Connect the blue and gray wires respectively to the N and L3 terminals of the terminal block and close its cover.
 - separate the black and brown wires by removing the metallic terminal. Remove about 5 mm of the insulation sheathing from the terminal ends of the black and brown wires. Tightly fit a new metallic terminal (1,5 mm or 2,5 mm, depending on wire size) on the terminal end of each wire (black and brown).

ATTENTION!

All the operations/electrical connections must be carried out by a qualified technician.




CAUTION!




Do not pierce or weld the terminal ends of the wires. This is strictly forbidden!

CAUTION!

Do not connect the power cord to the electrical power supply without the metallic terminals correctly in place.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

| “220-240 V ac (V 2 ac)” connection | | “380-415 V 2N ac” connection | | “380-415 V 3N ac” connection | |
|--|-----------------|---|----------------|---|----------------|
|  | Green - Yellow |  | Green - Yellow |  | Green - Yellow |
| N | Blue and Gray | N | Blue and Gray | N | Blue |
| L | Black and Brown | L1 | Black | L1 | Black |
| / | | L2 | Brown | L2 | Brown |
| / | | / | | L3 | Gray |

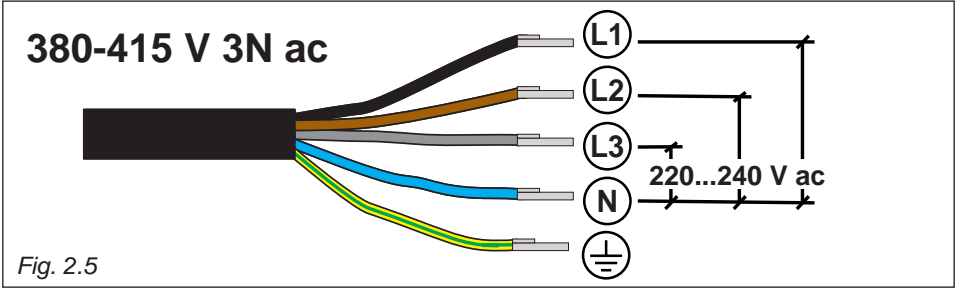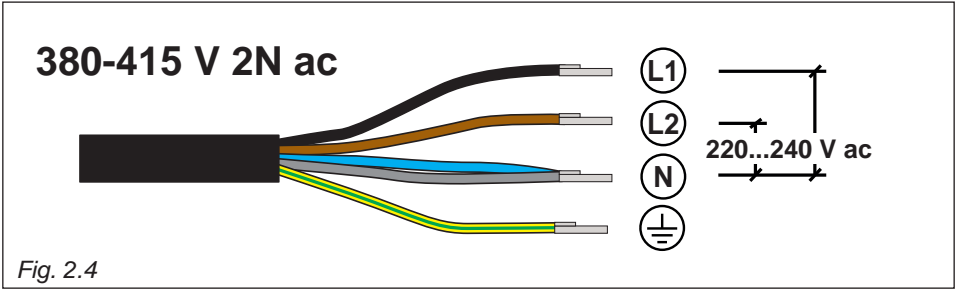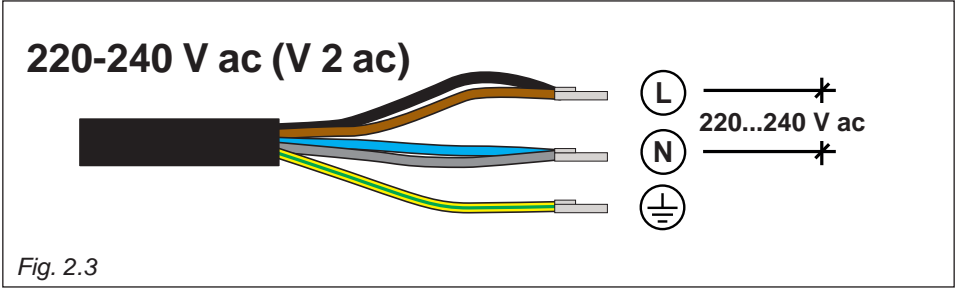

User guide

Fig. 1.1

80cm wide models


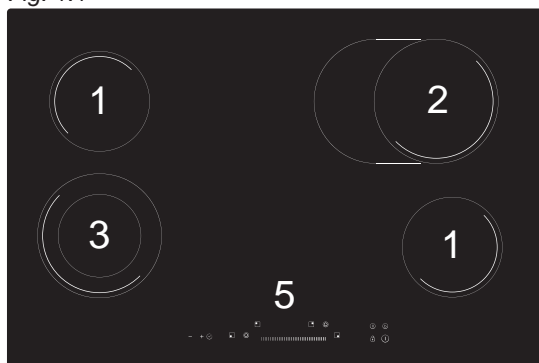


Fig. 1.2

90cm wide models

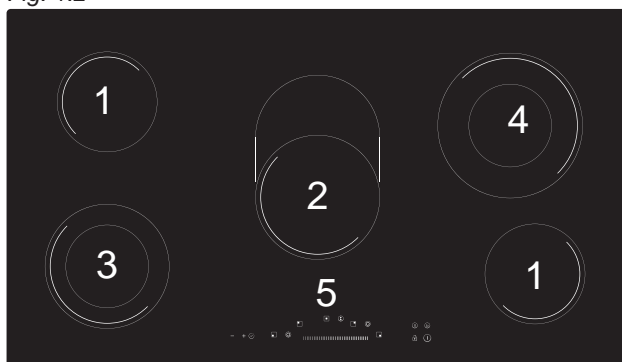

Electrical insulation Class I

VITROCERAMIC COOKING HOB

- | | |
|---|-------------|
| 1. "Hi-Light" single zone Ø 145 mm | 1200 W |
| 2. "Hi-Light" double zone (oval) Ø 180 x 260 mm | 2200/1400 W |
| 3. "Hi-Light" double zone Ø 180/120 mm | 1700/700 W |
| 4. "Hi-Light" double zone Ø 210/120 mm | 2200/750 W |
| 5. Touch controls | |


NOTE: These figures are indicative only. Symbols may vary.

Attention:

Detach the appliance from the mains if the ceramic glass is cracked and contact the After-Sales Service.

Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

Fig. 1.3

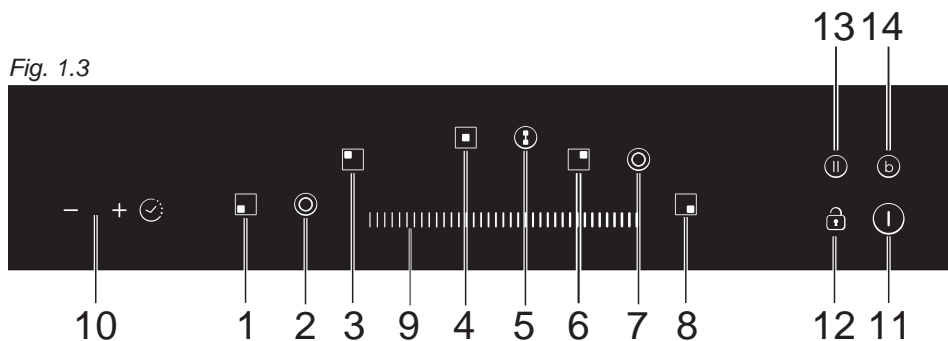

TOUCH-CONTROL DESCRIPTION

1. Front left cooking zone key
2. Front left double zone function key
3. Rear left cooking zone key
4. Central cooking zone key (only for model in fig. 1.2)
5. Central double zone function key (only for model in fig. 1.2)
6. Rear right cooking zone key
7. Rear right double zone function key
8. Front right cooking zone key
9. Setting selector
10. Automatic cooking timer key
11. ON/OFF key
12. Child lock selection key
13. Pause function key
14. Booster function key

Notes:

- Each selection (by touching one of the keys) is indicated by an acoustic signal (beep).
- The touch control area is switched off automatically (and a warning beep sounds for 10 seconds):
 - if one or more keys are touched for more than 10 seconds;
 - if an object is positioned on the touch control area;
 - in the case of spillage of liquids on the control keys.

Attention: Detach the appliance from the mains if the ceramic glass is cracked and contact the After-Sales Service. Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

2

HOW TO USE THE TOUCH CONTROL

The ceramic surface of the hob allows a fast transmission of heat in the vertical direction, from the heating elements underneath the ceramic glass to the pans set on it.

The heat does not spread in a horizontal direction, so that the glass stays “cool” at only a few centimeters from the cooking plate.

The cooking zones are shown by painted disks on the ceramic surface.

Before switching on the cooktop make sure that it is clean.

Important note:

The heating elements incorporate a thermolimiter that switches the element ON/OFF during all settings to protect the ceramic glass from overheating.

The use of incorrect pans and/or wrong pan positioning will cause the temperature limiter to operate more frequently, resulting in a reduction of cooking performance.

The temperature limiter can be seen under the glass dissecting the element. This is not a fault with the appliance.

HI-LIGHT RADIANT ZONES (fig. 2.1)

The heating element is formed of a coil of resistant material which reaches the working temperature quickly.

HI-LIGHT DOUBLE ZONE and HI-LIGHT OVAL ZONE (fig. 2.2, 2.3)

The heating element is formed of a 2 coils of resistant material which reaches the working temperature quickly (see pag. 26).



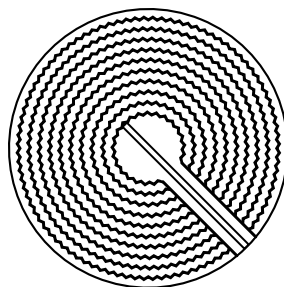


Fig. 2.1

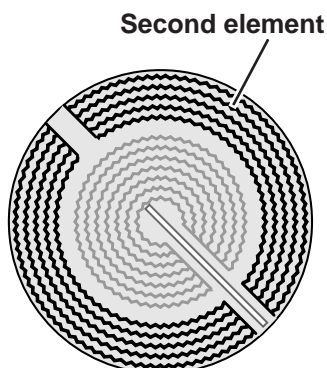

DOUBLE ZONE

Fig. 2.2

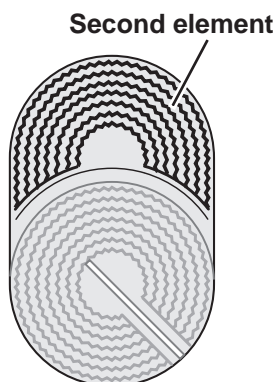

DOUBLE ZONE (OVAL)

Fig. 2.3

Notes:



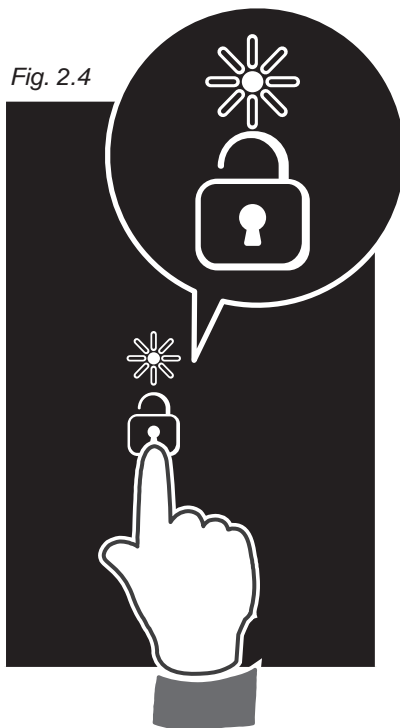
- Each selection (by pressing one of the keys) is indicated by an acoustic signal (beep).
Any time the cooktop is connected to the electrical supply or after a power failure, the safety key-lock protection will be automatically activated (indicator light **ON** above key ).
- Before starting to use the cooktop deactivate the key-lock protection by pressing the key .
This operation is necessary for the keyboard calibration, to adapt the sensibility of the keys (do not use gloves, use a clear finger).
- If an object is positioned on the touch control area, or in the case of spillage of liquids on control keys, the touch control is switched off automatically 10 seconds after having detected the object/liquid.
- When the touch control reaches an ambient temperature above 96°C, one heating element is switched off. This element cannot be used until the temperature falls below 89°C.

Fig. 2.4



HOW TO SWITCH ON/OFF THE COOKTOP

Switching ON

Touch the key ① until the touch control system is lit (fig. 2.5). The displays of the cooking zones read “0”.

Notes:


- If the safety key-lock protection is active, the touch control can be turned **ON** only after having deactivated this protection.
- Auto switch-off: If a cooking zone is not turned **ON** within 10 seconds, the touch control will automatically switch off.

Switching OFF

The cooktop may be switched **Off** at any time by pressing the key ①.

If any cooking zones are turned **On**, they will be turned **Off**.

Fig. 2.5

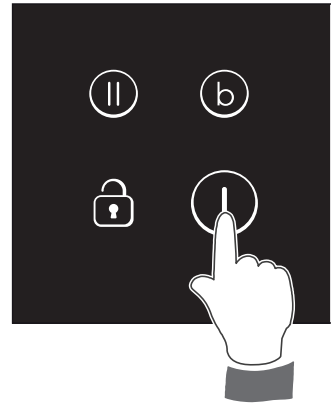


POWER IGNITION AND ADJUSTMENT OF A COOKING ZONE

To turn On a cooking zone the cooktop must be switched On (see section “HOW TO SWITCH ON/OFF THE COOKTOP”).


- Select a cooking zone by touching the relevant display of the cooking zone to be used (fig. 2.6).
- Select a setting on the selector [between “1” (minimum) and “9” (maximum)]: touch at one point to “jump” to a specific setting or slide your finger along the selector (fig. 2.7).
- The cooking zone display shows the selected level.
- The power level can be modified at any time.

Fig. 2.6

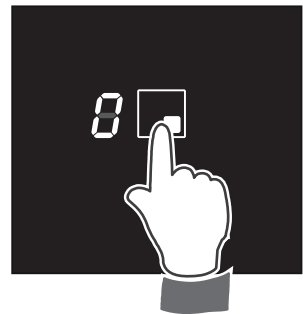

Increase

Fig. 2.7

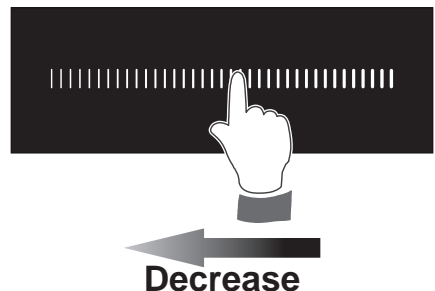


FUNCTIONING OF THE DOUBLE COOKING ZONE

The double cooking zone consists of two circuits, which may be used in the following modes:

- Reduced cooking zone: only the first heating unit is switched **ON**.
- Extended cooking zone: the first and second heating circuits are both switched **ON**.

Turn on the cooking zone as described in the section: "POWER IGNITION AND ADJUSTMENT OF A COOKING ZONE"; only the first heating unit will switch on.

Press the key  to operate also the second heating circuit (the indicator light close to the display of the cooking zone will light up), then set the desired power level.


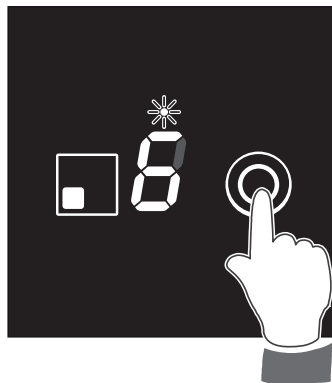
To turn off the second heating circuit press the key  (the indicator light close to the display of the cooking zone will go out).

Fig. 2.8



AFTERHEAT IN COOKING ZONE/S

When switching off a cooking zone (power level "0"), if the temperature of the zone is too warm to be touched the display will show alternately "H" and "0".

Whenever the touch control is switched off, the residual heat is shown by a static "H".

"H" is turned **OFF** when the cooking zone temperature drops below 65 °C.


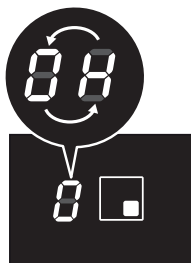


Fig. 2.9

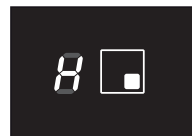

BOOSTER FUNCTION

Fig. 2.10


This function allows the cooking zone to operate at the “Booster” maximum power for maximum 10 minutes; it could be used, for example, to rapidly heat up large amount of water.

To activate the “Booster” function:

- Set the power level “9” on the selected cooking zone, then just touch the key (b) until the relevant display shows “P”.
- At the end of the “Booster” program (10 minutes) the cooking zone is automatically set to the power level “9”.

To deactivate the “Booster” function:

- Set a different power level on the selected cooking zone.
- or
- Switch Off the cooktop.

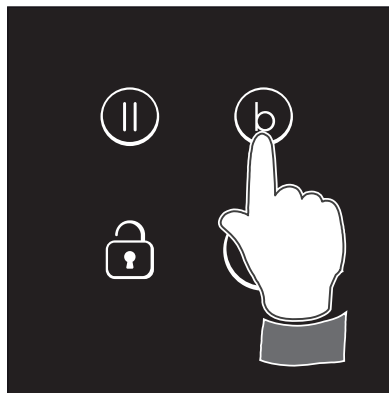

IMPORTANT NOTES:

- The “Booster” function is not suitable for use with non water based cooking.
- Do not use this function for heating oil (e.g. deep fat frying).

SAFETY KEY-LOCK TO PROTECT CHILDREN


Fig. 2.11

This function locks the touch-control keys against unwanted activation.

To activate the key-lock press the key (lock icon); the indicator light close to the lock symbol will light up.

- Cooking zone/s operating (power level already set) - with the key-lock protection active it is only possible to switch off the cooktop.
- Cooktop off - with the key-lock protection active it is not possible to use the cooktop. To use the cooktop deactivate this protection.

To deactivate the key-lock protection just press the key (lock icon); the indicator light close to the lock symbol will go out.

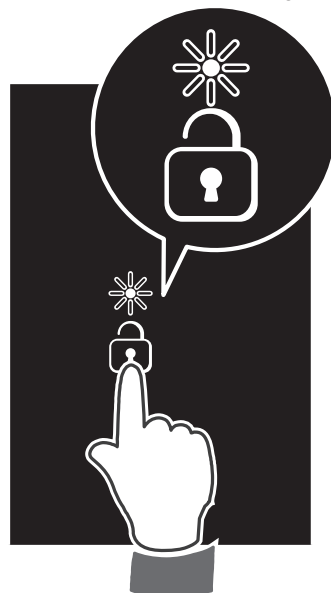

PROGRAM FOR AUTOMATIC SWITCHING OFF OF A COOKING ZONE

Fig. 2.12

This function permits to set a timer from “1” to “99” minutes for automatic turning Off the cooking zone/s.

With the cooktop switched On:

- Select the cooking zone and set the desired power level.
- Within 8 seconds, touch the timer key \oplus or \ominus (the led indicating the programmed zone starts blinking) and set the timer:

By pressing the key \oplus the initial value is “0”.

By pressing the key \ominus the initial value is “99”.

- The time can be changed at any time following the same procedure here above indicated (selecting previously the cooking zone).
- To program another cooking zone, repeat as described above.

NOTE: The led indicating the cooking zone closest to the end of the program, is blinking. In the case of one programmed zone only, the led is blinking.


Now the program for automatic switching Off is complete.

At the end of the countdown the cooking zone will switch Off automatically, an acoustic signal (beep) will sound (for 1 minute only), “00” will flash on the timer display and the led next to the timer display (indicating the programmed zone) will blink.

Touch one of the keys to stop the beep.

The program for automatic switch Off can be cancelled at any time:


- by resetting the timer to “00”.
- by pressing the \oplus and \ominus keys at the same time.

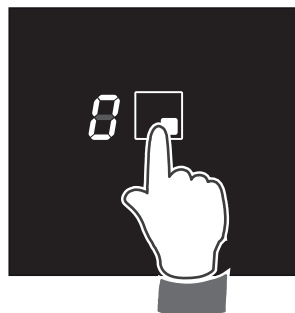

Increase



Fig. 2.13

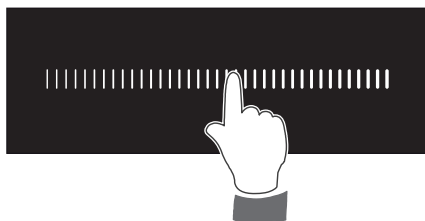

Decrease

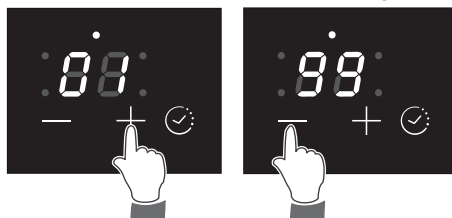



Fig. 2.14

“FAST HEATING” FUNCTION

To activate the “Fast Heating” function:

- Press the key ① and keep it pressed until the touch control is lighted.
- Select a cooking zone by touching the relevant display of the cooking zone to be used.
- Select a setting on the selector (between “1” and “9”): touch at one point to “jump” to a specific setting or slide your finger along the selector (fig. 2.7) and press for several seconds, the operation is indicated by an acoustic signal (beep). The cooking zone display alternates between set power level and .

This function allows the cooking zone to operate at the maximum power (100%) for a time proportional to the selected power level; after this time the cooking zone will operate at the selected level.

This function is available on all the cooking zones.

While this function is operating it is possible, at any time, to increase the selected power level but it is not possible to decrease the power; by touching the selector to a lower level the function will be disabled.

The function will be disabled also by press the key ① or by selecting the “Booster” function.

Fig. 2.15

PAUSE MODE


When at least one cooking zone is in operation, the cooking may be paused temporarily by touching the key ② (fig. 2.15).

Already programmed automatic cookings are stopped and do not continue during the pause. The displays show a zero iterative (the leds light up in sequence).

The pause mode may last for max 10 minutes. If the pause mode is not terminated within the time, the cooktop switches Off automatically.


To deactivate the pause mode touch again the key ②.

The cooktop may be switched Off at any time with the On/Off key; any possibly program already set (pause mode included) is then terminated.

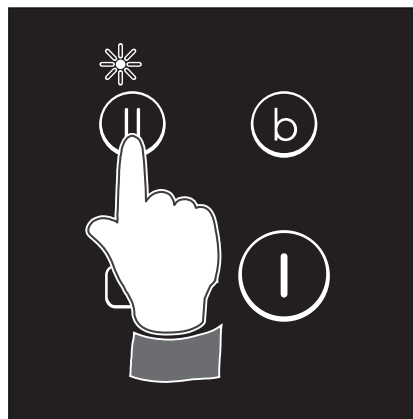

IMPORTANT: It is not possible to activate the key-lock with the pause mode.

Cooking
zone
power
level

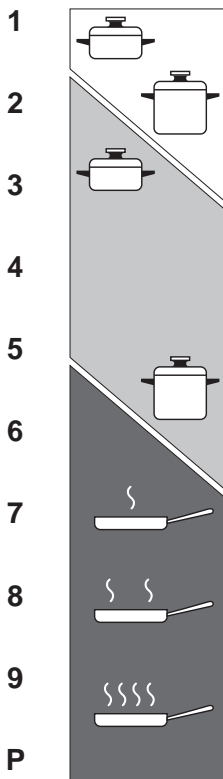

Heating



Cooking



Roasting-frying

COOKING HINTS

| Knob setting | TYPE OF COOKING |
|----------------------|--|
| 0 | Switched OFF |
| 1 2 | For melting operations (butter, chocolate). |
| 3 | To maintain food hot and to heat small quantities of liquid (sauces, eggs). |
| 4 5 | To heat bigger quantities; to whip creams and sauces (vegetables, fruits, soups). |
| 5 6 | Slow boiling, i.e.: boiled meats, spaghetti, soups, continuations of steam cooking of roasts, stews, potatoes. |
| 6 | For every kind of frying, cutlets, uncovered cooking, i.e.: risotto. |
| 7 8 | Browning of meats, roasted potatoes, fried fish, omelettes, and for boiling large quantities of water. |
| 9 | Fast frying, grilled steaks, etc. |
| P | Rapidly heat up large amount of water. |
| | Switching on the second element (Double radiant plate only). |


After a short period of use, experience will teach you which setting is the right one for your needs.

Fig. 2.16


SAFETY HINTS

- Before you switch the hob on, make sure you know which knob controls the required cooking zone. We advise you to set the pan over the cooking zone before switching it on.
- Do not use pots and pans with rough bases (pay attention to cookware made of cast-iron). Rough bases can damage the glass surface of the hob (scratches).
- Always ensure that the base of your saucepan is clean and dry before placing on the hob.
- Pots with aluminium bottoms may leave silver streaks or spots on the hob.
- Do not leave wet or damp lids on the hob.
- The glass-ceramic surface and pans must be clean. Carefully eliminate any food remains (especially containing sugar), dirt etc. with the aid of a cleansing agent.
- Pan handles should never stand out beyond the kitchen worktop, as there is a great danger of knocking the pan over. This will also ensure that children cannot reach them.
- **Do not use the hob if the glass surface is broken or cracked in any way. Please disconnect the hob from the mains and contact the After-Sales Service.**
- Do not lean over the cooking plate when in use.
- Do not lay cooking foil or plastic materials on the ceramic surface when it is hot.
- Remember that the surface remains hot for a long time (about 30 min.) after the cooking plate has been switched off.
- Follow the cleaning instructions carefully.
- Never use the glass surface for storage.


**DISTORTED
PANBASE
WRONG**

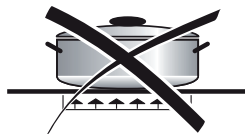


**DISTORTED
PANBASE
WRONG**

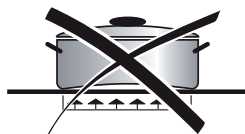


**LEVEL
PANBASE
CORRECT**



**WRONG
WASTING
POWER**

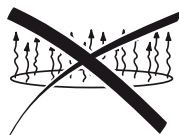

**WRONG
WASTING
POWER**

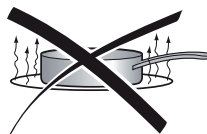

**WRONG
WASTING
POWER**



**CORRECT
COMPLETE USE
OF THE HEAT**



Fig. 2.17

**DO NOT USE GLASSWARE ON CERAMIC
HOB. DO NOT USE PANS WITH ROUGH
CIRCULAR MACHINED BASE.**



Fig. 2.18

OPERATION TIME LIMIT OF COOKING ZONES

Each cooking zone is automatically switched **OFF** after a maximum preset time if no operation is performed.

The maximum preset time limit depends on the set power level, as illustrated in this schedule.

Each operation on the cooking hob by using the keys **+** and **—**, will reset the maximum operation time at its initial value.

| Power level of Cooking zones | Operation time limit |
|------------------------------|----------------------|
| 1 | 10 hours |
| 2 | 5 hours |
| 3 | 5 hours |
| 4 | 4 hours |
| 5 | 3 hours |
| 6 | 2 hours |
| 7 | 2 hours |
| 8 | 2 hours |
| 9 | 1 hour |
| P | 10 minutes |

ERROR CODE ON THE DISPLAY/S

If an error message appears on the display/s (the display/s show/s “**F**” and another character alternating - e.g. “**F**” and “**E**”, “**F**” and “**D**”,):

1. Disconnect the cooktop from the mains.
2. Reconnect the cooktop and turn it on.
3. Wait for about two minutes and if the problem does not appear the cooktop can be used.
4. If the problem does not disappear repeat step from 1 to 3.
5. If the problem continues, disconnect the cooktop from the mains and contact your Authorised Service Centre.



DISPLAY/S OFF OR NOT CORRECTLY OPERATING

If a display or the displays are only partially lit or not lit.


1. Switch off the cooktop and disconnect it from the mains.
2. Reconnect the cooktop and turn it on.
3. Wait for about two minutes and if the problem does not appear the cooktop can be used.
4. If the problem does not disappear repeat step from 1 to 3.
5. If the problem continues, disconnect the cooktop from the mains and contact your Authorised Service Centre.

MAXIMUM POWER MANAGEMENT


The cooktop maximum power limit (6300 W for model in fig. 1.1 or 8500 W for model in fig. 1.2) can be reduced to a minimum of 2500 W.

To change the maximum power limit (only within 30 seconds from the electrical connection):

- Connect the appliance to the electrical power supply.
- Press at the same time the **+** and **—** keys controlling the timer and the key **(b)**.

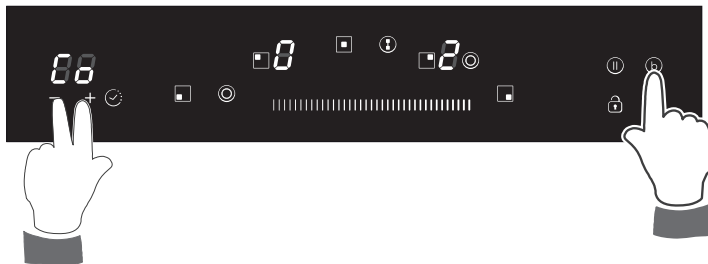


- Once the beep sounds, release the keys and press the key **(b)**. A beep sounds and the timer display shows "**Po**": the current set maximum power limit can be read on the displays of the rear cooking zones (e.g. rear left zone = "**6**" and rear right zone = "**3**" : maximum power limit = 6300 W).

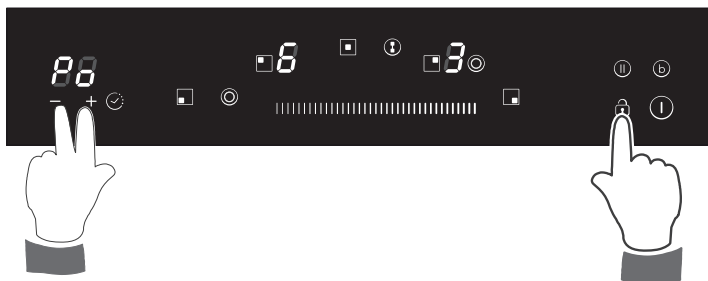

- Touch the keys **+** or **—** for selecting a new maximum power limit. Then, to set the new maximum power limit (shown on the displays of the rear cooking zones) press at the same time the **+** and **—** keys controlling the timer and the key **(b)**. If this is not done within 120 seconds, the system resets automatically and the new power limit is not set.

POWER MANAGEMENT WHEN USING THE COOKTOP

When using one or more cooking zones if the total power set on the zones is greater than the maximum power limit, an acoustic signal (beep) sounds and the last set zone shows "**r**" for 3 seconds; then the power of that zone is automatically reduced within the allowed limit.

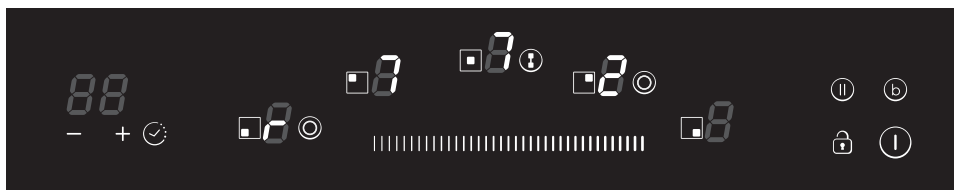

3

CLEANING AND MAINTENANCE

GENERAL ADVICE

- **Before you begin cleaning, you must ensure that the appliance is switched off and disconnected from the electrical power supply.**
- It is advisable to clean when the appliance is cold.
- Avoid leaving alkaline or acidic substances (lemon juice, vinegar, etc.) on the surfaces.
- Avoid using cleaning products with a chlorine or acidic base.
- **Do not use a steam cleaner because the moisture can get into the appliance thus make it unsafe.**
- **Important: The use of suitable protective clothing/gloves is recommended when handling or cleaning of this appliance.**
- **Do not scratch the cooktop with cutting or sharp objects.**
- **Important: The manufacturer declines all liability for possible damage caused by the use of unsuitable products to clean the appliance.**
- Clean surfaces with a damp cloth and use gentle, neutral cleaning products. Dry with a clean, dry cloth.
- **IMPORTANT:** Do not use any abrasive products (e.g. certain types of sponge) and/or aggressive products (e.g. caustic soda, products containing corrosive substances), which could cause irreparable surface damage.


WARNING!

When correctly installed, your product meets all safety requirements laid down for this type of product category. However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.

CLEANING THE CERAMIC HOB

- Remove spillages and other types of incrustations.
- Dust or food particles can be removed with a damp cloth.
- If you use a detergent, please make sure that it is not abrasive or scouring. Abrasive or scouring powders can damage the glass surface of the hob.
- All traces of the cleaner must be removed with a damp cloth.
- Dust, fat and liquids from food that has boiled over must be removed as soon as possible.
- If they are allowed to harden they become increasingly difficult to remove. This is especially true in the case of sugar/syrup mixtures which could permanently pit the surface of the hob if left to burn on it.
- If any of these products has melted on the ceramic surface, you should remove it immediately (when the surface is still hot) by using a proper scraper to avoid any permanent damage to the surface of the hob.
- Do not put articles on the hob which can melt: i.e plastic, aluminium foil, sugar, sugar syrup mixtures etc.
- Avoid using a knife or other sharp utensil as these may damage the ceramic surface.
- Do not use steel wool or an abrasive sponge which could scratch the surface permanently.

Fig. 3.1

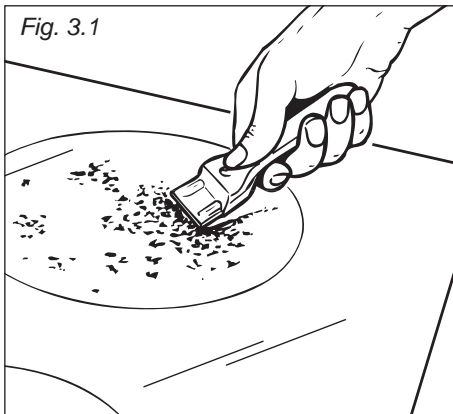



Cod. 1106443/GB - R0

GB

The manufacturer will not be responsible for any inaccuracy resulting from printing or transcript errors contained in this brochure. We reserve the right to carry out modifications to products as required, including the interests of consumption, without prejudice to the characteristics relating to safety or function.