



MIC25GDFX-04
MIC25GDFX-19

MICROWAVE OVENS
USER INSTRUCTIONS

GB



0002-958





Microwave Oven

INSTRUCTION MANUAL

MODEL: MIC25GDFX-04
MIC25GDFX-19

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	MIC25GDFX-04/MIC25GDFX-19
Rated Voltage:	230-240V~50Hz
Rated Input Power(Microwave):	1450W
Rated Output Power(Microwave):	900W
Rated Input Power(Grill):	1000W
Oven Capacity:	25L
Turntable Diameter:	Ø315mm
External Dimensions(LxWxH):	595x400x388mm
Net Weight:	Approx. 17.8kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.

20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. Accessible parts may become hot during use. Young children should be kept away.
28. Steam cleaner is not to be used.
29. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
30. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

- 31.WARNING: The appliance and its accessible parts become hot during use.Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- 32.The microwave oven must be operated with the decorative door open.(for ovens with a decorative door.)
- 33.Surface of a storage cabinet can get hot.

**READ CAREFULLY AND KEEP FOR FUTURE
REFERENCE**

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

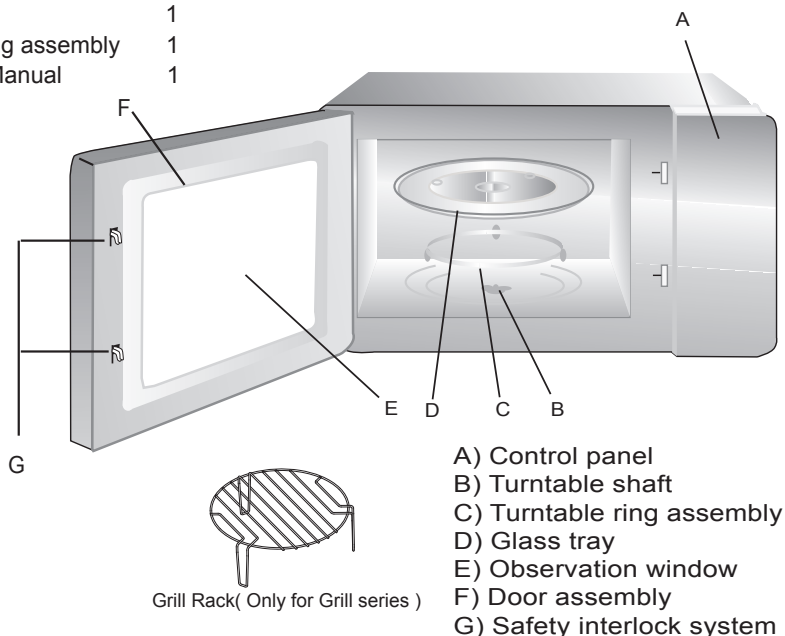

Turntable Installation

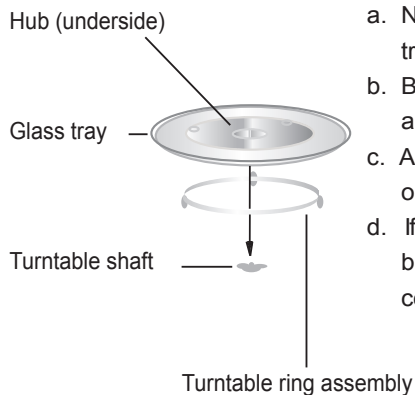

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Installation and connection

- 1.This appliance is only intended for domestic use.
- 2.This oven is intended for built-in use only.It is not intended for counter-top use or for use inside a cupboard.
3. Please observe the special installation instructions.
- 4.The appliance can be installed in a 60cm wide wall-mounted cupboard(at lease 55cm deep and 85cm off the floor).
- 5.The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
- 6.The mains voltage must correspond to the voltage specified on the rating plate.
- 7.The socket must be installed and connecting cable must only be replaced by a qualified electrician.If the plug is no longer to accessible following installation,an all-pole disconnecting device must be present on the installation side with a contact gap of at lease 3mm.
- 8.Adapters,multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.



**The accessible surfacemay
be hot during operation.**






Operation Instructions

1. Clock Setting



When the microwave oven is electrified, the LED will display "0:00", buzzer will ring once.

1) Press "|


2) Turn " " to adjust the hour figures, the input time should be within 0--23.

3) Press "|

4) Turn " " to adjust the minute figures, the input time should be within 0--59.








5) Press "|

Note: 1) If the clock is not set, it would not function when powered.




2) During the process of clock setting, if you press " STOP", the oven will go back to the previous status automatically.





2. Microwave Cooking


Press "||


"|| " for times or turn " " to choose the power you want, and "P100", "P80" "P50", "P30" or "P10" will display for each added press. Then press " +30" " to confirm, and turn " " to set cooking time from 0:05 to 95:00. Press " +30" " again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

1) Press "|| " once, the screen display "P100".

2) Press "|| " once again or turn " " to choose 80% microwave power.




3) Press " +30" " to confirm, and the screen displays "P 80".

4) Turn " " to adjust the cooking time until the oven displays "20:00".




5) Press " +30" " to start cooking .








Note: the step quantities for the adjustment time of the coding switch are as follow:

0--1 min	: 5 seconds
1--5 min	: 10 seconds
5--10 min	: 30 seconds
10--30 min	: 1 minute
30--95 min	: 5 minutes




"    "	Pad instructions	Microwave Power	Grill Power
Order	Display		
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	
6	G	0%	100%
7	C-1	55%	45%
8	C-2	36%	64%


3. Grill or Combi. Cooking


Press "    " once, "P100" displays and then press


"    " for times or turn the "  " to choose the power you want, and "G", "C-1" or "C-2" will display for each added press. Then press "  +30" "to confirm, and turn "  " to set cooking time from 0:05 to 95:00. Press "  +30" " again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.

1) Press "    " once, the screen display "P100".

2) Press "    " times or turn "  " to choose combi. 1 mode.

3) Press "  +30" " to confirm, and the screen displays "C-1".





4) Turn "  " to adjust the cooking time until the oven displays "10:00".

5) Press "  +30" " to start cooking .



Note: If half the grill time passes, the oven sounds twice, and this is normal.


In order to have a better effect of grilling food, you should turn the food over, close the door, and then if no operation the oven will continue cooking.


4. Quick Start

- 1) In waiting state, Press " +30" " to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave, grill, combi. cooking or time defrost state, each press of " +30" " can increase 30 seconds of cooking time.
- 3) In waiting state, turn " " anti-clockwise to set cooking time with 100% microwave power, then press " +30" " to start cooking.



5. Defrost By Weight


- 1) Press " |  " once, and the oven will display "dEF1".


- 2) Turn " " to select the weight of food from 100 to 2000 g.

- 3) Press " +30" " to start defrosting.


6. Defrost By Time


- 1) Press " |  " twice, and the oven will display "dEF2".


- 2) Turn " " to select the defrost time.



- 3) Press " +30" " to start defrosting.


7. Auto Menu


- 1) Turn " " right to choose the menu, and "A-1" to "A-10" will display, which means pizza, potato, meat, fish, vegetable, beverage, pasta, popcorn, chicken and reheat.


 - 2) Press " +30" " to confirm.

 - 3) Turn " " to choose the default weight as the menu chart.

 - 4) Press " +30" " to start cooking.
- Example: If you want to use "Auto Menu" to cook fish for 350g.
- 1) Turn " " clockwise till "A-4" display.

 - 2) Press " +30" " to confirm.

 - 3) Turn " " to select the weight of fish till "350" display.

 - 4) Press " +30" " to start cooking.

The menu chart:

Menu	Weight	Display
A-1 Pizza	200 g	200 g
	400 g	400 g
A-2 Potato	200 g	200 g
	400 g	400 g
	600 g	600 g
A-3 Meat	250 g	250 g
	350 g	350 g
	450 g	450 g
A-4 Fish	250 g	250 g
	350 g	350 g
	450 g	450 g
A-5 Vegetable	200 g	200 g
	300 g	300 g
	400 g	400 g
A-6 Beverage	1cup(120ml)	1
	2cup(240ml)	2
	3cup(360ml)	3
A-7 Pasta	50g(with 450ml cold water)	50g
	100g(with 800ml cold water)	100g
A-8 Popcorn	50g	50g
	100g	100g
A-9 Chicken	200g	200g
	400g	400g
	600g	600g
	800g	800g
A-10 Reheat	200g	200g
	400g	400g
	600g	600g

8. Program set in Advance





1) Set the clock first. (Consult the instruction of clock setting.)


2) Input the cooking program. Two stages can be set at most.


Defrost should not be set as the cooking program.


Example: If you want to cook with 80% microwave power for 7 minutes, operate it as the following:



a. Press "  |  |  " once, the screen display "P100".


b. Press "  |  |  " once again or turn "  " to choose 80% microwave power.



c. Press " +30" " to confirm, and the screen displays "P 80".

d. Turn " " to adjust the cooking time till the oven displays "7:00".


After the aboved steps, be careful not to press " +30" " to start cooking.

3) Press " |  " , the hour figures will flash.

4) Turn " " to adjust the hour figures, the input time should be within 0--23.

5) Press " |  " , the minute figures will flash.



6) Turn " " to adjust the minute figures, the input time should be within 0--59.


7) Press " +30" " to finish setting. If the door is closed, buzzer will ring twice when the time arrives, then cooking will start automatically.




9. Multi-section cooking





At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.


Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:


1) Press " |  " twice, and the oven will display "dEF2".


2) Turn " " to select the defrost time till "5:00" display.

3) Press " |  |  " once, the screen display "P100".








4) Press " |  |  " once again or turn " " to choose 80% microwave power.

5) Press " +30" " to confirm, and the screen displays "P 80".



6) Turn " " to adjust the cooking time till the oven displays "7:00".

7) Press " +30" " to start cooking, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. when cooking finish, buzzer sounds five times.

10. Inquiring Function

- (1) In states of microwave, grill and combination cooking, press "  |  |  ", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to the former state;
- (2) In cooking state, press "  | : " to inquire the time and the time will display for 3 seconds.
- (3) In preset state, press "  | : " to inquire the preset time, and the preset time will display for 3 seconds.

11. Lock-out Function for Children

Lock: In waiting state, press "  STOP " for 3 seconds, there will be a long beep denoting entering the children-lock state and the current time will display if the time has been set, otherwise, the LED will display "  ".

Lock quitting: In locked state, press "  STOP " for 3 seconds, there will be a long "beep" denoting that the lock is released.

Trouble shooting

If something does trouble shooting; before seeking assistance carry out the following checks first.

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.

CUSTOMER ASSISTANCE SERVICE

If you cannot identify the cause of the operating anomaly: switch off the appliance (do not subject it to rough treatment) and contact the Assistance Service.

PRODUCT SERIAL NUMBER. Where can I find it?

It is important that you to inform the Assistance Service of your product code and its serial number (a 16 character code which begins with the number 3); this can be found on the guarantee certificate or on the data plate located on the appliance.

It will help to avoid wasted journeys to technicians, thereby (and most significantly) saving the corresponding callout charges.



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

تتميز هذه الأجهزة وفقا للتوجيهات الأوروبية 96/2002/اي سي على نفايات المعدات الكهربائية والإلكترونية (دبليو ئي ئي ئي) من خلا ضمان أنه تم التخلص من هذا الجهاز بشكل صحيح، سوف تساعد على منع الآثار السلبية المحتملة على البيئة و الصحة البشرية، التي يمكن، ان تكون ناتجة عن معالجة غير مناسبة لنفايات هذا الجهاز



الرمز على المنتج يشير إلى أن هذا المنتج لا يعامل معه معاملة النفايات المنزلية، بل يجب تحويله إلى مركز تجميع و تدوير نفايات المعدات الكهربائية والإلكترونية تكون عملية التدمير وفقا للأنظمة البيئية المحلية للتخلص من النفايات

لمزيد من المعلومات التفصيلية حول الانتعاش والعلاج وإعادة تدوير هذا المنتج ، يرجى الاتصال بالمكتب المحلي لمدينة الخاص بك ، خدمة التخلص من النفايات المنزلية او المحل الذي أشتريت الجهاز منه

في حالة مواجهة أية مشكلة قم بفحص التالي قبل أن يطلب المساعدة

طبيعي	
قد يكون تدخل للإذاعة و التلفزيون عندما يشتغل المايكرويف، وهو مشابه لتدخل الأجهزة الكهربائية الصغيرة مثل الخلاط، مكنسة كهربائية، مروحة كهربائية. انه أمر طبيعي	تدخل المايكرويف في استقبال التلفزيون
عند الطبخ على المايكرويف مع انخفاض القوة، قد تصبح ضوء الفرن خافتا، انه امر طبيعي	ضوء فرن خافت
عند الطبخ ، قد يخرج البخار من المواد الغذائية. ومعظمه يخرج من الخارج. ولكن قد تتراكم البعض في مكان بارد مثل باب الفرن. انه امر طبيعي	البخار المتراكم على الباب ، الهواء الساخن من الفتحات
يحظر تشغيل الوحدة من دون طعام داخله، انه امر خطير جدا	بدأ الفرن يشتغل عرضيا بدون طعام فيه

المشكلة	السبب المحتمل	الحل
لا يبدأ الفرن	(1) لم يتم توصيل سلك الطاقة بالمقبس بإحكام	
	(2) تدفق صمام أو تعمل كسارة دائرة	
	(3) مشكلة مع منفذ	
لا يسخن الفرن	(4) لم يغلق الباب جيدا	
يخرج من القرص الدوار الزجاجي ضوضاء عندما يشتغل المايكرويف	تقدر مسند البكرة و قاع الفرن	

خدمات مساعدة العملاء

إذا لم تتمكن من تحديد سبب شذوذ التشغيل : قم بإيقاف الجهاز (لا تقم بالمعالجة الخشنة) واتصل بخدمة المساعدة مسلسل المنتج: أين يمكنني العثور عليه ؟

ومن المهم إبلاغ خدمة المساعدة برمز المنتج والرقم التسلسلي له (رمز من 16 حرفا الذي برقم 3) ؛ تجد هذا على شهادة ضمان أو على لوحة البيانات الموجودة على الجهاز


وسوف تساعد على تجنب الرحلات للفقيرين، وبالتالي (والأهم) حفظ رسوم الإتصالات

10 وظيفة الإستعلام


- (1) في أوضاع طهي مايكروويف، شواء و مجموعة، إضغط على "  " فتظهر الطاقة الحالية لمدة 3 ثوان، وبعد 3 ثوان سيعود الفرن إلى الوضع السابق
- (2) في وضع الطهي، إضغط على "  |  " لإستعلام الوقت فيظهر الوقت لمدة 3 ثوان
- (3) في وضع بريسييت، إضغط على "  |  " لإستعلام الوقت، فيظهر الوقت لمدة 3 ثوان

11 وظيفة الإغلاق للأطفال

- إغلاق: في وضع الإنتظار، إضغط على "  STOP " لمدة 3 ثوان، فيكون هناك بيب طويل يشير إلى أنه يدخل إلى وضع الإغلاق للأطفال و يظهر مؤشر الإغلاق إذا كان قد تم إعداد الوقت وإلا فيظهر "  " على الشاشة
- فتح القفل: في وضع الإغلاق، إضغط على "  STOP " لمدة 3 ثوان، فيكون هناك بيب طويل يشير إلى أن القفل مفتوح

- c . إضغط على " +30" ⏸ للتأكيد، و سيظهر "P80" على الشاشة
- d . دور "  لضبط وقت الطهي حتى يظهر "7:00" على الشاشة
- بعد أن قمت بالخطوات المذكورة أعلاه، يجب الحرص على عدم الضغط على " +30" ⏸ " لبدأ الطهي

(3) إضغط على " :|✓|✓ " فتومض أرقام الساعة

(4) دور "  لضبط أرقام الساعة، يكون الوقت المدخل ما بين . - 23

(5) إضغط على " :|✓|✓ " فتومض ارقام الدقائق

(6) دور "  لضبط أرقام الدقائق، يكون الوقت المدخل ما بين . - 59


(7) إضغط على " +30" ⏸ لإنهاء الإعداد، إذا كان الباب مغلقا فيرن الجرس مرتين متى يصل الوقت، فيبدأ الطهي أوتوماتيكيا

9 طبخ متعددة الأقسام

يمكن إعداد قسمين على الأكثر للطهي. في وضع طهي متعددة الأقسام، إذا كان قسم يقوم بإزالة الصقيع فيوضع إزالة الصقيع في القسم الأول

على سبيل المثال: إذا كنت ترغب بإزالة صقيع الطعام لمدة 5 دقائق وبالتالي بالطهي مع 80% طاقة مايكروويف لمدة 7 دقائق، قم بتشغيله على النحو التالي :

(1) إضغط على " %٥٠ | %٢٠ " مرتين، و يظهر "dEF2"

(2) دور "  لضبط وقت إزالة الصقيع حتى يظهر "5:00"

(3) إضغط على " ≡|:~|≡ " مرة، يظهر "P100" على الشاشة

(4) إضغط على " ≡|:~|≡ " مرة أخرى او دور "  لإختيار 80%

(5) إضغط على " +30" ⏸ للتأكيد، و يظهر "P80" على الشاشة

(6) دور "  لضبط وقت الطهي حتى يظهر "7:00"

(7) إضغط على " +30" ⏸ لبدأ الطهي. و يرن الجرس مرة للقسم

الأول، و يعد وقت إزالة الصقيع تنازليا، و يرن الجرس مرة أخرى حين يبدأ الطهي الثاني. متى ينتهي الطهي فيرن الجرس خمس مرات

عرض	وزن	قائمة
200 غ	200 غ	A-1 بيتزا
400 غ	400 غ	
200 غ	200 غ	A-2 بطاطس
400 غ	400 غ	
600 غ	600 غ	
250 غ	250 غ	A-3 لحم
350 غ	350 غ	
450 غ	450 غ	
250 غ	250 غ	A-4 سمك
350 غ	350 غ	
450 غ	450 غ	
200 غ	200 غ	A-5 خضراوات
300 غ	300 غ	
400 غ	400 غ	
1	1 كوب (120 م ل)	A-6 شراب
2	2 كوب (240 م ل)	
3	3 أكواب (360 م ل)	
50 غ	50 غ (مع 450 م ل ماء بارد)	A-7 معكرونة
100 غ	100 غ (مع 800 م ل ماء بارد)	
50 غ	50 غ	A-8 فشار
100 غ	100 غ	
200 غ	200 غ	A-9 دجاج
400 غ	400 غ	
600 غ	600 غ	
800 غ	800 غ	
200 غ	200 غ	A-10 إعادة تسخين
400 غ	400 غ	
600 غ	600 غ	

8 إعداد البرامج مسبقا

(1) قم بإعداد الساعة أولا (استشر تعليمات إعداد الساعة)

(2) أدخل برامج الطهي، يمكن تعيين مرحلتين على الأكثر
لا يجوز تحديد إزالة الصقيع كبرامج الطهي

على سبيل المثال: إذا كنت ترغب بالطهي مع 80% طاقة مايكروويف لمدة 7 دقائق، قم بتشغيله كما يلي :

a. اضغط على "  مرة، سيظهر "P100" على الشاشةb. اضغط على "  مرة أخرى أو دور "  لإختيار 80% طاقة مايكروويف

4. البدء السريع

- (1) في وضع الإنتظار، اضغط "30" + " " لبدء الطهي مع طاقة 100% وكل ضغط إضافي يزيد 30 ثانية إلى وقت الطهي حتى يصل إلى 95 دقيقة
- (2) في وضع طهي مايكروويف، سواء، مجموعة أو وضع إزالة الصقيع، كل ضغط على "30" + " " يزيد 30 ثانية إلى وقت الطهي
- (3) في وضع الإنتظار، دور " " عكس عقارب الساعة لتحديد وقت الطهي مع 100% طاقة مايكروويف، و اضغط على "30" + " " لبدء الطهي

5. إزالة الصقيع مع الوزن

- (1) اضغط على " " % | % لتحديد وقت إزالة الصقيع مرة، ويظهر "dEF1" على الشاشة

- (2) دور " " لتحديد وقت إزالة الصقيع

- (3) اضغط على "30" + " " لبدء إزالة الصقيع

6 إزالة الصقيع مع الوقت

- (1) اضغط على " " % | % مرتين و يظهر على الفرن "dEF2"

- (2) دور " " لإختيار وقت إزالة الصقيع

- (3) اضغط على "30" + " " لبدء إزالة الصقيع

7 القائمة الآلية

- (1) دور " " إلى اليمين لتحديد القائمة وسيظهر "A-1" حتى "A-8"، على الشاشة و يعنى بها بيتزا بطاطس، لحم، خضراوات، سمك، معكرونة، حساء، ثريد

- (2) اضغط على "30" + " " للتأكيد

- (3) دور " " لتحديد الوزن الإقتراضي لجداول القائمة

- (4) اضغط على "30" + " " لبدء الطهي

على سبيل المثال: إذا كنت ترغب باستخدام "القائمة الآلية" لطهي السمك لـ 350 غ

- (1) دور " " على تجاه عقارب الساعة حتى يظهر "A-4"

- (2) اضغط "30" + " " للتأكيد

- (3) دور " " اختر وزن السمك حتى يظهر "350"

- (4) اضغط "30" + " " لبدء الطهي

تعليمات دفتر "مايكروويف/شواء/مجموعة"



خطوات	عرض	طاقة المايكروويف	طاقة الشواء
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	
6	G	0%	100%
7	C-1	55%	45%
8	C-2	36%	64%

3. طبخ الشواء او مجموعة

إضغط على "  ، سيظهر P100 على الشاشة

و إضغط على "  " مرات أو دور "  "


لإختيار الوقت المقصود و يظهر "C-1", "C-2" or "G" لكل ضغط و

إضغط "  +30 " للتأكيد، و دور "  " لإعداد وقت الطهي من 0 : 50

حتى 95 : 00 و إضغط على "  +30 " مرة أخرى لبدأ الطهي


على سبيل المثال: إذا كنت ترغب باستخدام 80% طاقة مايكروويف للطهي لمدة 20 دقيقة يمكنك استخدام الفرن على النحو التالي

على سبيل المثال: إذا كنت ترغب باستخدام 55% طاقة مايكروويف و 45% طاقة الشواء (C-1) للطهي لمدة 10 دقيقة يمكنك استخدام الفرن على النحو التالي

1) على الشاشة "P100" اضغط على "  " مرة، و يظهر

2) إضغط على "  " مرة أخرى أو دور "  " لتحديد وضع مجموعة 1

3) على الشاشة "C-1" اضغط على "  +30 " للتأكيد، و يظهر

4) دور "  " لتحديد وقت الطهي حتى يظهر "10:00" على الشاشة

5) اضغط "  +30 " لبدأ الطهي

ملاحظة : عند مضي نصف وقت الشواء، يصدر الفرن صوتا مرتين و هذا أمر طبيعي. من أجل أن يكون أفضل تأثير لشواء الطعام، حول الطعام و أغلق الباب و إذا لم تكن هناك أية عملية سيواصل الفرن الطبخ

تعليمات التشغيل

1. إعداد الساعة

عندما يتم تزويد فرن المايكرويف بالكهرباء سيظهر "00:00" ، سوف ترن الجرس مرة واحدة

(1) اضغط على " :|✓|✓ " تومض أرقام الساعة

(2) دور " ل ضبط أرقام الساعة، يكون الوقت المدخل ما بين 0 - 23

(3) اضغط على " :|✓|✓ " تومض أرقام الدقائق

(4) دور " ل ضبط أرقام الدقائق و الوقت المدخل يكون ما بين 0—59

(5) اضغط على " :|✓|✓ " لإنهاء إعداد الساعة. يموض:" و يومض الوقت

ملاحظة: (1) إذا لم يتم إعداد الساعة لا يشتغل عند توصيل الكهرباء

(2) خلال إعداد الساعة إذا قمت بالضغط على " STOP ▽ " سيعود الفرن إلى

حالة سابقة أوتوماتيكيا

2. طبخ المايكرويف

إضغط على " ≡|~|~|~ " ، سيظهر P100 على الشاشة

و اضغط على " ≡|~|~|~ " مرات أو دور " ل

لإختيار الوقت المقصود و يظهر "P10" "P30" "P50" "P80" "P100" لكل ضغط و

إضغط " +30" ▢ " للتأكيد، و دور " ل إعداد وقت الطهي من 0 : 50

حتى 95 : 00 و اضغط على " +30" ▢ " مرة أخرى لبدأ الطهي

على سبيل المثال: إذا كنت ترغب باستخدام 80% طاقة مايكرويف للطهي لمدة 20 دقيقة يمكنك استخدام الفرن على النحو التالي

(1) على الشاشة "P100" اضغط على " ≡|~|~|~ " مرة، و يظهر

(2) %إضغط على " ≡|~|~|~ " مرة أخرى أو دور " ل تحديد 80 طاقة مايكرويف

(3) على الشاشة "P80" اضغط على " +30" ▢ " للتأكيد، و يظهر

(4) دور " ل تحديد وقت الطهي حتى يظهر "20:00" على الشاشة

(5) اضغط " +30" ▢ " لبدأ الطهي

ملاحظة: إن كميات الخطوة لوقت تعديل مفتاح الترميز كالتالي

0---1 min : 5 seconds

1---5 min : 10 seconds


5---10 min : 30 seconds

10---30 min : 1 minute

30---95 min : 5 minutes

تنشيت القرص الدوار

- أ. لا تضع صينية المينا رأساً على عقب، ولا تحدد صينية المينا
- ب. يجب استخدام كلا الصينية الزجاجية و مجموعة حلقات القرص الدوار دائماً أثناء الطهي
- ج. يجب وضع الطعام و أواني الطعام على صينية زجاجية للطهي
- د. في حالة شق أو تحطم صينية زجاجية، اتصل بأقرب مركز خدمة معتمد

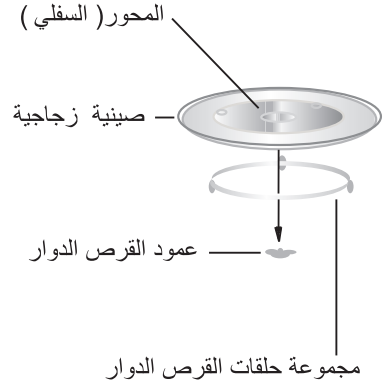

التثبيت والتوصيل

- (1) هذا الجهاز مقصود به للإستخدام المنزلي
- (2) هذا الفرن مقصود به للإستعمال الداخلي فقط. هو ليس لإستعمال قمة المضاد أو للإستعمال داخل خزانة
- (3) ترقى مراعاة تعليمات التثبيت الخاصة
- (4) يمكن تثبيت هذا الجهاز في خزانة واسعة بـ 60 سم (بما لا يقل عن 55 سم عمقا و 85 سم على الأرض)
- (5) زود هذا الجهاز بكابس و يجب وصله بمقبس مؤرض مثبت صحيحا
- (6) فولطية مأخذ رئيسي تكون موافقة لفولطية صحن التقدير
- (7) يجب تثبيت المقبس وإنما يقوم بتبديل الكابل كهربائي مؤهل، إذا كان الكابس غير موصول إليه بعد التثبيت، يجب أن يكون هناك جهاز قطع القطب على موقع التثبيت مع وجود فجوة الإتصال ما لا يقل عن 3 مم
- (8) لا تستخدم الوصلات و شرائط متعددة الإتجاهات و أسلاك التمديد، وينتج الحمل الزائد في (8) الحريق



يمكن أن تكون السطح الظاهر ساخنا وقت التشغيل

المواد التي يجب التجنب عنها في فرن المايكرويف

الأواني	الملاحظات
صينية ألومنيوم	قد يسبب الإنحناء، انقل الطعام إلى صحن مايكرويف الآمن
كارتون اغذية مع مقبض معدني	قد يسبب الإنحناء ، انقل الطعام إلى صحن مايكرويف الآمن
الأواني المعدنية أو مقطع بمعدن	يقي المعدن الطعام من طاقة المايكرويف و قطع المعدن قد يسبب الإنحناء
روابط اللية المعدنية	قد تسبب الإنحناء و يمكن أن تسبب حريقا في الفرن
أكياس ورق	قد تسبب نشوب حريق في الفرن
رغوة بلاستيكية	قد تذوب رغوة بلاستيكية أو تفسد السائل داخل عندما تتعرض لدرجات الحرارة العالية
الخشب	والخشب يجف عند استخدامها في المايكرويف وقد يتشقق او يتحطم

تركيب الفرن الخاص بك


أسماء أجزاء الفرن وملحقاتها

أزل الفرن وجميع المواد من كارتون وتجويف الفرن
الفرن يأتي مع الملحقات التالية

صينية المينا 1

مجموعة حلقات القرص الدوار 1

دليل التعليمات 1

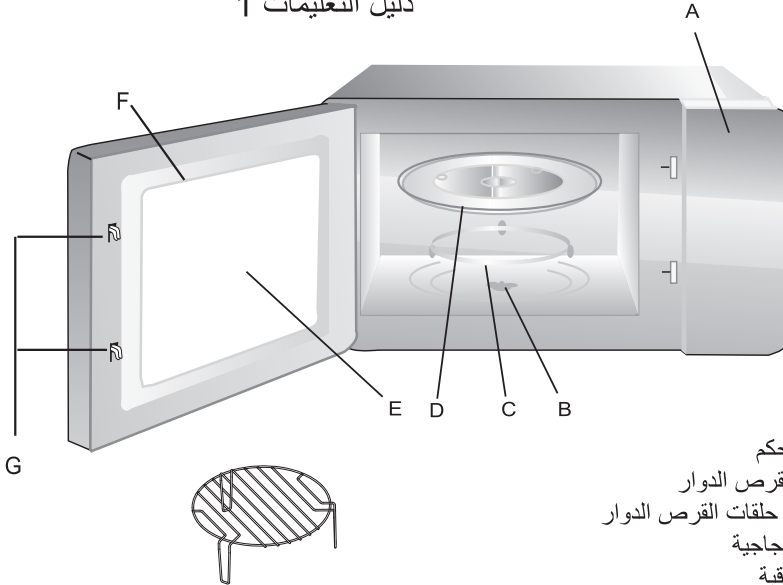

رف الشواية (فقط لمسلسل الشواية)

- (A) لوحة التحكم
- (B) مقبض القرص الدوار
- (C) مجموعة حلقات القرص الدوار
- (D) صينية زجاجية
- (E) نافذة مراقبة
- (F) مجموعة أجزاء الباب
- (G) نظام تعشيق السلامة

أواني حذر

خطر الإصابة الشخصية

ومن الخطر أن يقوم شخص غير مؤهل بأية عملية إصلاح أو خدمة التي تشمل إزالة غطاء الذي يقوم بالحماية عن التعرض لطاقة الميكروويف

انظر تعليمات حول "المواد التي يمكن استخدامها في المايكرويف أو التي ينبغي تجنبها في المايكرويف". قد يكون هناك بعض الأواني المعدنية التي لا تناسب فرن المايكرويف، إذا كنت في شك يمكنك اختبار الإناء متابعاً للإجراء أدناه اختبار الإناء :

1. إملأ وعاء الميكروويف الآمن بماء بارد ملاً كوب (250 م ل) مع الإناء في القضية
2. سخن على الطاقة القصوى لمدة 1 دقيقة
3. لاحظ الإناء بعناية. إذا كان الإناء الفارغ دافئاً، لا تستخدمه لأغراض الطهي في الميكروويف
4. لا يتجاوز وقت الطهي دقيقة

المواد التي يمكنك استخدامها في فرن المايكرويف أواني ملاحظات

رقائق الألومنيوم	يمكن استخدامها على نحو القطع الصغيرة اللطيفة لتغطية أجزاء رقيقة من اللحم أو الدواجن لمنع الإفراط في الطهي. يمكن أن يحدث انحناء في الرقائق إذا وضعت قريبة جداً من جدران الفرن. وينبغي أن يكون بعيداً عن جدران الفرن بـ 1 بوصة (2.5 س م) على الأقل
طبق براوننج	اتبع تعليمات الشركة المصنعة. الجزء السفلي من طبق براوننج يجب أن يكون فوق الفرص الدوار حيث لا يقل عن 3 / 16 بوصة (5 م م). الاستخدام غير الصحيح قد يؤدي إلى كسر القرص الدوار
أدوات عشاء	أمنة الميكروويف فقط. اتبع تعليمات الشركة المصنعة. لا تستخدم أطباق متصدعة أو متكرسة
جرار الزجاج	أزل الغطاء دائماً. تستخدم فقط لتسخين الطعام فقط. معظم جرار الزجاج ليست مقاومة للحرارة ويمكن أن تنكسر
أواني الزجاج	أواني زجاج مقاومة للحرارة فقط. تأكد أنه ليس هناك أي تقليم معدني. لا تستخدم الأطباق المتصدعة أو المتكرسة
حقائب الطبخ في الفرن	اتبع تعليمات الشركة المصنعة. لا تغطي بربطة معدنية. اجعل الشقوق لسماح البخار من الخروج
أطباق واكواب ورقية	لاستخدام الطبخ / التسخين لوقت قليل. لا تترك الفرن غير مراقب أثناء الطهي
مناشف ورقية	استخدام لتغطية الطعام لإعادة التسخين وامتصاص الدهون. استخدام مع إشراف للطبخ لوقت قصير فقط
ورق الرق	استخدم كغطاء لمنع الرش أو غطاء للتبخير
البلاستيك	أمنة الميكروويف فقط. اتبع تعليمات الشركة المصنعة. يجب أن يكون المسمى " آمن الميكروويف ". بعض أوعية بلاستيكية تلين حيث يسخن الطعام داخلها. " أكياس الغليان " والأكياس البلاستيكية مغلقة بإحكام ينبغي شقها أو ثقبها حسب توجيهات الحزمة
التفاف البلاستيك	أمنة الميكروويف فقط. استخدم لتغطية الطعام أثناء الطهي للاحتفاظ بالرطوبة. لا تسمح الاغطية البلاستيكية للمس الطعام
الترموترات	أمنة المايكرويف فقط (ترموترات اللحم والحلوى
الورقة الشمعية	استخدمها لتغطية لمنع الرش و الاحتفاظ بالرطوبة

28. ليس المقصود استخدام الجهاز من قبل أشخاص (بمن فيهم الأطفال) فيهم ضعف القوة الحسية أو العقلية أو البدنية، أو عدم الخبرة والمعرفة، إلا إذا كان لديهم إشراف أو تعليمات بشأن استخدام الجهاز من قبل الشخص المسؤول عن سلامتهم
29. ينبغي استخدام الصغار للجهاز تحت الإشراف للتأكد من أنهم لا يلعبون مع الجهاز
30. ليس هذا الجهاز معنيا بتشغيله بواسطة جهاز توقيت خارجي أو نظام التحكم عن بعد
31. تحذير : تأكد من إيقاف الجهاز قبل استبدال المصباح للتجنب عن صدمة كهربائية محتملة
32. يستخدم مجس درجة الحرارة المقترح بها لهذا الفرن (للأفران المزود لها نظام تحقيق استشعار الحرارة)
33. يمكن ان يسخن باب سطح ظاهري عند تشغيله

لتخفيض خطر إصابة الأشخاص

تشبيث التأسيس

خطر

خطر صدمة كهربائية

يمكن أن يسبب لمس بعض المكونات الداخلية إصابات شخصية خطيرة أو وفاة

تقم بفك هذا الجهاز

تحذير

خطر صدمة كهربائية

يمكن أن يسبب استخدام التأسيس غير الصحيح صدمة كهربائية لا تقم بالتوصيل بالمصدر الكهربائي حتى أن تثبت الجهاز بشكل صحيح

لا بد من تأسيس هذا الجهاز، في حالة دائرة كهربائية قصيرة، يقلل التأسيس خطر صدمة كهربائية من خلال توفير سلك الهروب للتيار الكهربائي. وقد تم تجهيز هذا الجهاز مع سلك التأسيس مع قابس تأسيس. يجب وصل القابس بمصدر كهربائي مثبت و مؤرض بشكل صحيح. قم باستشارة كهربائي مؤهل أو وكيل خدمة في حالة عدم تفهم تعليمات التأسيس تماما أو وجود شك في ما إذا كان الجهاز مثبتا على الأرض بشكل صحيح أو لا إذا كان من الضروري استخدم سلك التمديد، فاستخدمسلك تمديد ٣ أسلاك فقط

التنظيف

تأكد من فصل الجهاز من مصدر الكهرباء

1. تنظيف داخل الفرن بعد الاستخدام بقطعة قماش مبللة قليلا
2. تنظيف الاكسسوارات بالبطريقة المعتادة في الماء والصابون
3. تنظيف إطار الباب والختم والأجزاء المجاورة بعناية بقطعة قماش مبللة عندما تكون قذرة

1. تم تزويد سلك التجهيز الكهربائي لتقليل الخطر الناتجة من التورط في أو التعثر على سلك أطول.

2. إذا تم استخدام سلك طويل أو سلك تمديد

1. يكون التقدير الكهربائي الملحوظ للسلك الطويل أو سلك التمديد مساويا للتقدير الكهربائي للجهاز.

2. يجب أن يكون سلك التمديد من نوع ٣ أسلاك التأسيس.

٣. وينبغي أن يكون السلك الطويل مرتبا ، لن يترسل على المضادة أو المنضدة بحيث

يمكن الأطفال من سحبه أو يكون متعثرا عشوائيا

تعليمات هامة متعلقة بالسلامة

تحذير

لتقليل خطر الحريق، الصدمة الكهربائية، وإصابة أشخاص أو التعرض لطاقة فرن الميكروويف المفرطة عند استخدام الجهاز الخاص بك، اتبع الإحتياطات الأساسية ، بما في ذلك ما يلي

1. تحذير: لا يتم تسخين السوائل وغيرها من الأطعمة في أوعية مختومة لأنها عرضة للانفجار
2. تحذير: من الخطر أن يقوم شخص عدا الشخص المختص بإزالة الغطاء الذي يحمي عن التعرض لطاقة الميكروويف
3. تحذير: إنما يسمح الأطفال لاستخدام الفرن من دون الرقابة عندما تعطى تعليمات كافية بحيث يكون الطفل قادرا على استخدام الفرن بطريقة آمنة وفهم مخاطر الاستخدام غير السليم
4. تحذير: عند تشغيل الجهاز في وضع مجموعة ، لا يقوم الأطفال باستخدام الفرن الا تحت إشراف الكبار نظرا لدرجات الحرارة المتولدة (فقط لسلسلة الشواء)
5. فقط استخدام أدوات مناسبة للاستخدام في أفران الميكروويف
6. يجب تنظيف الفرن بانتظام كما يجب إزالة بقايا الطعام بدقة
7. قراءة واتباع " الإحتياطات اللازمة للتعجب عن التعرض المحتمل لطاقة الميكروويف المفرطة" الخاصة
8. عند تفتنة الطعام في أوعية من بلاستيك او ورقة ، ينبغي إبقاء عين على الفرن نظرا لإمكانية الاشتعال
9. إذا لوحظ الدخان ، يجب إيقاف الجهاز أو فصل الكهرباء عنه وإبقاء الباب مغلقا من أجل خلق أية نيران
10. لا تفرط في طبخ الطعام
11. لا تستخدم فجوة الفرن لأغراض التخزين. لا تخزن المواد مثل الخبز والكعك، الخ داخل الفرن
12. إزالة روابط لية أسلاك، ومقابض معدنية من أوعية/أكياس البلاستيك أو الورقة قبل وضعها في الفرن
13. تثبيت أو تحديد موقع هذا الفرن وفقا لتعليمات التثبيت المزودة فقط
25. يصبح الجهاز حارا أثناء الاستخدام. ينبغي الحرص من لمس عناصر التسخين داخل الفرن .
26. قد تكون الأجزاء الظاهرة ساخنة أثناء الاستخدام. فبقي الأطفال الصغار بعيدا عنها
27. لا تستخدم منظفات قاسية كاشطة او مكشطة معدنية حادة لتنظيف زجاج باب الفرن لأنها تؤدي إلى خدش السطح ما قد يؤدي إلى تحطم الزجاج
14. لا تسخن البيض في القشر والبيض المسلوق في أفران الميكروويف لأنه قد ينفجر، حتى بعد انتهاء تدفئة الميكروويف
15. استخدام هذا الجهاز للأهداف المعنية فقط كما هي موضحة في الدليل. لا تستخدم المواد الكيميائية المتأكلة أو الأبخرة في هذا الجهاز، صمم هذا الفرن خاصة لغرض التسخين. وأنه ليس مصمما للاستخدام الصناعي أو الإختباري
16. إذا تخرب سلك التزويد يجب استبداله أن يكون من قبل الشركة المصنعة او وكيل خدمته أو الأشخاص المؤهلين مثلهم من أجل التجنب عن الأخطار
17. لا تخزن و لا تستخدم هذا الجهاز في العراء
18. لا تستخدم هذا الفرن بالقرب من المياه او في سطح رطب أو بالقرب من المسبح
19. درجة حرارة السطوح المتقبلة قد تكون عالية عند تشغيل الجهاز. وتكون السطوح عرضة للحرارة أثناء الاستخدام. احتفظ السلك بعيدا عن سطح ساخن، ولا تغطي أية فتحات في الفرن
20. لا تدع السلك معلقا فوق حافة طاولة أو منصدة
21. الفشل للحفاظ على الفرن نظيفا يمكن أن يؤدي إلى تدهور السطح الذي يمكن أن يؤثر سلبا على حياة الجهاز وربما ينتج حالة خطيرة
22. يجب تحريك محتويات زجاجات التغذية و جرار غذاء الأطفال و التحقق من درجة الحرارة قبل الاستهلاك، وذلك للتعجب عن الحروق
23. تسخين المشروبات بالميكروويف يمكن أن يؤدي إلى غليان ثائر متأخر، وبالتالي تعامل مع الأوعية بحذر
24. لا يستخدم منظف البخار

الإحتياطات اللازمة للتجنب عن التعرض المحتمل لطاقة الميكروويف المفرطة

- (أ) لا تحاول تشغيل هذا الفرن مع باب مفتوح لأن هذا يمكن أن يؤدي إلى الأضرار الناتجة عن التعرض لطاقة الميكروويف. ومن المهم عدم الكسر أو الدك بأجهزة التعشيق
- (ب) لا تضع أي شيء فيما بين وجه الفرن وبابه أو لا تدع التربة أو بقايا المنظف تتراكم على السطوح السقفية
- (ج) تحذير : إذا تخرب الباب أو أختام الباب يجب أن لا يتم تشغيل الفرن حتى يتم إصلاحه من قبل شخص مختص

ملحق

إذا لم يحتفظ الجهاز في حالة جيدة من النظافة يمكن أن يتدهور سطحها ويؤثر على عمر الجهاز ويؤدي الى وضع خطير

المواصفات

موديل	MIC25GDFX-04 MIC25GDFX-19
الفولطية المقدرة :	230-240V~50Hz
طاقة الإدخال المقدرة (ميكروويف) :	1450W
طاقة الإنتاج المقدرة (ميكروويف) :	900W
طاقة الإدخال المقدرة (الشواية) :	1000W
طاقة الفرن :	25L
قطر القرص الدوار :	Ø315mm
الأبعاد الخارجية (ط + ع + إ) :	595x400x388mm
الوزن الصافي :	17.8kg كغ تقريبا

كاندي

فرن المايكرويف دليل التشغيل

موديل : MIC25GDFX-04
MIC25GDFX-19

اقرأ هذه التعليمات بدقة قبل استخدام فرن المايكرويف الخاص بك، وحافظ عليها بعناية. إذا اتبعت التعليمات، يوفر لك الفرن خدمة جيدة لسنوات عديدة

حافظ على هذه التعليمات بدقة



MIC25GDFX-04
MIC25GDFX-19

فرن ميكروويف
كتيب التعليمات

AR



0002-958

