

CANDY

CMXW20DB-SASO

MICROWAVE OVENS
USER INSTRUCTIONS

GB



Microwave Oven
INSTRUCTION MANUAL
MODEL: CMXW20DB-SASO

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	CMXW20DB-SASO
Rated Voltage:	220V~60Hz
Rated Input Power(Microwave):	1050W
Rated Output Power(Microwave):	700W

IMPORTANT SAFETY INSTRUCTIONS WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children less than 8 years of age shall be kept away unless continuously supervised.
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment)

5. WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
6. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
7. WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. The oven should be cleaned regularly and any food deposits removed.
15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could

adversely affect the life of the appliance and possibly result in a hazardous situation.

16. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)

17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

18. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

19. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)

20. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- farm houses;
- bed and breakfast type environments.

21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

22. Metallic containers for food and beverages are not allowed during microwave cooking.

23. The appliance shall not be cleaned with a steam cleaner.

24. The appliance is intended to be used freestanding.

25. The rear surface of appliances shall be placed against a wall.

**READ CAREFULLY AND KEEP FOR FUTURE
REFERENCE**

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard
Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The extension cord must be a grounding-type 3-wire cord.
 - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

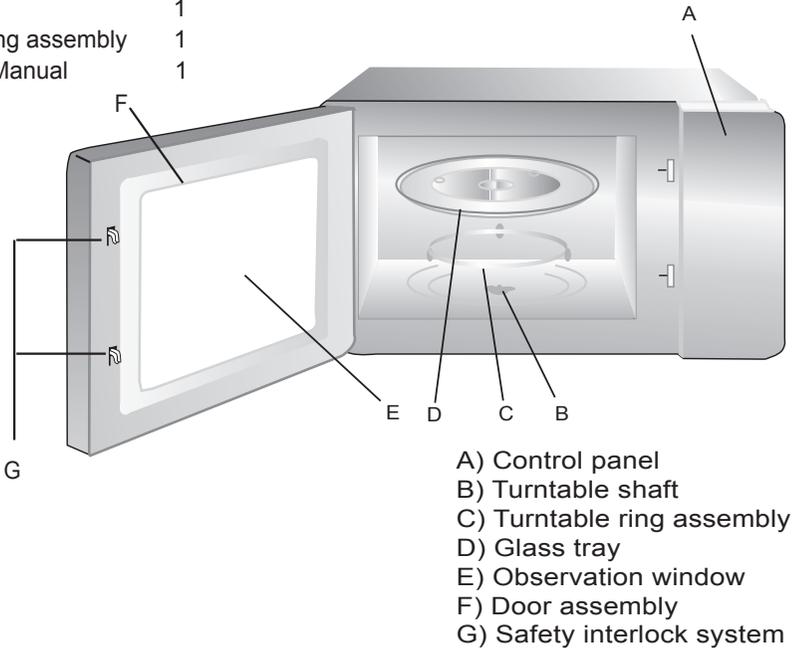

Turntable Installation

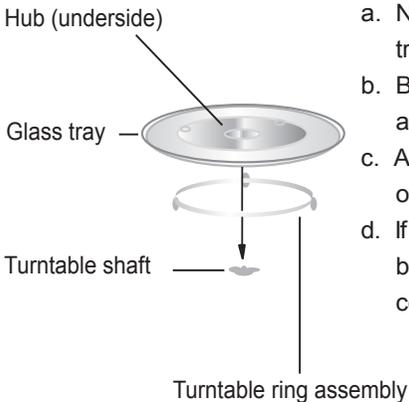

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

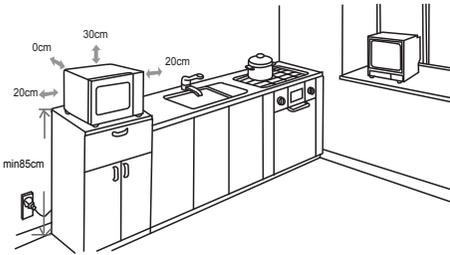

(1) The minimum installation height is 85cm.

(2) The rear surface of appliance shall be placed against a wall.

Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.

(3) Do not remove the legs from the bottom of the oven.

(4) Blocking the intake and/or outlet openings can damage the oven.

(5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



OPERATION INSTRUCTION

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

1. Clock Setting

When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once.

- (1) Press " **Clock/Pre-Set** ", the hour figure flash;
- (2) Turn "  " to adjust the hour figures, the input time should be within 0--23 .
- (3) Press " **Clock/Pre-Set** ", the minute figures will flash.
- (4) Turn "  " to adjust the minute figures, the input time should be within 0--59.
- (5) Press " **Clock/Pre-Set** " to finish clock setting. ":" will flash.

Note: (1) If the clock is not set, it would not function when powered.

- (2) During the process of clock setting, if no operation in 1 minute, the oven will go back to the previous status automatically.

2. Microwave Cooking

- (1) Press the " **Microwave** " key once, and "P100" display.
- (2) Press " **Microwave** " for times or turn "  " to select the microwave power "P100", "P80", "P50", "P30", "P10" will display in order.
- (3) Press " **Start/+30Sec./Confirm** " to confirm.
- (4) Turn "  " to adjust the cooking time. (The time setting should be 0:05- 95:00.)
- (5) Press " **Start/+30Sec./Confirm** " to start cooking.

NOTE: the step quantities for the adjustment time of the coding switch are as follow:

- 0---1 min : 5 seconds
- 1---5 min : 10 seconds
- 5---10 min : 30 seconds
- 10---30 min : 1 min ute
- 30---95 min : 5 minutes

Microwave Power Chart

Microwave Power	100%	80%	50%	30%	10%
Display	P100	P80	P50	P30	P10

3. Speedy Cooking

- (1) In waiting state, press " **Start/+30Sec./Confirm** " key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.
- (2) During the microwave and time defrost process, press " **Start/+30Sec./Confirm** " to increase the cooking time.
- (3) In waiting states, turn "  " left to choose the cooking time directly. After choosing the time, press " **Start/+30Sec./Confirm** " to start cooking. The microwave power is 100%.
- (4) Under the states of auto menu and weight defrost, cooking time cannot be increased by pressing " **Start/+30Sec./Confirm** ".

4. Defrost By Weight

- (1) Press " **Weight/Time Defrost** " once, the screen will display "dEF1".
- (2) Turn "  " to select the food weight. The range of weight is 100-2000g.
- (3) Press " **Start/+30Sec./Confirm** " key to start defrosting.

5. Defrost By Time

- (1) Press " **Weight/Time Defrost** " twice, the screen will display "dEF2".
- (2) Turn "  " to select the cooking time. The maximum cooking time is 95 minutes.
- (3) Press " **Start/+30Sec./Confirm** " key to start defrosting.

6. Multi-Stage Cooking

Two stages can be maximumly set. If one stages is defrosting, it should be put in the first stage. The buzzer will ring once after each stage and the next stage will begin.

Note: Auto menu cannot be set as one of the multi-stage.

Example: if you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:

- (1) Press " **Weight/Time Defrost** " twice, the screen will display "dEF2";
- (2) Turn "  " to adjust the defrost time of 5 minutes;
- (3) Press " **Microwave** " once;
- (4) Turn "  " to choose 80% microwave power till "P80" display;
- (5) Press " **Start/+30Sec./Confirm** " to confirm;
- (6) Turn "  " to adjust the cooking time of 7 minutes;
- (7) Press " **Start/+30Sec./Confirm** " to start cooking.

7. Pre-set Function

- (1) Set the clock first. (Consult the instruction of clock setting.)
- (2) Input the cooking program. Two stages can be set at most. Defrosting should not be set in preset function .

Example: if you want to cook with 80% microwave power for 7 minutes.

- a. Press " **Microwave** " once;
- b. Turn "  " to choose 80% microwave power till "P80" display;
- c. Press " **Start/+30Sec./Confirm** " to confirm;
- d. Turn "  " to adjust the cooking time of 7 minutes;

After the above steps, please do not press " **Start/+30Sec./Confirm** ". Then do as following:

- (3) Press " **Clock/Pre-Set** ". The hour figures flash;
- (4) Turn "  " to adjust the hour figures, the input time should be within 0--23.
- (5) Press " **Clock/Pre-Set** ", the minute figures will flash .
- (6) Turn "  " to adjust the minute figures, the input time should be within 0--59.
- (7) Press " **Start/+30Sec./Confirm** " to finish setting. ":" will light, buzzer will ring twice when the time arrives, then cooking will start automatically.

Note: clock must be set first. Otherwise,pre-set function will not work.

8. Auto Menu

- (1) In waiting states, turn "  " right to choose the menu from "A-1" to "A-8";
- (2) Press "**Start/+30Sec./Confirm**" to confirm the menu you choose;
- (3) Turn "  " to choose the food weight;
- (4) Press "**Start/+30Sec./Confirm**" to start cooking;
- (5) After cooking finish, the buzzer sounds five times.

Auto Menu

Menu	Weight	Display	Power
A-1 AUTO REHEAT	200g	200	100%
	400g	400	
	600g	600	
A-2 VEGETABLE	200g	200	100%
	300g	300	
	400g	400	
A-3 FISH	250g	250	80%
	350g	350	
	450g	450	
A-4 MEAT	250g	250	100%
	350g	350	
	450g	450	
A-5 PASTA	50g(with cold water 450 g)	50	80%
	100g(with cold water 800 g)	100	
A-6 POTATO	200g	200	100%
	400g	400	
	600g	600	
A-7 PIZZA	200g	200	100%
	400g	400	
A-8 SOUP	200ml	200	80%
	400ml	400	

9. Lock-out Function for Children

Lock: In waiting state, press " **Stop/Clear** " for 3 seconds, there will be a long "beep" denoting entering the children-lock state and screen will display " **⏏** ".

Lock quitting: In locked state, press " **Stop/Clear** " for 3 seconds, there will be a long "beep" denoting that the lock is released.

10. Inquiring Function

- (1) In cooking states of microwave, press " **Microwave** ", the current power will be displayed for 3 seconds
- (2) In pre-set state, press " **Clock/Pre-Set** " to inquire the time for delay start cooking. The pre-set time will flash for 3 seconds, then the oven will turn back to the clock display.
- (3) During cooking state, press " **Clock/Pre-Set** " to check the current time. It will be displayed for 3 seconds.

11. Specification

- (1) The buzzer will sound once when turning the knob at the beginning;
- (2) " **Start/+30Sec./Confirm** " must be pressed to continue cooking if the door is opened during cooking;
- (3) Once the cooking programme has been set , " **Start/+30Sec./Confirm** " is not pressed in 1 minute. The current time will be displayed. The setting will be cancelled.
- (4) The buzzer sounds once by efficient press, inefficient press will be no response.
- (5) The buzzer will sound five times to remind you when cooking is finished.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

استكشاف الأعطال وإصلاحها

الأمر الطبيعي	
قد يتم التداخل (التشويش) مع استقبال أجهزة الراديو التلفزيون أثناء استخدام فرن الميكروويف. وهو مماثل للتداخل الذي تحدثه الأجهزة الكهربائية الصغيرة، مثل الخلاط والمكنسة الكهربائية والمروحة الكهربائية. هذا أمر طبيعي.	فرن الميكروويف يتداخل (يشوش) مع استقبال جهاز التلفزيون
أثناء الطهي بطاقة ميكروويف منخفضة، يمكن أن تصبح إضاءة مصباح الفرن خافتة. هذا أمر طبيعي.	إضاءة مصباح الفرن خافتة
أثناء الطهي، يمكن أن ينبعث بخار من الطعام. ومعظمه سوف يخرج من فتحات التنفيس. ولكن بعضه قد يتراكم على مكان بارد مثل باب الفرن. هذا أمر طبيعي.	البخار يتراكم على الباب، وهواء ساخن يخرج من فتحات التنفيس
يُحظر تشغيل الفرن بدون أي طعام بداخله. هذا خطير جداً.	الفرن اشتغل بشكل عارض (وحده) بدون طعام بداخله.

الإجراء التصحيحي	السبب المحتمل	المشكلة
يجب فصله؛ ثم إعادة توصيله بعد 10 ثوان.	(1) كابل الطاقة غير موصل بإحكام.	لا يمكن تشغيل الفرن.
يجب استبدال المصهر أو إعادة ضبط قاطع الدائرة (الإصلاح بواسطة الفنيين المهنيين لشركتنا).	(2) انصهار المصهر (الفيوز) أو قاطع الدائرة يعمل.	
يجب اختبار المأخذ مع أجهزة كهربائية أخرى.	(3) توجد مشكلة في المأخذ (الفيشة الجدارية)	
يجب غلق الباب.	(4) الباب غير مغلق جيداً.	الفرن لا يسخن.

طبقاً لتوجيه نفايات المعدات الكهربائية والإلكترونية (WEEE)، يجب جمع ومعاملة هذه النفايات بطريقة منفصلة. وإذا تم التخلص من هذا المنتج في أي وقت في المستقبل فيرجى "عدم" التخلص منه مع المخلفات المنزلية. الرجاء إرسال هذا المنتج إلى نقاط جمع نفايات المعدات الكهربائية والإلكترونية حينما كانت متوفرة.



9. وظيفة قفل سلامة الأطفال

القفل: في وضع الانتظار، يتم الضغط على (" **Stop/ Clear** إيقاف/ مسح) لمدة 3 ثوان، وسيكون هناك صوت صافرة ("بيبيبي") طويل للدلالة على دخول وضع قفل سلامة الأطفال وتعرض الشاشة "J - - L".
إلغاء القفل: في وضع القفل، يتم الضغط على (" **Stop/ Clear** إيقاف/ مسح) لمدة 3 ثوان، وسيكون هناك صوت صافرة ("بيبيبي") طويل للدلالة على تحرير القفل.

10. وظيفة الاستعلام

- (1) في وضع الطهي بالميكروويف، يتم الضغط على مفتاح "Micro wave" فتُعرض الطاقة الحالية لمدة 3 ثوان.
- (2) وفي وضع الضبط المسبق، يتم الضغط على (" **Clock/Pre-Set** الساعة/الضبط المسبق) للاستعلام عن الوقت لتأخير بدء الطهي.
ويومض الوقت الذي تم ضبطه مسبقاً لمدة 3 ثوان، ثم يعود الفرن إلى عرض الساعة.
- (3) في وضع الطهي، يتم الضغط على (" **Clock/Pre-Set** الساعة/الضبط المسبق) لمدة 3 ثوان لمعرفة الوقت الحالي، الذي يتم عرضه.

11. المواصفات

- (1) يرن الطنان لمرة واحدة عند تدوير القرص في البداية؛
- (2) يجب الضغط على (" **Start/+30Sec./ Confirm** إبدأ/+30 ثانية/تأكيد) لمتابعة الطهي إذ تم فتح الباب أثناء الطهي؛
- (3) بعد تعيين برنامج الطهي، لا يُضغط على (" **Start/+30Sec./ Confirm** إبدأ/+30 ثانية/تأكيد) لمدة دقيقة واحدة (1). وسوف يُعرض الوقت الحالي. ويتم إلغاء الضبط.
- (4) يرن الطنان لمرة واحدة بضغطة حازمة، وإلا لن تكون هناك استجابة إذا كانت الضغطة غير حازمة.
- (5) سوف يرن الطنان خمس مرات لتنبيهك إلى أن الطهي قد انتهى.

8. القائمة التلقائية

- (1) في وضع الانتظار، يتم تدوير " " (القرص) إلى جهة اليمين لاختيار القائمة من "A-1" إلى "A-8".
- (2) يتم الضغط على " " ("Start/+30Sec./ Confirm" ابدأ/+30ثانية/تأكيد) لتأكيد القائمة المختارة؛
- (3) يتم تدوير " " (القرص) لاختيار وزن الطعام؛
- (4) يتم الضغط على " " ("Start/+30Sec./ Confirm" ابدأ/+30ثانية/تأكيد) لبدء الطهي؛
- (5) بعد انتهاء الطهي، يرن الطنان خمس مرات.

القائمة التلقائية

القائمة	الوزن	العرض	الطاقة
A-1 AUTO REHEAT (إعادة التسخين التلقائية)	200 ج	200	%100
	400 ج	400	
	600 ج	600	
A-2 VEGETABL E (خضروات)	200 ج	200	%100
	300 ج	300	
	400 ج	400	
A-3 FISH (أسماك)	250 ج	250	%80
	350 ج	350	
	450 ج	450	
A-4 MEAT (لحوم)	250 ج	250	%100
	350 ج	350	
	450 ج	450	
A-5 PASTA (مكرونه)	50 ج (مع ماء بارد 450 ج)	50	%80
	100 ج (مع ماء بارد 800 ج)	100	
A-6 POTATO (بطاطس)	200 ج	200	%100
	400 ج	400	
	600 ج	600	
A-7 PIZZA (بنزا)	200 ج	200	%100
	400 ج	400	
A-8 SOUP (حساء)	200 مل	200	%80
	400 مل	400	

- (1) يتم الضغط على " (Weight/Time Defrost"إذابة الثلج بحسب الوزن/ الوقت) مرتين فتعرض الشاشة "dEF2"؛
- (2) يتم تدوير " (القرص) لضبط زمن إذابة الثلج على 5 دقائق؛
- (3) يتم الضغط على مفتاح "Micro wave" لمرة واحدة؛
- (4) يتم تدوير " (القرص) لاختيار طاقة ميكروويف 80% إلى أن يتم عرض "P80"؛
- (5) يتم الضغط على " (Start/+30Sec./ Confirm"ابدأ/+30ثانية/تأكيد) للتأكيد؛
- (6) يتم تدوير " (القرص) لضبط زمن الطهي على 7 دقائق؛
- (7) يتم الضغط على " (Start/+30Sec./ Confirm"ابدأ/+30ثانية/تأكيد) لبدء الطهي.

7. وظيفة الضبط المسبق

- (1) يتم ضبط الساعة أولاً. (الرجاء مراجعة إرشادات ضبط الساعة).
 - (2) يتم إدخال برنامج الطهي. ويمكن تعيين مرحلتين بحد أقصى. وينبغي عدم تعيين (ضبط) إذابة الثلج في وظيفة الضبط المسبق.
مثال: إذا كانت رغبتك هي الطهي بطاقة ميكروويف قدرها 80% لمدة 7 دقائق.
 - a. يتم الضغط على مفتاح "Microwave" لمرة واحدة؛
 - b. يتم تدوير " (القرص) لاختيار طاقة ميكروويف 80% إلى أن يتم عرض "P80"؛
 - c. يتم الضغط على " (Start/+30Sec./ Confirm"ابدأ/+30ثانية/تأكيد) للتأكيد؛
 - d. يتم تدوير " (القرص) لضبط زمن الطهي على 7 دقائق؛
- بعد إجراء الخطوات السابقة، يُرجى عدم الضغط على " (Start/+30Sec./ Confirm"ابدأ/+30ثانية/تأكيد). ثم القيام بما يلي:
- (3) يتم الضغط على " (Clock/Pre-Set"الساعة/الضبط المسبق). فيومض شكل الساعة؛
 - (4) يتم لف " (القرص) لضبط الساعة، وينبغي أن يكون الوقت الذي يتم إدخاله بين 0--23.
 - (5) يتم الضغط على " (Clock/Pre-Set"الساعة/الضبط المسبق) فيومض شكل الدقائق.
 - (6) يتم لف " (القرص) لضبط الدقائق، وينبغي أن يكون الوقت الذي يتم إدخاله بين 0--59.
 - (7) يتم الضغط على " (Start/+30Sec./ Confirm"ابدأ/+30ثانية/تأكيد) لإنهاء الضبط. ويضيء ":", ويرن الطنان مرتين عندما يظهر الوقت، ثم يبدأ الطهي تلقائياً.
- ملاحظة: يجب ضبط الساعة أولاً. فإن لم يتم ضبطها لن تعمل وظيفة الضبط المسبق.

P10	P30	P50	P80	P100	العرض
-----	-----	-----	-----	------	-------

3. الطهي السريع

- (1) في وضع الانتظار: يتم الضغط على " **Start/+30Sec./ Confirm** (ابدأ/+30 ثانية/تأكيد) للطهي بطاقة 100% لمدة 30 ثانية. وكل ضغط على نفس المفتاح تزيد الوقت 30 ثانية. والحد الأقصى لزمان الطهي هو 95 دقيقة.
- (2) أثناء عملية إذابة الثلج للميكروويف والوقت، يتم الضغط على " **Start/+30Sec./ Confirm** (ابدأ/+30 ثانية/تأكيد) لزيادة زمن الطهي.
- (3) في وضع الانتظار، يتم تدوير "  (القرص) إلى جهة اليسار لاختيار زمن الطهي مباشرة. بعد اختيار الزمن: يتم الضغط على " **Start/+30Sec./ Confirm** (ابدأ/+30 ثانية/تأكيد) لبدء الطهي. وتكون طاقة الميكروويف هي 100%.
- (4) في وضعي القائمة التلقائية وإذابة الثلج بحسب الوزن، لا يمكن زيادة زمن الطهي بالضغط على " **Start/+30Sec./ Confirm** (ابدأ/+30 ثانية/تأكيد).

4. إذابة الثلج بحسب الوزن

- (1) يتم الضغط على " **Weight/Time Defrost** (إذابة الثلج بحسب الوزن/ الوقت) لمرة واحدة فتعرض الشاشة "dEF1".
- (2) يتم تدوير "  (القرص) لاختيار وزن الطعام. ونطاق الوزن هو 100-2000 جرام.
- (3) يتم الضغط على " **Start/+30Sec./ Confirm** (ابدأ/+30 ثانية/تأكيد) لبدء إذابة الثلج.

5. إذابة الثلج بحسب الوقت

- (1) يتم الضغط على " **Weight/Time Defrost** (إذابة الثلج بحسب الوزن/ الوقت) مرتين فتعرض الشاشة "dEF2".
- (2) يتم تدوير "  (القرص) لاختيار زمن الطهي. والحد الأقصى لزمان الطهي هو 95 دقيقة.
- (3) يتم الضغط على " **Start/+30Sec./ Confirm** (ابدأ/+30 ثانية/تأكيد) لبدء إذابة الثلج.

6. الطهي متعدد المراحل

- يمكن تعيين مرحلتين بحد أقصى. وإذا كانت إحدى المرحلتين إذابة الثلج فينبغي أن تكون المرحلة الأولى. وسوف يرن الطنان لمرة واحدة بعد كل مرحلة وتبدأ المرحلة التالية.
- ملاحظة: لا يمكن تعيين القائمة التلقائية إحدى المراحل المتعددة.
- مثال: إذا كانت رغبتك هي إذابة الثلج عن الطعام لمدة 5 دقائق ثم الطهي بطاقة ميكروويف قدرها 80% لمدة 7 دقائق. والخطوات هي كما يلي:

إرشادات التشغيل

يُستخدم في فرن الميكروويف هذا تحكم إلكتروني حديث لضبط عوامل (بارامترات) الطهي لوفاء أفضل بمتطلباتك في الطهي.

1. ضبط الساعة

عند توصيل التيار الكهربائي بفرن الميكروويف سوف يعرض الفرن "0:00"، ويرن الطنان لمرة واحدة.

(1) يتم الضغط على " (" **Clock/Pre-Set** الساعة/الضبط المسبق) فيومض شكل الساعة.

(2) يتم لف "  " (القرص) لضبط الساعة، وينبغي أن يكون الوقت الذي يتم إدخاله بين 0-23.

(3) يتم الضغط على " (" **Clock/Pre-Set** الساعة/الضبط المسبق) فيومض شكل الدقائق.

(4) يتم لف "  " (القرص) لضبط الدقائق، وينبغي أن يكون الوقت الذي يتم إدخاله بين 0-59.

(5) يتم الضغط على " (" **Clock/Pre-Set** الساعة/الضبط المسبق) لإنهاء ضبط الساعة. سوف يومض الشكل ":",

ملاحظة: (1) إذا لم يتم ضبط الساعة فن تعمل عند توصيل الكهرباء.

(2) أثناء عملية ضبط الساعة، إذا لم يتم التشغيل خلال دقيقة واحدة (1) فسوف يعود الفرن إلى الحالة السابقة تلقائيًا.

2. الطهي بالميكروويف

(1) يتم الضغط على مفتاح "Micro wave" لمرة واحدة، فيتم عرض "P100".

(2) يتم الضغط على مفتاح "Micro wave" أربع (4) مرات أو تدوير "  " (القرص) لاختيار طاقة الموجات الدقيقة (الميكروويف): "P100"، ثم "P80"، ثم "P50"، ثم "P30"، ثم "P10" بالترتيب.

(3) يتم الضغط على " (" **Start/+30Sec./ Confirm** ابدأ/+30 ثانية/تأكيد) للتأكيد.

(4) يتم تدوير "  " لضبط زمن الطهي. (وينبغي أن يكون ضبط الوقت على: 0:05 - 0:95).

(5) يتم الضغط على " (" **Start/+30Sec./ Confirm** ابدأ/+30 ثانية/تأكيد) لبدء الطهي.

ملاحظة: الأزمنة المتدرجة لضبط وقت مفتاح الترميز هي:

1---0	: دقيقة	5 ثوان
5---0	: دقائق	10 ثوان
10---5	: دقائق	30 ثانية
30---10	: دقيقة	دقيقة واحدة (1)
95---30	: دقيقة	5 دقائق

جدول طاقة الميكروويف

طاقة الميكروويف	%100	%80	%50	%30	%10
-----------------	------	-----	-----	-----	-----


الخرانة: يجب إزالة أية طبقة وقاية توجد على سطح خزانة (صندوق) فرن الميكروويف.
ممنوع إزالة الغطاء الميكا البني الفاتح المثبت على تجويف (داخل) الفرن لحماية المغنطرون.

التركيب على سطح العمل (الكاونتر)

يجب إزالة جميع مواد التغليف والتعبئة والملحقات. ثم فحص الفرن بحثاً عن أي تلف مثل خبطات أو باب مكسور. ويجب عدم استخدامه في حالة التلف.

التركيب

1. يتم اختيار سطح مستو يوفر مساحة مفتوحة كافية لفتحات الدخول و/أو الخروج.

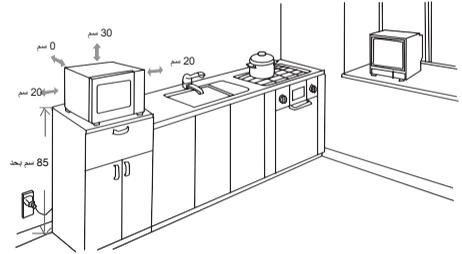

(1) الحد الأدنى لارتفاع التركيب هو 85 سم.

(2) يجب أن يكون السطح الخلفي للفرن بجانب جدار.

يجب ترك خلوص قدره 30 سم فوق الفرن، وخلوص بحد أدنى 20 سم بين الفرن وأي جدران مجاورة.

(3) ممنوع نزع الأرجل من الجزء السفلي (بطن) الفرن.

(4) يمكن لسد فتحات الدخول و/أو الخروج أن يتسبب في تلف الفرن.

(5) يجب وضع الفرن على أبعاد مسافة ممكنة من أجهزة الراديو والتلفزيون. فتشغيل فرن الميكروويف يمكن أن يتسبب في تداخل (تشويش) في استقبال أجهزة الراديو والتلفزيون.

2. يتم توصيل الفرن بمأخذ (فيشة) منزلي عادي، ويجب الحرص على أن تكون الفولتية والتردد هما نفس الفولتية والتردد الموضحين على ملصق التقنين.

تحذير: يُحظر تركيب الفرن فوق سطح موقد أو جهاز آخر منتج للحرارة. فإن تم تركيبه بالقرب من مصدر حرارة أو فوقه فيمكن أن يتلف، وسوف يكون الضمان لاغياً باطلاً.

قد يكون السطح القابل للوصول إليه ساخناً أثناء التشغيل.




إعداد الفرن

أسماء قطع وملحقات الفرن

يجب إخراج الفرن وجميع المواد من الصندوق الكرتوني وتجفيف (داخل) الفرن. ويتم توريد الفرن بالملحقات التالية:

- | | |
|---|-----------------------------|
| 1 | الصينية الزجاجية |
| 1 | مجموعة حلقة الصينية الدوارة |
| 1 | دليل الإرشادات |

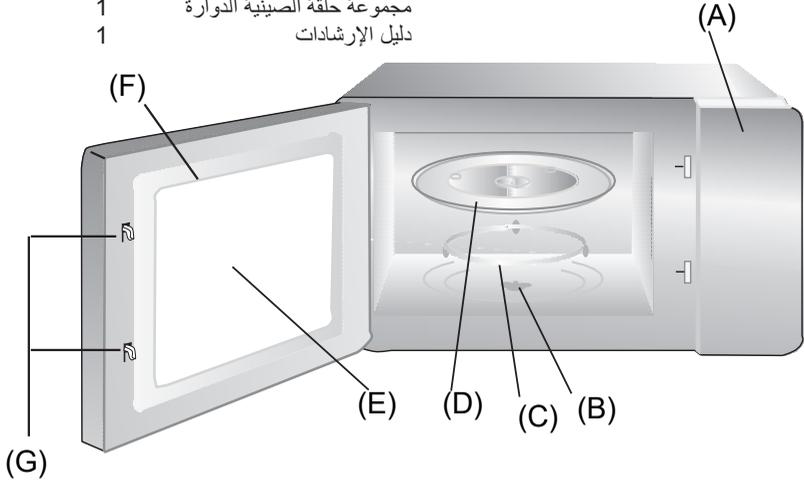

- | | |
|-----|----------------------------------|
| (A) | لوحة التحكم |
| (B) | عمود الصينية الدوارة |
| (C) | مجموعة الصينية المستديرة الدوارة |
| (D) | الصينية الزجاجية |
| (E) | نافذة المراقبة |
| (F) | مجموعة الباب |
| (G) | نظام أفعال الأمان التعشيقية |

تركيب الصينية الدوارة

- منوع منعًا باتًا وضع الصينية الزجاجية مقلوبة، أو تقييد حركتها.
- يجب دائمًا استخدام كل من الصينية الزجاجية ومجموعة حلقة الصينية الدوارة أثناء الطهي.
- يجب دائمًا وضع الأطعمة وحوايات الأطعمة على الصينية الزجاجية للطهي.
- إذا انشردت أو انكسرت الصينية الزجاجية أو مجموعة حلقة الصينية الدوارة فيجب الاتصال بأقرب مركز خدمة معتمد.



مواد يمكن استخدامها في فرن الميكروويف

الأواني	الملاحظات
صحن التحمير	يجب اتباع إرشادات الشركة المصنعة. ويجب أن يكون الجزء السفلي (القعر) من صحن التحمير فوق الصينية الدوارة بمسافة 3/16 بوصة (5 مم) على الأقل. وربما يتسبب الاستخدام غير الصحيح في كسر الصينية الدوارة.
آنية العشاء	الآمنة للاستخدام في أفران الميكروويف فقط. يجب اتباع إرشادات الشركة المصنعة. ممنوع استخدام الصحن المشروخة أو المتقشرة.
البرطمانات الزجاجية	دائمًا، يجب إزالة الغطاء. تُستخدم فقط لتدفئة الطعام فقط (بدون تسخين). ومعظم البرطمانات الزجاجية غير مقاومة للحرارة وربما تتكسر.
الأواني الزجاجية	الأواني الزجاجية المقاومة للحرارة المخصصة للاستخدام في الأفران فقط. يجب التأكد من عدم وجود حواف معدنية. ممنوع استخدام الصحن المشروخة أو المتقشرة.
أكياس الطهي في الأفران.	يجب اتباع إرشادات الشركة المصنعة. ممنوع العلق برباط معدني. ويجب عمل شقوق لتسريب البخار. الصحن والأكواب الورقية تُستخدم للطي/ التدفئة لفترة قصيرة فقط. ممنوع ترك الفرن بدون مراقبة أثناء الطهي.
المناشف الورقية	تُستخدم لتغطية الطعام عند إعادة التسخين وامتصاص الدهون. ويجب الاستخدام تحت إشراف للطهي لفترة قصيرة فقط.
ورق الخبز	يُستخدم غطاء لمنع الانتثار أو يُلف به الطعام للطهي بالبخار.
الآنية البلاستيكية	الآمنة للاستخدام في أفران الميكروويف فقط. يجب اتباع إرشادات الشركة المصنعة. وينبغي أن يكون مكتوبًا عليها "Microwave Safe" (آمنة للميكروويف). وبعض الآنية البلاستيكية تلين عندما يصبح الطعام بداخلها ساخناً. وينبغي عمل شقوق أو ثقوب أو فتحات تنفيس في "أكياس السلق" والأكياس البلاستيكية محكمة الغلق حسب الإرشادات الموضحة على العبوة.
اللفات البلاستيكية	الآمنة للاستخدام في أفران الميكروويف فقط. تُستخدم لتغطية الطعام أثناء الطهي للاحتفاظ بالرطوبة. ويجب عدم السماح للفة التغطية بلمس الطعام.
أجهزة قياس الحرارة (الترموتر)	الآمنة للاستخدام في أفران الميكروويف فقط (ترموتر اللحوم والحلوى).
ورق الشمع	يُستخدم غطاء لمنع الانتثار والاحتفاظ بالرطوبة.

مواد يجب تجنبها في فرن الميكروويف

الأواني	الملاحظات
الصواني الألومنيوم	قد تسبب القوس الكهربائي. فيجب نقل الطعام إلى صحن آمن الاستخدام في فرن الميكروويف.
علبة الطعام الكرتونية التي لها مقبض معدني.	قد تسبب القوس الكهربائي. فيجب نقل الطعام إلى صحن آمن الاستخدام في فرن الميكروويف.
الأواني المعدنية أو التي لها أجزاء معدنية	فالمعدن يحول دون وصول طاقة الموجات الدقيقة (الميكروويف) إلى الطعام. وقد تسبب الأجزاء المعدنية القوس الكهربائي.
أربطة البرم المعدنية	قد تسبب القوس الكهربائي ونشوب حريق في الفرن.
الأكياس الورقية	قد تسبب نشوب حريق في الفرن.
الفوم البلاستيكي	يمكن للفوم البلاستيكي أن يذوب أو يلوث السائل بالداخل عند تعرضه لحرارة عالية.
الخشب	الخشب سوف يحترق عند استخدامه في فرن الميكروويف وربما تفسخ أو تتشقق.

التنظيف

- يجب فصل الكهرباء عن الجهاز من مصدر إمداد الطاقة.
1. يجب تنظيف التجويف (الفرن من الداخل) بعد الاستخدام بقطعة قماش رطبة قليلاً.
 2. يجب تنظيف الملحقات بالطريقة العادية في ماء وصابون.
 3. يجب تنظيف إطار الباب ومانع التسرب والأجزاء المجاورة بعناية عندما تكون متسخة بقطعة قماش رطبة.
 4. ممنوع استخدام مواد تنظيف خشنة كاشطة أو أدوات كشط معدنية حادة في تنظيف زجاج باب الفرن لأنها يمكن أن تؤدي إلى خدش السطح وبالتالي كسر الزجاج.
 5. نصيحة للتنظيف---لتنظيف أسهل لجدران التجويف (الفرن من الداخل) التي يمكن أن تتلامس معها الأطعمة المطهية: توضع نصف ليمونة في وعاء ويُضاف 300 مل (1/2 باينت [ثمن جالون]) ماء ويتم تسخينها على طاقة ميكروويف 100% لمدة 10 دقائق. ويُنظف الفرن بقطعة قماش ناعمة وجافة.

الأواني

تنبيه

خطر الإصابة الشخصية

إنه لمن الخطر على أي شخص غير مؤهل إجراء أي أعمال خدمة أو إصلاح تتضمن إزالة غطاء يحمي من التعرض لطاقة الموجات الدقيقة (الميكرووف).

الرجاء مراجعة الإرشادات حول "مواد يمكن استخدامها في فرن الميكروويف أو تجنبها في فرن الميكروويف". وقد يكون هناك بعض الأواني غير المعدنية التي من الأمان استخدامها في أجهزة الميكروويف. وإذا ساورك شك يمكنك اختبار الأنية (الوعاء) المشكوك فيها باتباع الإجراء المبين أدناه.

اختبار الأواني:

1. يتم ملء حاوية أمانة الاستخدام في أجهزة الميكروويف بكوب واحد (1) من الماء البارد (250 مل) مع الأنية المطلوب اختبارها.
2. يتم تشغيل الفرن على أقصى طاقة لدقيقة واحدة (1).
3. يتم تحسس الأنية بحرص وحذر. فإن كانت دافئة فيجب عدم استخدامها للطهي بفرن الميكروويف.
4. يجب عدم تجاوز زمن الطهي لدقيقة واحدة (1).

الحد من خطر الإصابة على الأشخاص القائمين بالتأريض في عملية التركيب

خطر

يجب استشارة فني كهربائي أو ممثل خدمة مؤهل إذا كانت إرشادات التأريض غير مفهومة بالكامل أو إذا ساورك شك في التأريض الصحيح للجهاز. إذا كان من الضروري استخدام كابل إطالة (مشترك) فيجب أن يكون ثلاثي الأسلاك فقط.

خطر الصدمة الكهربائية يمكن أن يتسبب لمس بعض المكونات الداخلية في التعرض لإصابة شخصية خطيرة أو الموت. ممنوع تفكيك هذا الجهاز.

1. هذا الجهاز مزود بكابل تغذية كهربائية قصير لتقليل المخاطر الناجمة عن التشابك مع كابل طويل أو التعثر بسببه.

تحذير

خطر الصدمة الكهربائية

يمكن أن يؤدي الاستخدام غير الصحيح للتأريض في التعرض لصدمة كهربائية. ويحظر توصيل الجهاز بمأخذ (فيشة) إلى أن يتم تركيبه وتأريضه بالطرق السليمة. يجب تأريض هذا الجهاز. وفي حالة حدوث دائرة كهربائية قصيرة، يقلل التأريض من خطر التعرض لصدمة كهربائية بتوفير سلك هروب للتيار الكهربائي.

2. في حالة استخدام مجموعة كابل طويل أو كابل إطالة (مشترك):

(1) ينبغي أن يكون التقنين الكهربائي المذكور لمجموعة الكابل الطويل أو كابل الإطالة (المشترك) بنفس قدر التقنين الكهربائي للجهاز.
(2) يجب أن يكون كابل الإطالة (المشترك) من النوع ثلاثي الأسلاك المؤرض.

(3) ينبغي ترتيب وضع الكابل الطويل بحيث لا يلتف حول سطح العمل (الكاونتر) أو سطح الطاولة حيث يمكن أن يجذبه الأطفال أو يتسبب في التعثر العارض فوقه.

وهذا الجهاز مزودة بكبل يحتوي على سلك تأريض مع موصل تأريض. ويجب توصيل الموصل بمأخذ (فيشة) مركب ومؤرض بالطرق السليمة.

- استخدام النزلاء في الفنادق والموتيلات وبيئات الإقامة السكنية الأخرى؛

- بيوت المزارع؛

- بيئات الإقامة لليلة واحدة مع الإفطار.

21. الاستخدام المقصود لفرن الميكروويف هو تسخين الأطعمة والمشروبات. وقد يؤدي تجفيف الطعام أو الملابس وتسخين لبادات (كمادات) التدفئة والشبائب والإسفنجات والقماش المبلل والمواد المشابهة إلى خطر التعرض لإصابة أو الاشتعال أو نشوب حريق.
22. غير مسموح باستخدام الحاويات المعدنية للأطعمة والمشروبات أثناء الطهي بالميكروويف.
23. يحظر تنظيف هذا الجهاز بمنظف بخار.
24. هذا الجهاز مخصص للاستخدام في الوضع القائم.
25. يجب أن يكون السطح الخلفي للأجهزة بجانب جدار.

الرجاء قراءتها جيداً والاحتفاظ بها للرجوع إليها في المستقبل

8. عند تسخين الطعام في حاويات بلاستيكية أو ورقية يجب مراقبة الفرن بسبب إمكانية تعرضها للاشتعال.
9. يجب فقط استخدام أوانٍ مناسبة لأفران الميكروويف.
10. إذا انبعث دخان فيجب إيقاف تشغيل الفرن أو فصل كابله وترك الباب مغلقاً لخنق أي لهب.
11. يمكن أن ينتج عن تسخين المشروبات بالميكروويف غليان انفجاري متأخر، ولذلك يجب الحرص عند التعامل مع الحاوية.
12. يجب تقليب أو رج محتويات زجاجات الرضاعة أو برطمانات أطعمة الأطفال والتحقق من درجة الحرارة قبل الاستخدام، لتجنب التعرض لحروق.
13. ينبغي عدم تسخين البيض في قشرته والبيض المسلوق في أفران الميكروويف لأنه قد ينفجر، حتى بعد انتهاء التسخين بالميكروويف.
14. ينبغي تنظيف الفرن بانتظام وإزالة أي رواسب للأطعمة.
15. يمكن أن يؤدي الفشل في المحافظة على الفرن في حالة نظافة جيدة إلى تدهور السطح الذي يمكن أن يؤثر سلباً على العمر الافتراضي للفرن وأن ينتج عنه وضع خطير.
16. يحظر تركيب الفرن خلف باب مزخرف لتجنب سخونة المفردة. (هذا لا ينطبق على الأفران التي لها باب مزخرف.)
17. يجب استخدام مجس درجة الحرارة الموصى به فقط لهذا الفرن. (للأفران المزودة بتجهيزة لاستخدام مجس استشعار درجة الحرارة.)
18. يجب عدم وضع فرن الميكروويف في خزانة (صندوق) إلا إذا كان قد تم اختباره في خزانة.
19. يجب تشغيل فرن الميكروويف مع فتح الباب المزخرف. (للأفران المزودة بباب مزخرف.)
20. إن الغرض من هذا الجهاز أن يُستخدم في المنزل وفي التطبيقات المماثلة مثل:
- المطابخ المخصصة للعاملين في الورش والمحلات والمكاتب وغيرها من بيئات العمل؛

إرشادات السلامة المهمة تحذير

الرجاء تطبيق الاحتياطات الأساسية، شاملة الأمور التالية، للحد من خطر نشوب حريق أو التعرض لصدمة كهربائية أو إصابة للأشخاص أو طاقة مفرطة من فرن الميكروويف:

1. يجب قراءة وتطبيق ما يلي تحديداً: "الاحتياطات المطلوبة لتجنب التعرض لطاقة ميكروويف مفرطة".
2. يمكن استخدام هذا الجهاز من جانب الأطفال بدءاً من عمر 8 سنوات فأكبر، وكذلك الأشخاص الذين لديهم قدرات بدنية أو شعورية أو عقلية منخفضة أو نقص في الخبرة والمعرفة، إذا حصلوا على إشراف أو توجيه يتعلق باستخدام هذا الجهاز بطريقة آمنة وكانوا يدركون الأخطار التي ينطوي عليها استخدامها له. يجب ألا يعيثر الأطفال بهذا الجهاز. كما يجب عدم تنظيف الأطفال لهذا الجهاز وعدم إجرائهم الصيانة التي يقوم بها المستخدم ما لم يكونوا بعمر أكبر من 8 أعوام وتحت إشراف. يجب إبعاد الأطفال الذين يقل عمرهم عن 8 أعوام عن هذا الجهاز ما لم يتم الإشراف عليهم طوال الوقت.
3. يتم الاحتفاظ بهذا الجهاز والكابل الخاص به بعيداً عن متناول الأطفال الذين يقل عمرهم عن 8 أعوام.
4. في حالة تلف كابل الطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الخدمة التابع لها أو فنيين مؤهلين تأهيلاً مماثلاً لتجنب التعرض للخطر (بالنسبة للجهاز المزود بملحق من نوع Y).
5. تحذير: يجب التأكد من إيقاف تشغيل الجهاز قبل استبدال المصباح لتجنب احتمال التعرض لصدمة كهربائية.
6. تحذير: إنه لمن الخطر على أي شخص غير مؤهل إجراء أي أعمال خدمة أو إصلاح تتضمن إزالة غطاء يحمي من التعرض لطاقة الموجات الدقيقة (الميكروويف).
7. تحذير: يجب عدم تسخين السوائل والأطعمة الأخرى في حاويات مغلقة لأنها معرضة للانفجار.

الاحتياطات المطلوبة لتجنب التعرض لطاقة ميكروويف مفرطة

- (a) الرجاء عدم محاولة تشغيل هذا الفرن وبابه مفتوح لأن ذلك يمكن أن ينتج عنه تعرض ضار لطاقة الموجات الدقيقة (الميكروويف). ومن الأهمية عدم كسر أو العبث بأقفال الأمان التعشيقية.
- (b) الرجاء عدم وضع أي جسم بين الواجهة الأمامية (وجه) الفرن وبابه أو ترك الأوساخ أو بقايا المنظف لتتراكم على الأسطح المانعة للتسرب.
- (c) تحذير: في حالة تلف الباب أو موانع تسرب الباب، يجب عدم تشغيل الفرن حتى يقوم شخص مختص بإصلاحها.

معلومة إضافية

إذا لم تتم المحافظة على الجهاز في حالة نظافة جيدة يمكن أن تتدهور حالة أسطحه وتؤثر على عمره الافتراضي وتؤدي إلى وضع خطير.

المواصفات

الطراز:	CMXW20DB-SASO
الفولتية المقننة:	220 فولت ~ 60 هيرتز
قدرة الدخل المقننة (ميكروويف):	1050 واط
قدرة الخُرج المقننة (ميكروويف):	700 واط

CANDY

أفران الميكروويف دليل الإرشادات

الطراز: CMXW20DB-SASO

الرجاء قراءة هذه الإرشادات بدقة وعناية قبل استخدام فرن الميكروويف،
والاحتفاظ بها في مكان آمن.
إن اتباعك لهذه الإرشادات يمنحك خدمة ممتازة لأعوام مديدة.

الرجاء الاحتفاظ بهذه الإرشادات في مكان آمن

CANDY

CMXW20DB-SASO

AR

أفران الميكروويف
إرشادات المُستخدم