




User's manual

Twin-tub Washing Machine

RTT 281WSZ-19
RTT 2101WSZ-19

- Please read this manual carefully before using.
- Retain it for future reference.

0030516071

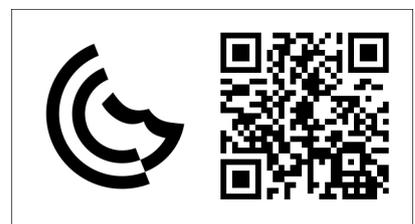

RTT 281WSZ-19/RTT 2101WSZ-19

Contents

◆ Safety precautions.....	2
◆ Packing list.....	4
◆ Machine components.....	4
◆ Installation and adjustment.....	5
◆ Pre-wash preparation.....	7
◆ Washing sequence.....	9
◆ Disposal after washing.....	12
◆ Troubleshooting.....	14
• Specifications.....	Back cover

Safety precautions

Meaning and description of the symbols



WARNING

Contents marked with this symbol relate to product and user safety. Please operate the machine in strict conformity to the contents of this manual to minimize the risk of personal injury and/or damage to the machine.



FORBIDDEN

Contents marked with this symbol describe actions prohibited to perform. If performed these actions will endanger the user's personal safety and may result in injury.

Please insert the power cord into a rated voltage outlet. Be sure to use a single-phase three pin outlet. Also, the terminal of the outlet must be grounded. If possible, please install an electric leakage protector.



When the machine is in use, place the power plug in a location where it can be easily inserted and extracted by hand. Be sure to remove the plug if power failure occurs, when moving or cleaning the machine, or when the machine is idle.




If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.




Use only the supplied hose set for the connection. Never reuse old hose sets!



Do not place the machine in a damp place like the bathroom and never wash it with water. Do not place wet laundry on the control panel.

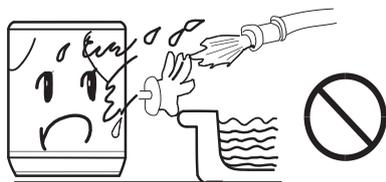


If the washing machine is installed on the ground near carpet, make sure to keep the ventilation hole clear of obstruction.

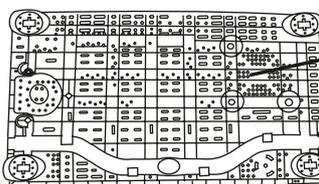

Ventilation hole at the bottom of the washing machine




Do not use water warmer than 50 °C .

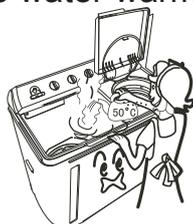


To avoid abnormal vibrations in spinning, do not use the machine to wash water-proof laundries like raincoats, bike covers etc.




Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

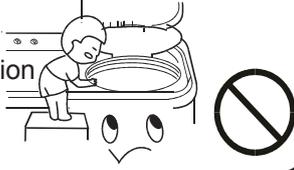


Do not share the outlet with other electric appliances. If the power plug is damaged, or feels loose when plugged into the outlet, stop using the plug immediately.

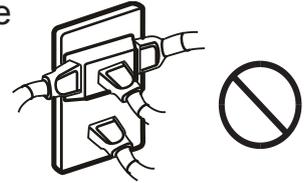

Do not put any high temperature or heavy objects on the washing machine.

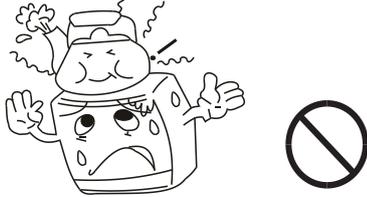

Do not attempt to take apart, repair or alter the machine by yourself.

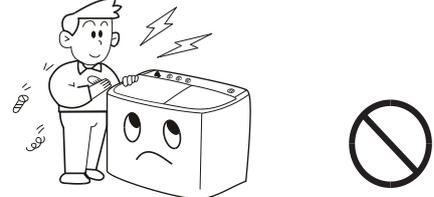

Disabled children or those not under adult supervision should not operate the machine.




Do not wash laundry with volatile or flammable materials (such as thinner, petrol etc.).



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Keep the machine away from direct sunlight and heat sources like the radiator.

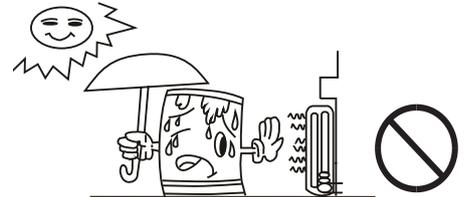


This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

• To guarantee your safety, please ensure the power outlet is grounded before use.

• To protect your laundry and the washing machine, please remove all coins, buttons, sand, hairpins and other foreign materials before washing.

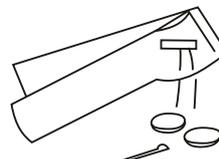


• Please check if the water faucet is turned on and make sure you have the proper water pipe connection


• It is recommended to use foamless washing powder.

Packing list


Twin-tub washing machine

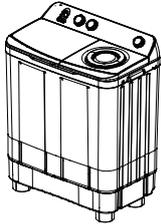

Water intake hose




Gland



Lint filter
(only on model
RTT 281WSZ-19)



Owner's manual

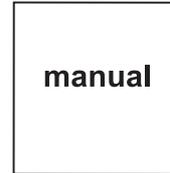

Machine Components

Wash time



If you wish to set it for less than 2 min, you should first turn past 6 min and then turn back.

Wash selector


Intensity can be set to standard, soft and drain.

Spin time

If to set to less than 1 min, in order to ensure a long service life, please first turn past 2 min and then turn back.

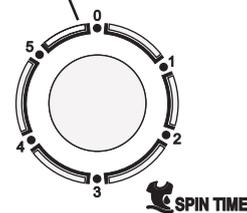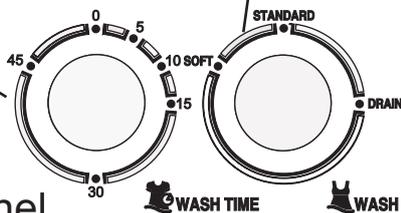

Control panel

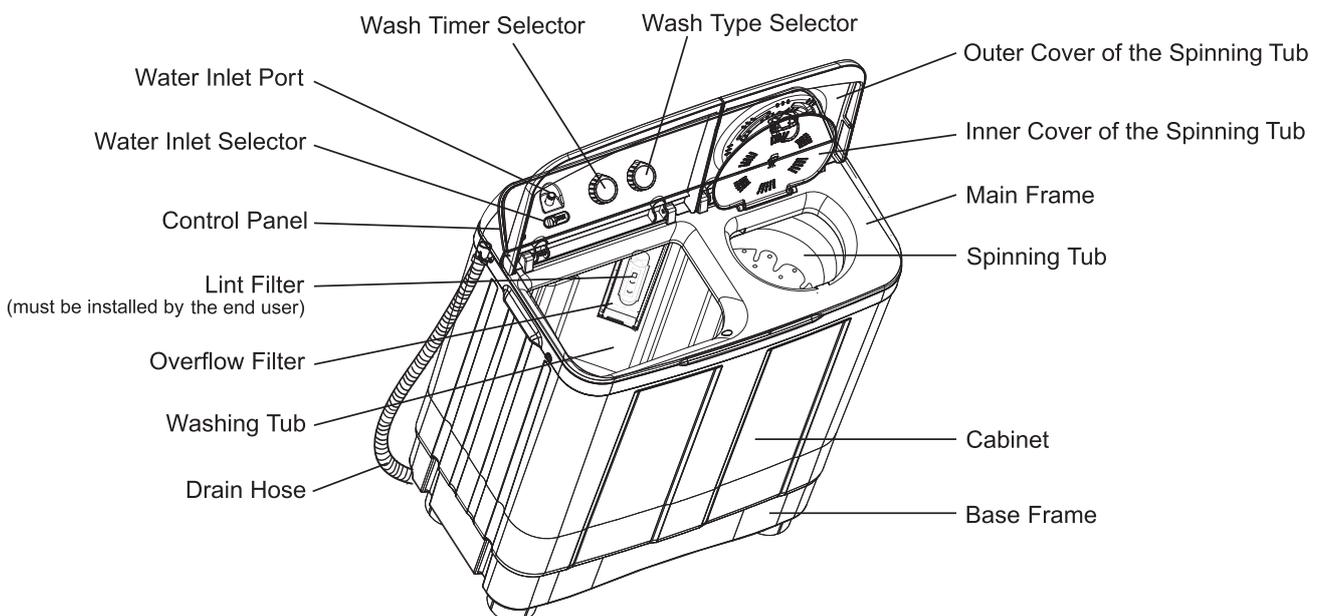

Important notes:

- All illustrations contained in this manual have a reference purpose only. Your washing machine as well as the accessories may look different from these illustrations.

Installation and adjustment


For your security and to ensure correct operation of the machine, please install and adjust the machine according to this manual's instructions.

Installation of the lint filter

Place the bottom side of the lint filter into the overflow filter, then push the top side into the overflow filter.


- After installation, please double check to make sure that the lint filter is installed in the correct location; otherwise it may fall off during operation.

(on models RTT 2101WSZ-19)

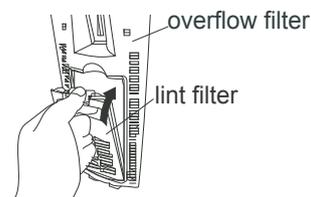

- After unpacking your washing machine, take out the lint filter from the documentation bag. Install the lint filter in the overflow filter located inside the washing tub. See the illustration.


(on models RTT 281WSZ-19)

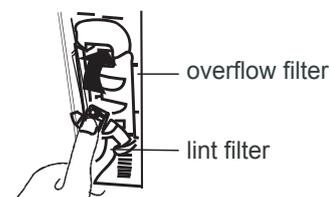

Drain hose usage

Drain hose drainage should be smooth and unobstructed.

1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth enough and cause incomplete drainage.

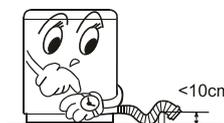


2. Do not tramp or press the drain hose.




3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly.



4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.

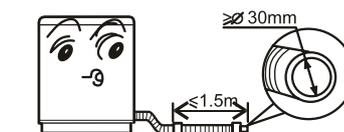

If the extra hose is too long, cut it either at point A or B.

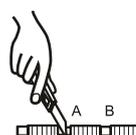

Change the direction of the drain hoses

Figure 1 shows the factory installation position of the drain hose.

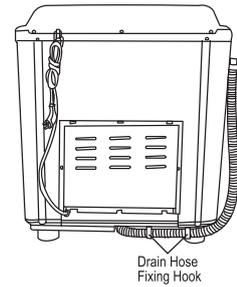


Figure 1

Extend the drain hose from the spin tub side:

1. Remove the drain hose from the hanging hole on the cabinet. Pull the drain hose fixing hook outwards gently to take out the drain hose from the two fixing hooks. (See Figure 2.)

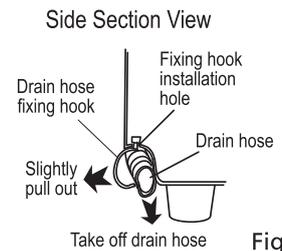


Figure 2

2. Turn 90° the drain hose fixing hook to remove it from the installation hole. (See Figure 3.)

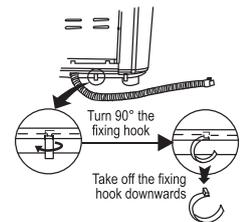


Figure 3

3. Install the two drain hose fixing hooks taken out, into the installation hole at the other side of the base frame (to aim at the installation hole accurately you can lean the washing machine forward slightly). Then turn 90°. (See Figure 4.)


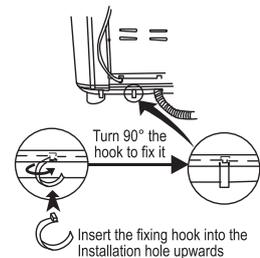


Figure 4

Install the water intake hose

- Insert the water intake hose into the water-inlet entrance on the control panel.
- Add water as necessary.

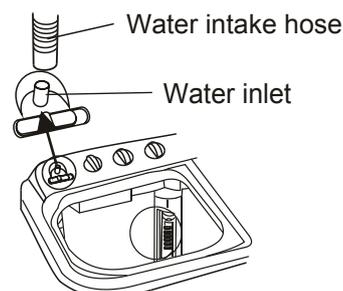

Pre-wash Preparation

Basic know-how

- The maximum capacity during washing and spinning cycles refers to the max weight of standard dry laundry that can be washed or spun at one time. The laundry quantity during one washing cycle should be lower than the rated capacity.
- Thickness, size, and the type of cloth will influence actual washing capacity. It is acceptable to put in a reasonable amount of laundry as the laundry will be mixed around during the washing process.
- To avoid splashing, do not select the “Maximum” water level for low loads.
- Using high sudsing detergent is not recommended.



Pay attention to followings before washing the laundries

Check to see if the items have special washing requirements.

Put hard to absorb water items into the machine by hand.

Empty out pockets. Take out any coins, sand, hairpins



Check to see if the items are appropriate for use with the washing

Do not overload the washer. Stretch and loosen the laundry before putting it into the washer.



Tie any long strips; fasten buttons; and close any zippers.



For laundry that is susceptible to lint balls and/or has long fur, turn it inside out before putting it in the washer.

Do not put laundry polluted by chemicals into the washing machine directly.

For heavily soiled laundry, try to remove dirt such as mud or dust first and apply detergent in advance. This will help to remove the stains more easily.

Divide non-colorfast laundry from other laundry.

When the pulsator is running, some noise may emit from laundry that contains buttons. To minimize this noise, surround laundry with buttons with other laundry.



Detergent use

How to add detergent:

- Method 1 - directly dissolving in the machine:
 1. Add a small quantity of water to the machine.
 2. Add the detergent powder. Run washing machine for 30 seconds to dissolve powder completely.
 3. Place laundry into the washing machine and select a suitable water level.
- Method 2 - instantly dissolving the detergent powder:
 1. Prepare warm water at 30 °C and a container.
 2. Add the detergent powder while stirring until it dissolves fully.
- Laundry powder is more prone to damage laundry than liquid detergent. Please exercise
- caution and do not exceed the maximum quantity.
Dosages of detergent powder may vary. Please follow the instructions on the detergent.

Using bleach detergent:

- Add water to suitable levels. Dilute the bleach with a separate container. Pour it slowly into the washing machine.
- Avoid using whitening agents on laundry with colors and/or patterns as they are prone to lose color.
- The whitening agent should not come in direct contact with the laundry.
- Refer to the product instructions for information on proper usage and quantity
- Dissolve powder whitening agents before use.

Note:

The energy test program(RTT 281WSZ-19):

Full load Cotton 60:Manually fill in hot water (23 to 24 liters) and cold water up to the 4 water level,after Standard wash 45min,then keep washing 30min,Drain,Spin twice,each for 5min,5min cold rinse with 4 water level,Drain,Spin twice,each for 5min;

Partial load Cotton 60:Same as Full load Cotton 60 but with 15 to 16 liters hot water in washing process and spin once after washing and rinsing;Water level select 1;

Partial load Cotton 40:Same as Full load Cotton 60 but with 12 to 13 liters hot water in washing process and spin once after washing and rinsing;Water level select 1;

The energy test program(RTT 2101WSZ-19):

Full load Cotton 60:Manually fill in hot water (28 to 29 liters) and cold water up to the MED water level,after Standard wash 45min,then keep washing 30min,Drain, Spin twice,each for 5min,5min cold rinse with MED water level,Drain,Spin twice, each for 5min;

Partial load Cotton 60:Same as Full load Cotton 60 but with 21 to 22 liters hot water in washing process and spin once after washing and rinsing;Water level select BZ;

Partial load Cotton 40:Same as Full load Cotton 60 but with 17 to 18 liters hot water in washing process and spin once after washing and rinsing;Water level select BZ;

Washing sequence

Washing

1. Inlet selector

Set the selector to "WASH".(Figure1)



Figure 1

2. Add water

Machine begins to dispense detergent uniformly.(Figure2)

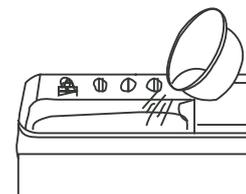


Figure 2

3. Put in the wash load. Add more water as necessary.(Figure3)

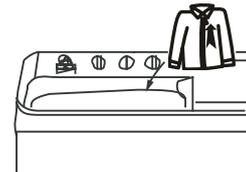


Figure 3

4. Select intensity.

Select "SOFT" or "STANDARD" water flow intensity according to the wash load.(Figure4)

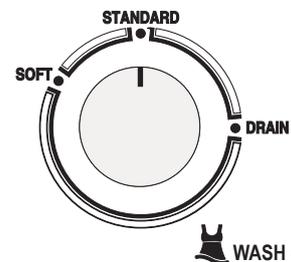


Figure 4

WASH SELECTOR

5. Select wash time.

Select wash time according to the wash load. (Figure5)

The washing instruction with soaking:

- (1) 0-15 minutes is normal washing;
- (2) 15-45 minutes is sport soaking and the pulsator will run 2.5 minutes each 7.5 minutes interval, until sport soaking is end, finally it is 15 minutes normal washing;
- (3) When the user select the soaking, firstly make sure the detergent power is fully dissolved. Otherwise it may be harmful to clothing.

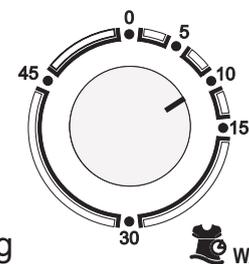


Figure 5

WASH TIME

6. After the wash is completed, set the switch to the "DRAIN" position.(Figure6)

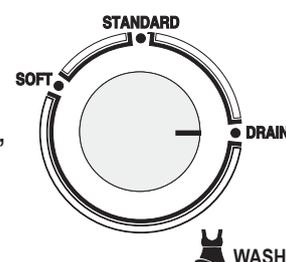


Figure 6


WASH SELECTOR

Mid-wash spin cycle

1. Put the laundries into the spin tub evenly and smoothly.


2. Spin : (1) Distribute the laundry into the spin tub smoothly and evenly.

Note: the gland must be inserted properly even if the laundry quantity is small.

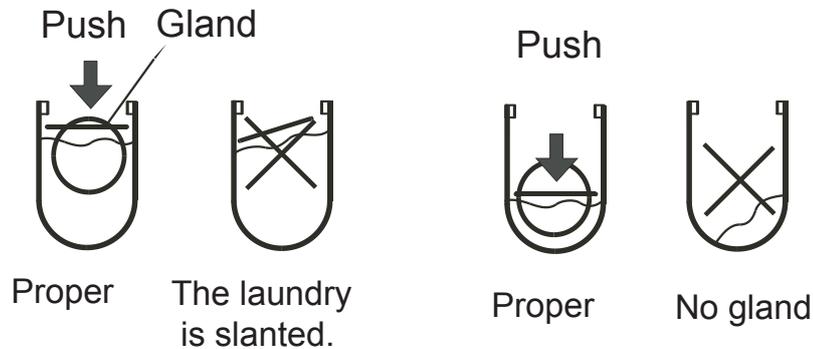

(2) Close both the inner and outer covers of the spin tub.

(3) Spin for 1-2 minutes.

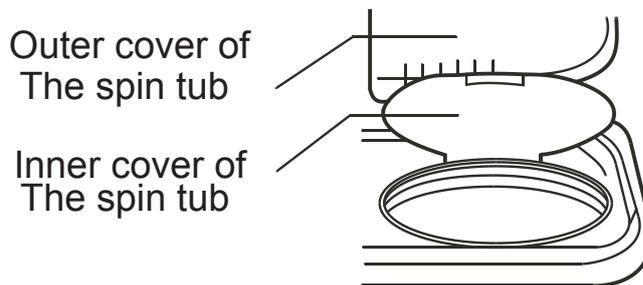


3. Run the foam-removing spinning.

(1) Open the outer cover of the spin tub.

(2) Set the water-filling selector control rod at the "SPIN" side. Fill water for about 1 minute.

If the water quantity filled is too large, the water may flow out from the wash tub side. Please twist the water tap to limit the water filling.

(3) Close the outer cover of the spin tub.
Spin for 1-2 minutes.

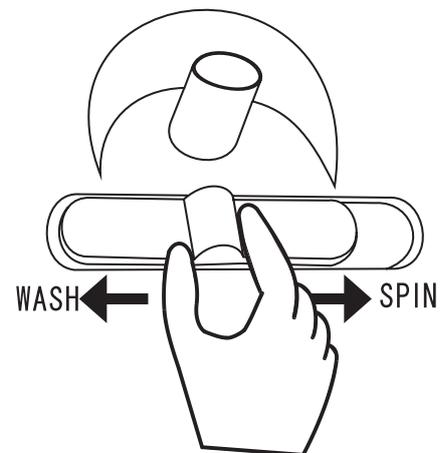

The rinse cycle

Rinse with water-filling

1. Place laundry into the washing machine.

Place laundry into the washing machine. Select the appropriate current according to the laundries.

2. Add water.

Add the appropriate amount of water.

3. Rinse

Adjust the wash timer to 5-7 minutes for the rinse cycle.

Rinsing with stored water

(Repeat the mid-wash spin cycle and rinse cycle with stored water 2-3 times)

1. Place laundry into the washing machine. Select the appropriate current according to the laundries.

2. Fill up water to the preset level.

3. Rinse.

Adjust the wash timer to 2-3 minutes for rinsing.

When the laundry quantity is low, use the "SOFT" current. If you use the "STANDARD" current, the water may splash.

Spinning

1. Distribute laundry into the spin tub evenly and smoothly.


2. Insert the gland into the tub properly.

Close the inner and outer cover of the spin tub.

3. Spin.

Select an appropriate spin time according to the condition of the laundry, and start the spinning cycle.

- During the spinning cycle, if any abnormal sound occurs, it is generally due to the laundry being placed in a slanted fashion. Please stop the machine and re-arrange the laundry accordingly.
- During the spinning cycle, the machine will pause if the outer cover of the spin tub is opened. Close it to resume the spinning cycle.

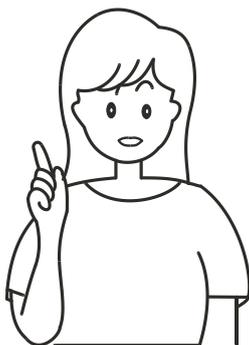

To run spinning and draining or rinsing with water-filling one after the other, first run the spinning cycle for around 1 minute, then draining or rinsing with water-filling. Otherwise the water-filling. Otherwise the spinning will stop automatically because of the excess water in the spin tub.

Disposal after washing


- After each use, be sure to clean the lint and foreign materials from the lint filter and the overflow filter in a timely fashion. Removing lint is important for healthy operation of the machine.
- Please remove the plug from the power outlet first before cleaning.

Cleaning the lint filter


The lint filter should always be used during washing and should be cleaned after each use in a timely fashion.

On model RTT 2101WSZ-19.

1. To remove the lint filter, first press the elastic piece at the upper end of the filter to release the tab from the filter cover, then pull outward.

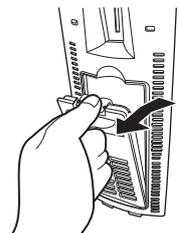

2. Pull the lower end of the lint filter rear cover outward to separate it from the lint filter front cover. Remove lint completely by rinsing with clear water.

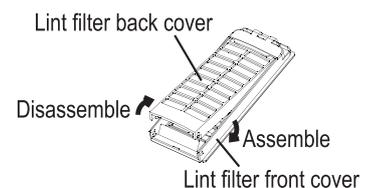


3. Re-install the lint filter.

On model RTT 281WSZ-19.

1. Remove the lint filter. Place your hand in the shown position. Push down to remove the filter.



2. Remove collected lint. Place the filter in water and remove lint while wet.

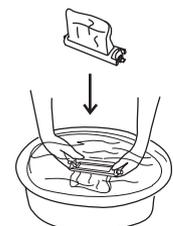

3. Re-install the lint filter.


Cleaning the overflow filter

Too much lint in the overflow filter will influence normal usage of the machine. Remember to clean it once every two months.

On model RTT 2101WSZ-19.


1. Take off the overflow filter.

Nip the elastic fixing claw and pull in the direction of the arrow to remove (as demonstrated in the figure to the right).

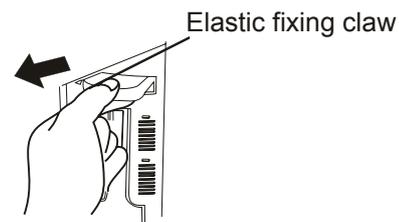

2. Clean the overflow filter.

Clean the lint around the filter and flush with tap water.

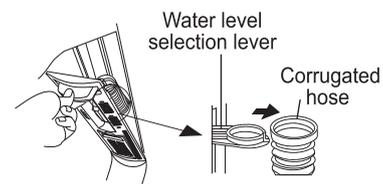

3. Re-install the overflow filter.


- 1) Install the corrugation pipe.
- 2) Attach the mounting plate at the bottom of the filter into the valve cover.
- 3) Hang the hook on the left upper side.
- 4) Push in the upper part.



On model RTT 281WSZ-19.

1. Take off the overflow filter as shown in the figure.

Nip the elastic fixing claw and pull it in the direction of the arrow to take it off.

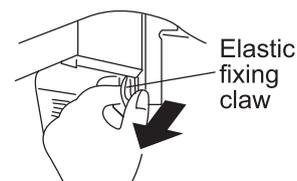

2. Clean the overflow filter.

Clean the lint around the filter and flush with tap water.

3. Re-install the overflow filter.

- 1) Install the corrugation pipe.
- 2) Attach the mounting plate at the bottom of the filter into the valve cover.
- 3) Hang the hook on the left upper side.
- 4) Push in the upper part.



Cleaning the unit


- Wipe the entire unit with a soft dry cloth.
- Use neutral detergent to wipe if the machine is excessively dirty.
- Do not apply water directly when cleaning.
- After washing, disconnect the water intake hose.
- Do not store water in the machine for long periods of time. Drain the water immediately after each use.
- Pull out the power plug and hang up the power cord.
- Hang up the drain hose. Wipe off water drops on the surface and inside the machine with a clean soft cloth.
- Open the cover of the wash cycle compartment and the inner/outer covers of the spin cycle compartment for a short period (about one hour), then close them.



Troubleshooting

When the remaining water is frozen

Pour hot water below 50°C into the wash cycle compartment to soak it completely, then using your hands gently turn the pulsator. Confirm that the drainage function is operating normally before next use.

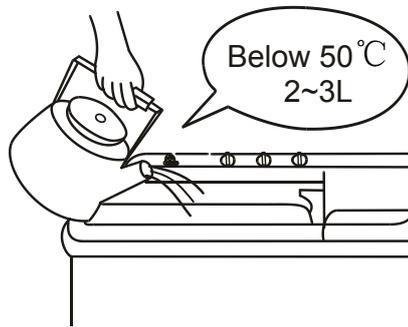

Prevent the freezing

(be sure to drain the water completely after each use) After completely draining, set the “WASH SELECTOR” to “STANDARD”. If it is set to “DRAIN”, it will be difficult for the frozen water to melt.

(If a breakdown occurs, always pull remove the power plug before inspecting the machine)

The following situations do not always indicate a breakdown. Please double confirm before sending the machine to be repaired.

If an actual breakdown occurs, visit the special maintenance department or after-sales service department of our company. Do not attempt to repair the machine by yourself.

Phenomena	The reason
The machine does not start.	<ul style="list-style-type: none"> • Is there a power failure? • Is the power plug loose? • Is the pulsator twisted by foreign materials?
The draining function does not work	<ul style="list-style-type: none"> • Is the drain hose put down? • Is the drain hose frozen? • Is the drain hose blocked by foreign material? • Is there laundry adhering to the outer side of the spin tub?
Abnormal sound during washing	<ul style="list-style-type: none"> • Are there hair pins, coins or metal items inside the tub?
Abnormal sound and violent vibration during the spin cycle	<ul style="list-style-type: none"> • Is the machine slanting? • Is the gland pressed evenly? • Is there laundry adhering to the outer side of the spin cycle compartment? • Is the spin cycle compartment overloaded?
Water flowing out of the drain hose during the first use of the machine.	<ul style="list-style-type: none"> • This is the water left over after the factory performance inspection.
The spin part does not work	<ul style="list-style-type: none"> • Is the spin tub outer cover open?

Specifications

Model	RTT 281WSZ-19	RTT 2101WSZ-19
Rated Voltage	230V~	230V~
Rated Frequency	60Hz	60Hz
Washing Capacity	8kg	10kg
Spin-dry Capacity	5kg	6kg
Rated Wash Power	390W	400W
Rated Spin Power	150W	150W
Total Input Power	540W	550W
Rated Current of Fuse	5A	5A
Degree of Water-Proof	IPX4	IPX4
Rated Annual Energy Consumption	283kWh	348kWh
Rated Annual Water Consumption	20680L	26180L
Net Weight	23.5kg	25kg
Dimensions	(825x470x990)mm	(865x500x995)mm
Injection pressure	0.02 - 0.2MPa	0.02 - 0.2MPa
Water level/Water quantity (approximately)	MAX/76L,5/70L,4/63L, 3/57L,2/50L,1/43L	MAX/89L,MED/76L, MIN/65L

MADE IN CHINA

CANDY ME FZE

Office 713, Block 4WA,
Dubai Airport Free Zone, Dubai,
United Arab Emirates,P.O. Box 54954

Tel: +971 4 299 3808

Fax: +971 4 299 3809

www.candy.ae

المواصفات

RTT 281WSZ-19	RTT 2101WSZ-19	الموديل
230 فولط~	230 فولط~	معدل الفولطية
60 هرتز	60 هرتز	معدل التردد
8 كجم	10 كجم	سعة الغسيل
5 كجم	6 كجم	قدرة الدوران الجاف
390 واط	400 واط	معدل طاقة الغسيل
150 واط	150 واط	معدل طاقة الدوران
540 واط	550 واط	إجمالي مدخلات الطاقة
5 أمبير	5 أمبير	معدل تيار الصمامات
IPX4	IPX4	معدل مقاومة المياه
283 كيلو واط ساعة	348 كيلو واط ساعة	معدل استهلاك الطاقة السنوي
20680 لتر	26180 لتر	معدل استهلاك المياه السنوي
23.5 كجم	25 كجم	الوزن الصافي
990x470x825 مم	995x500x865 مم	المقاسات
0.2-0.02 ميجاباسكال	0.2-0.02 ميجاباسكال	ضغط الحقن
57/3 لتر 50/2 لتر 43/1 لتر الأقصى/76 لتر 70/5 لتر 63/4 لتر	الأدنى/65 لتر المتوسط/76 لتر الأقصى/89 لتر	مستوى المياه / كمية المياه (تقريباً)

صنع في الصين

كاندي مي م م ج

مكتب ٧١٣، مدخل رقم EWA

مطار دبي المنطقة الحرة، دبي،

الإمارات العربية المتحدة، صندوق بريد ٥٤٩٥٤

هاتف: ٣٨٠٨ ٢٩٩ ٤ ٩٧١ +

فاكس: ٣٨٠٩ ٢٩٩ ٤ ٩٧١ +

www.candy.ae

استكشاف المشكلات وحلها

في حالة تجمد المياه المتبقية

اسكب مياهاً ساخنة تقل درجة حرارتها عن 50 درجة مئوية في حوض الغسيل بحيث تغمر المياه الساخنة المياه المتجمدة تمامًا، ثم حرك النايبض بيديك برفق. تأكد من أن وظيفة التصريف تعمل على نحو طبيعي قبل الاستخدام التالي.



منع التجمد

(تأكد من تصريف المياه بأكملها بعد كل مرة يتم فيها استخدام الغسالة) بعد التصريف الكامل، اضبط "إختيارات الغسيل" (مفتاح التصريف) على الوضع "غسيل عادي" (إيقاف التشغيل). ففي حالة ضبطه على الوضع "تصريف" (تصريف)، فسيكون من الصعب إذابة المياه المتجمدة.

(في حالة حدوث عطل، فانزع دائماً قابس الطاقة قبل فحص الغسالة) لا تشير الحالات التالية إلى حدوث عطل دائماً. فيرجى التأكد قبل إرسال الغسالة لمركز التصليح. أما إذا حدث عطل حقيقي، يرجى التوجه لقسم الصيانة المختص أو قسم خدمة ما بعد البيع التابع لشركتنا. لا تحاول إصلاح الغسالة بنفسك.


السبب	الحالة
<ul style="list-style-type: none"> هل هناك عطل في التيار؟ هل قابس الطاقة غير موصل جيداً؟ هل هناك مواد غريبة تسبب التواء النايبض؟ 	الغسالة لا تبدأ التشغيل.
<ul style="list-style-type: none"> هل خرطوم التصريف متجمد؟ هل خرطوم التصريف مسدود بسبب جسم غريب؟ هل هناك غسيل ملتصق بلاجانب الخارجي من حوض التجفيف؟ 	وظيفة التصريف لا تعمل
<ul style="list-style-type: none"> هل تم إدخال دبابيس شعر أو عملات معدنية أو أجسام معدنية داخل الحوض؟ 	يصدر صوت غير طبيعي أثناء الغسيل
<ul style="list-style-type: none"> هل الغسالة في وضع مائل؟ هل تم وضع السدادة في وضع مستو؟ هل هناك غسيل ملتصق بلاجانب الخارجي من حاوية حوض التجفيف؟ هل تم وضع ملابس كثيرة جداً في حوض التجفيف؟ 	يصدر صوت غير طبيعي واهتزاز عنيف أثناء التجفيف
<ul style="list-style-type: none"> هذا هو الماء المتبقي بعد عملية فحص الأداء في المصنع. 	يتدفق بعض المياه إلى خارج خرطوم التصريف عند استخدام الغسالة للمرة الأولى.
<ul style="list-style-type: none"> هل تم فتح الغطاء الداخلي؟ 	وظيفة التجفيف لا تعمل

تنظيف مرشح تصريف المياه الفائضة

سوف تؤثر الكمية الكبيرة جداً من النسلاة داخل مرشح تصريف المياه الفائضة في الاستخدام العادي للغسلاة. لذا احرص على تنظيفه مرة كل شهرين.


على الموديل RTT 2101WSZ-19.

1. قم بفك اللوحة الأمامية.

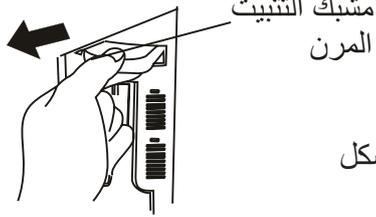

اضغط على مشبك التثبيت المرن واسحبه في اتجاه السهم لنزعه (كما هو موضح بلاشكل على اليسار).

2. نظف مرشح تصريف المياه الفائضة.

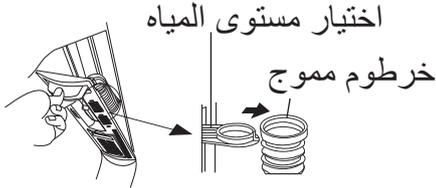

قم بإزالة النسلاة المحيطة بالمرشح واغمره بمياه الصنبور.


3. أعد تركيب مرشح تصريف المياه الفائضة.

1) قم بتركيب أنبوب التموج.

2) أدخل لوحة التركيب بالأجزاء السفلي من المرشح على غطاء الصمام.

3) قم بتعليق الخطاف على الجانب الأيسر العلوي.

4) ادفع الجزء العلوي للداخل.

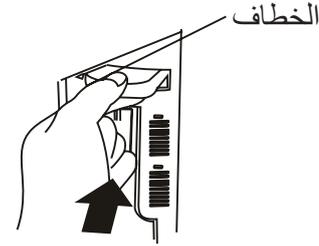

على الموديل RTT 281WSZ-19.

1. قم بإزالة فلتر الفائض كما هو موضح في الشكل.

ارشف مخلب التثبيت المرن واسحبه في اتجاه السهم لخلعه.

2. نظف مرشح تصريف المياه الفائضة.

قم بإزالة النسلاة المحيطة بالمرشح واغمره بمياه الصنبور.


3. أعد تركيب مرشح تصريف المياه الفائضة.

1) قم بتركيب أنبوب التموج.

2) أدخل لوحة التركيب بالأجزاء السفلي من المرشح على غطاء الصمام.

3) قم بتعليق الخطاف على الجانب الأيسر العلوي.

4) ادفع الجزء العلوي للداخل.

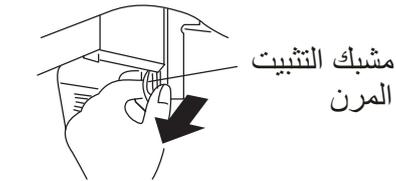

تنظيف الغسالة

- امسح الغسلاة بالكامل باستخدام قطعة قماش نظيفة ومبللة.
- استخدم منظفًا معتدل التركيز لمسح الغسلاة إذا كانت متسخة للغاية.
- لا تضع الماء مباشرة أثناء التنظيف.
- بعد الغسيل، افصل خرطوم إدخال المياه.
- لا تخزن المياه داخل الغسلاة لمدة زمنية طويلة. وقم بتصريف المياه على الفور بعد كل مرة يتم فيها استخدام الغسلاة.
- انزع قابس الطاقة وقم بتعليق سلك الطاقة.
- قم بتعليق خرطوم التصريف. وامسح قطرات المياه المتساقطة على السطح وداخل الغسلاة بواسطة قطعة قماش نظيفة ناعمة.
- افتح غطاء حوض الغسيل والغطاء الداخلي/الخارجي لحوض التجفيف لوقت قصير (حوالي ساعة واحدة)، ثم أغلقها.



التصريف بعد الغسيل

- بعد كل مرة استخدام، يرجى تنظيف النسلاة والمواد الغريبة العالقة بمرشح النسلاة ومرشح تصريف المياه الفائض خلال وقت ملائم. فإزالة النسلاة مهمة من أجل تشغيل الغسلاة على نحو سليم.
- يرجى إزالة القابس من مأخذ الطاقة أولاً قبل التنظيف.

تنظيف مرشح النسلاة


يجب دائماً استخدام مرشح النسلاة أثناء الغسيل، ويجب تنظيفه بعد كل مرة استخدام خلال فترة زمنية ملائمة.



على الموديل RTT 2101WSZ-19 .

1. لإزالة مرشح النسلاة، قم أولاً بضغط على القطعة المرنة في الطرف العلوي من المرشح لتحرير اللسان من غطاء المرشح، ثم اسحب لأعلى.

الغطاء الخلفي لمرشح النسلاة

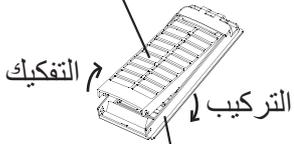

الغطاء الأمامي لمرشح النسلاة

2. اسحب الطرف السفلي من الغطاء الخلفي لمرشح النسلاة لأعلى لفصله عن الغطاء الأمامي لمرشح النسلاة. قم بإزالة النسلاة بالكامل من خلال الشطف بماء نظيف.


3. إعادة تركيب مرشح النسلاة

على الموديل RTT 281WSZ-19 .

1. أزل فلتر الوبر. ضع يدك في الموضع الموضح. ادفع لأسفل لإزالة الفلتر.



2. أزل الوبر التي تم جمعها. ضع الفلتر في الماء وقم بإزالة الوبر عندما يكون مبتلاً.

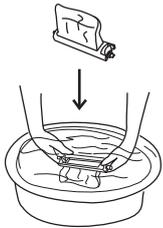

3. إعادة تركيب مرشح النسلاة

دورة الشطف

الشطف مع تعبئة المياه

1. ضع الغسيل في الغسالة.
ضع الغسيل في الغسالة. حدد التيار المناسب حسب طبيعة الغسيل.
2. ضبط مستوى المياه
اضبط مستوى المياه باستخدام ذراع الضبط حسب كمية الغسيل، ثم أضف الكمية الملائمة من المياه.
3. الشطف
اضبط مؤقت الغسيل على 5-7 دقائق من أجل دورة الشطف

الشطف بمياه مخزنة

(كرّر دورة التجفيف المتوسطة ودورة الشطف باستخدام مياه مخزنة لمرة أو ثلاث مرات)

1. ضع الغسيل في الغسالة. حدد التيار المناسب حسب طبيعة الغسيل.
 2. املاً الحوض بلامياه حتى المستوى المطلوب.
 3. الشطف
اضبط مؤقت الغسيل من 2 إلى 3 دقائق لشطف الملابس.
- عندما يكون كم الغسيل محدودًا، فاستخدم تيار " **ناعم** " (هادئ). في حالة استخدام تيار " **غسيل عادي** " (عادي)، فقد تتناثر المياه.


التجفيف

1. ضع الغسيل داخل حوض التجفيف موزعًا على نحو متساوٍ ومتناسق.
 2. أدخل السدادة بالأحوض على نحو ملائم.
أغلق الغطاءين الداخلي والخارجي لحوض التجفيف.
 3. التجفيف
حدد وقت التجفيف المناسب حسب طبيعة الملابس، ثم ابدأ دورة للتجفيف.
- أثناء دورة التجفيف، إذا حدث أي صوت غير عادي، فسيكون عامة بسبب وضع الغسيل في وضع مائل. وعندئذ، يرجى إيقاف تشغيل الغسالة وإعادة ترتيب الغسيل بشكل مستو.
 - أثناء دورة التجفيف، ستتوقف الغسالة عن التشغيل مؤقتًا إذا فتحت الغطاء الخارجي لحوض التجفيف. ومن ثم، عليك إغلاقه حتى تتم مواصلة عملية التجفيف.

لتشغيل التجفيف والتصريف أو الشطف بماء متدفق بحيث تتم كل عملية تلو الأخرى، قم أولاً بتشغيل دورة التجفيف لمدة دقيقة تقريبًا، ثم قم بتصريف أو الشطف بماء متدفق، وإلا فسوف يتوقف التجفيف تلقائيًا بسبب الماء الزائد في حوض التجفيف.




1. ضع الغسيل داخل حوض التجفيف على نحو متساوٍ ومتناسق.
2. قم بإجراء التجفيف: (1) ضع الغسيل داخل حوض التجفيف على نحو متساوٍ ومتناسق. ملاحظة: يجب وضع السداة في وضع مستوٍ بلا قدر الملائم إذا كانت كمية الغسيل صغيرة.

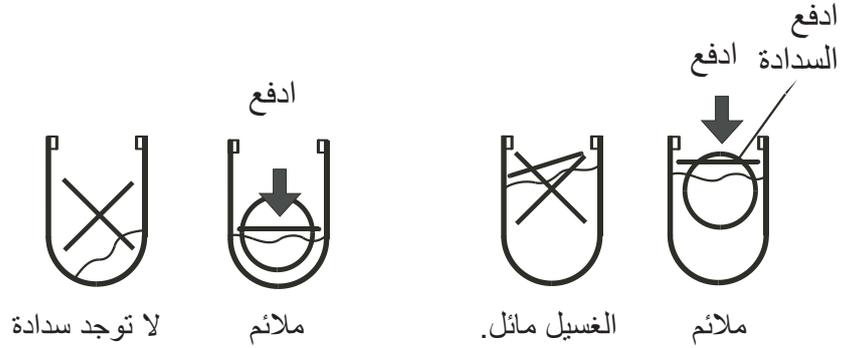

(2) أغلق كلاً من الغطاءين الداخلي والخارجي لحوض التجفيف.

(3) قم بالتجفيف لمدة تتراوح من دقيقة إلى دقيقتين.

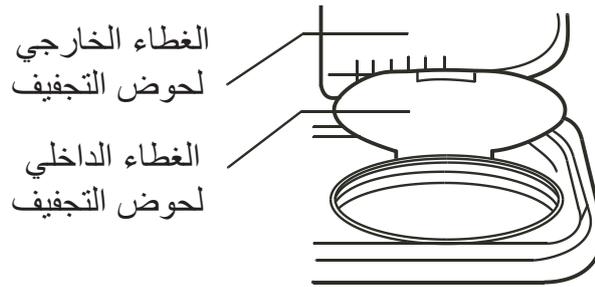


3. قم بتشغيل عملية التجفيف لإزالة الرغوة.

- (1) افتح الغطاء الخارجي لحوض التجفيف.
- (2) اضبط مفتاح التحكم في تحديد ملء المياه على جانب "تنشيف" (تجفيف). املأ المياه لمدة دقيقة تقريباً.

إذا تم ملء المياه بكمية كبيرة جداً، فربما تتدفق المياه خارج جانب حوض الغسيل. يرجى غلق صنوبر المياه قليلاً لتقليل تدفق المياه.

- (3) أغلق الغطاء الخارجي لحوض التجفيف. قم بالتجفيف لمدة تتراوح من دقيقة إلى دقيقتين.

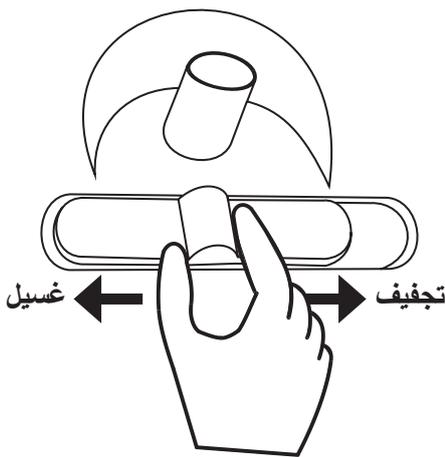


تسلسل الغسيل


الغسيل

1. محدد العملية
اضبط المحدد على الوضع " غسيل " (غسيل). الشكل 1
2. أضف المياه ومسحوق التنظيف المذاب حتى تصل المياه إلى المستوى الملائم.
تبدأ الغسالة في دفع المنظف على نحو متناسق.. (الشكل 2)
3. ضع مقدار الغسيل. أضف المزيد من المياه حسب الضرورة. (الشكل 3)
4. حدد قوة الغسيل.
حدّد " ناعم " (هادئ) أو " غسيل عادي " (عادي) لقوة تدفق المياه حسب حمولة الغسيل. (الشكل 4)
5. حدد زمن الغسيل.
حدد زمن الغسيل حسب حمولة الغسيل. (الشكل 5)
6. بعد الانتهاء من الغسيل، اضبط المفتاح على وضع "تصريف"
(التصريف). (الشكل 6)


الشكل 1

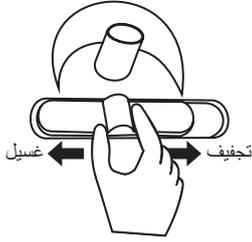


الشكل 2

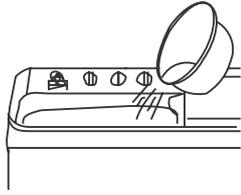


الشكل 3

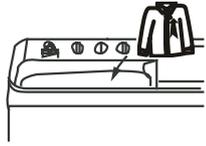


الشكل 4

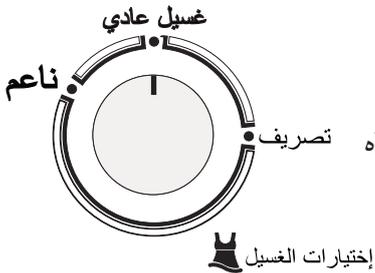

الشكل 5

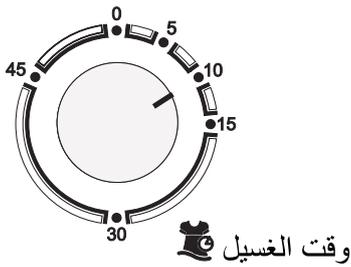

الشكل 6

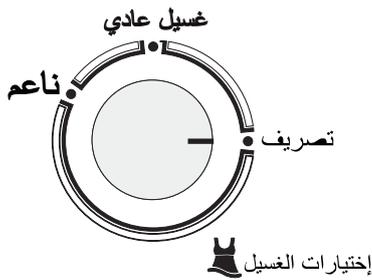

كيفية إضافة المنظف:

- الطريقة 1 - إذابة المسحوق مباشرة في الغسالة:
 1. أضف كمية قليلة من المياه في الغسالة.
 2. أضف مسحوق التنظيف. قم بتشغيل الغسالة لمدة 30 ثانية لإذابة المسحوق تمامًا.
 3. ضع الغسيل في الغسالة، ثم حدد مستوى ملائمًا للمياه.
- الطريقة 2 - إذابة مسحوق التنظيف فورًا:
 1. حضّر مياهًا دافئة عند درجة حرارة 30 درجة مئوية ووعاءً.
 2. أضف المسحوق مع التقليب لإذابته تمامًا.
- يكون المسحوق أكثر قدرة على الإضرار بالملابس مقارنة بالمنظفات السائلة. يرجى توخي الحذر وعدم تجاوز أقصى كمية موصى بها.
- قد تختلف الكميات المحددة لمسحوق التنظيف. يرجى اتباع التعليمات الموضحة على عبوة المنظف

استخدام منظف التبييض:

- أضف المياه حتى المستوى الملائم. وأذب المادة المبيضة في وعاء منفصل. واسكبها ببطء داخل الغسالة.
- تجنب استخدام المواد المبيضة على الملابس الملونة و/أو ذات الرسومات، فمن المحتمل أن تفقد لونها.
- يجب ألا تتلامس المادة المبيضة مع الغسيل مباشرة.
- راجع تعليمات المنتج لمعرفة معلومات عن الكمية وطريقة الاستخدام الملائمتين.
- أذب مساحيق التبييض قبل الاستخدام.

ملحوظة:

برنامج اختبار الطاقة (RTT 281WSZ-19) :

- حمولة كاملة قطن 60 : املاً الماء الساخن يدويًا (من 23 إلى 24 لترًا) والماء البارد حتى مستوى الماء 4، بعد الغسل القياسي لمدة 45 دقيقة ، ثم استمر في الغسيل لمدة 30 دقيقة ، الصرف ، الدوران الثنائي ، كل لمدة 5 دقائق ، وشطف بارد لمدة 5 دقائق مع 4 منسوب المياه ، الصرف ، الدوران الثنائي ، كل لمدة 5 دقائق ؛
- حمولة جزئية قطن 60 : مثل حمولة كاملة قطن 60 ولكن مع 15 إلى 16 لتر ماء ساخن في عملية الغسيل وتدور مرة واحدة بعد الغسيل والشطف. حدد مستوى المياه 1 ؛
- حمولة جزئية قطن 40 : مثل حمولة كاملة قطن 60 ولكن مع 12 إلى 13 لتر ماء ساخن في عملية الغسيل وتدور مرة واحدة بعد الغسيل والشطف. حدد مستوى المياه 1 ؛

برنامج اختبار الطاقة (RTT 2101WSZ-19) :

- حمولة كاملة قطن 60 : املاً الماء الساخن يدويًا (من 28 إلى 29 لترًا) ماء بارد حتى مستوى الماء MED ، بعد الغسل القياسي لمدة 45 دقيقة ، ثم استمر في الغسيل لمدة 30 دقيقة ، الصرف ، الدوران الثنائي ، كل لمدة 5 دقائق ، والشطف البارد لمدة 5 دقائق بماء MED المستوى ، الصرف ، الدوران الثنائي ، كل لمدة 5 دقائق ؛
- حمولة جزئية قطن 60 : مثل حمولة كاملة قطن 60 ولكن مع 21 إلى 22 لتر ماء ساخن في عملية الغسيل وتدور مرة واحدة بعد الغسيل والشطف. حدد مستوى المياه BZ.
- حمولة جزئية قطن 40 : مثل حمولة كاملة قطن 60 ولكن مع 17 إلى 18 لتر ماء ساخن في عملية الغسيل وتدور مرة واحدة بعد الغسيل والشطف. حدد مستوى المياه BZ.

التحضير للغسيل التمهيدي


الإرشادات الأساسية



- تُشير السعة القصوى أثناء دورات الغسيل والتجفيف إلى أقصى وزن للملابس المغسولة/ المجففة العادية التي يمكن غسلها أو تجفيفها في مرة واحدة. ويجب أن تكون كمية الغسيل في دورة الغسيل الواحدة أقل من السعة المُقدَّرة للغسالة.
- ستؤثر كثافة الملابس وحجمها ونوعها على السعة الفعلية للغسيل. لذلك، فمن المناسب أن تضع كمية معقولة من الغسيل، ومن ثم يصبح من الممكن تدوير الملابس أثناء عملية الغسيل.
- لتجنب رذاذ الماء، لا تُحدِّد "الحد الأقصى" لمستوى المياه مع أحمال الغسيل الصغيرة.
- يوصى بعدم استخدام منظفات ذات رغوة كثيفة.

انتبه إلى ما يلي قبل غسيل الملابس

تحقق مما إذا كانت الملابس ملائمة للاستخدام في الغسالة أم لا

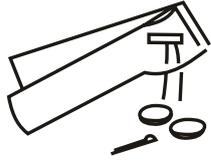

أفرغ الجيوب. وأخرج أي عملات معدنية وحبيبات رمال ودبابيس شعر

تحقق مما إذا كانت هناك متطلبات خاصة لغسيل الملابس أم لا. ضع الملابس التي تمتص المياه بصعوبة في الغسالة بيديك.



اربط أيًا من الأشرطة الطويلة، وأحكام غلق الأزرار، وأغلق أيًا من السحابات.




تجنب وضع حمل زائد بلاغسالة. قم بفرد الملابس وفكها قبل وضعها في الغسالة.

افصل الملابس غير الملونة عن غيرها من الملابس (أثناء الغسيل).

بلانسبة للملابس ذات الأوساخ المستعصية، حاول إزالة الأوساخ مثل الأتربة أو الطين أولاً، ثم ضع المنظف عليها قبل وضعها في الغسالة. فسوف يساعد ذلك في إزالة الأوساخ عنها بطريقة أسهل.


لا تضع الملابس الملوثة بمواد كيميائية داخل الغسالة مباشرة.

بلانسبة للملابس التي قد يعلق بها الوبر و/أو الملابس ذات الفرو الكثيف، اقلبها على الجهة الأخرى قبل وضعها في الغسالة.

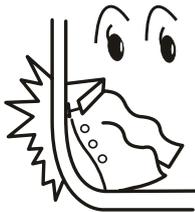

قد تتسبب أزرار الملابس في سماع بعض الضوضاء عندما يكون النابض قيد التشغيل. ولتقليل الضوضاء لأدنى حد ممكن، يرجى إحاطة الملابس ذات الأزرار بملابس أخرى.


تغيير اتجاه خرطوم التصريف

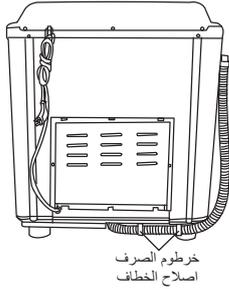

الشكل 1

يوضح الشكل 1 موقع تركيب المصنع لخرطوم الصرف.


عرض القسم الجانبي

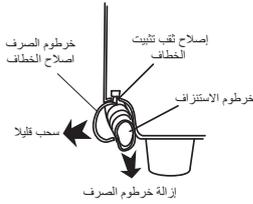

الشكل 2


تمديد خرطوم التصريف من الجانب حوض الدوران:

1. أخرج خرطوم التصريف من الفتحة المعلقة على الخزانة. اسحب خطاف تثبيت خرطوم التصريف للخارج برفق لإخراج خرطوم التصريف من خطاف التثبيت. (انظر الشكل 2).

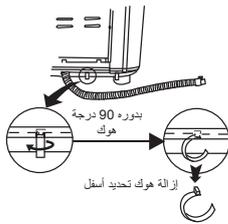

الشكل 3


2. أدر خطاف تثبيت خرطوم التصريف 90 درجة لإزالته من فتحة التثبيت. (انظر الشكل 3).

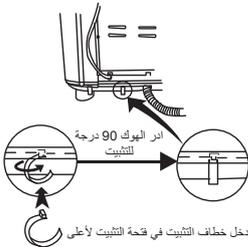

الشكل 4

3. قم بتركيب خطاطيف تثبيت خرطوم التصريف التي تم إخراجها، في فتحة التثبيت في الجانب الآخر من الإطار الأساسي (لتوجيه فتحة التثبيت بدقة، يمكنك أن تميل الغسالة إلى الأمام قليلاً) ثم أدر 90 درجة (انظر الشكل 4)

فك خرطوم إدخال المياه؛

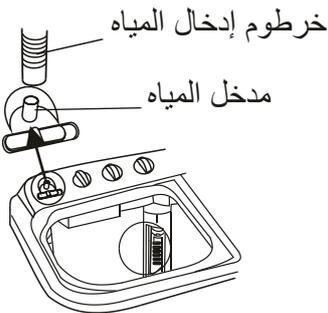

- أدخل خرطوم إدخال المياه في مدخل فتحة المياه في لوحة التحكم.

- أضف المياه حسب الضرورة.

التركيب والضبط

يرجى تركيب الغسالة وضبطها وفقاً للتعليمات الواردة في الدليل، ومن الضروري الالتزام بذلك للمحافظة على سلامتك وتشغيل الغسالة على نحو صحيح.

تركيب مرشح النسالة



أدخل الجزء السفلي من مرشح النسالة داخل مرشح تصريف المياه الفائضة، ثم ادفع الجزء العلوي (من مرشح النسالة) لداخل مرشح تصريف المياه الفائضة.


- وبعد التركيب، يرجى الفحص للتأكد من أن مرشح النسالة مركب في الموضع الصحيح، وإلا فمن الممكن أن يسقط أثناء التشغيل. (على الموديل RTT 2101WSZ-19)



- بعد تفريغ الغسالة، أخرج فلتر الوبر من حقيبة الوثائق. قم بتهيئة فلتر الوبر في فلتر الفائض الموجود داخل حوض الغسيل. انظر الرسم التوضيحي. (على الموديل RTT 281WSZ-19)

استخدام خرطوم التصريف


يجب أن يكون مسار خرطوم التصريف ملائماً وخلاًياً من أي مواد تعيق التصريف.

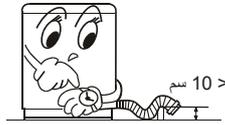


1. يجب أن يكون ارتفاع خرطوم التصريف أقل من 10 سم، وإلا فلن يكون التصريف يسيراً بلا قدر الكافي؛ مما قد يتسبب في عدم تصريف المياه بالكامل.




2. لا تخطّ فوق خرطوم التصريف أو تضغط عليه.

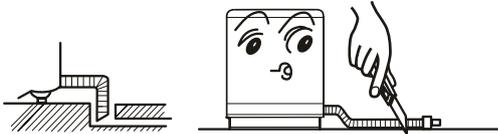

3. إذا كان خرطوم التصريف طويلاً جداً، فاقطعه عند نقطة المنتصف. ولتسهيل عملية التصريف، اقطع الطرف الأمامي من الخرطوم باتجاه مائل.

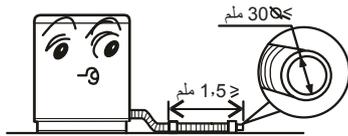

4. إذا استلزم الأمر استخدام خرطوم تصريف إضافي، يرجى شراؤه كوحدة منفصلة. ويجب ألا يكون القطر الداخلي للخرطوم الإضافي أقل من 30 ملم، بحيث ألا يتجاوز طوله 1,5 متر.

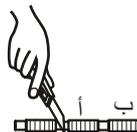

5. إذا كان الخرطوم الإضافي طويلاً جداً، فاقطعه إما عند النقطة "أ" أو "ب".

قائمة التعبئة

دليل الملاك




الدليل


مرشح النسلاية
على الموديل
(RTT 281WSZ-19)




الدليل



إدخال سدادة

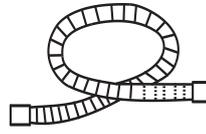

غسلاية ذات خرطوم المياه

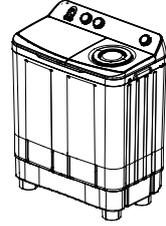

مكونات الغسلاية

مؤقت الغسيل


إذا رغبت في الضبط على أقل من دقيقتين، يجب عليك أولاً التشغيل لأكثر من 6 دقائق ثم العودة إلى الضبط المراد.

مفتاح قوة الغسيل

يمكن ضبط قوة الغسيل على الوضع العادي أو الهادئ التصريف.

مؤقت التجفيف


إذا رغبت في الضبط لأقل من دقيقة، فمن أجل ضمان طول العمر الافتراضي للغسلاية، يرجى أولاً تدوير المفتاح للضبط على أكثر من دقيقتين ثم العودة للضبط المراد.

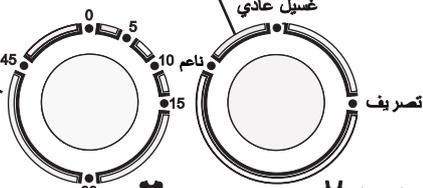


لوحة التحكم

وقت الغسيل

إختيارات الغسيل

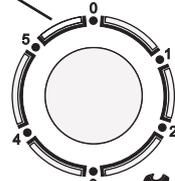


وقت التجفيف

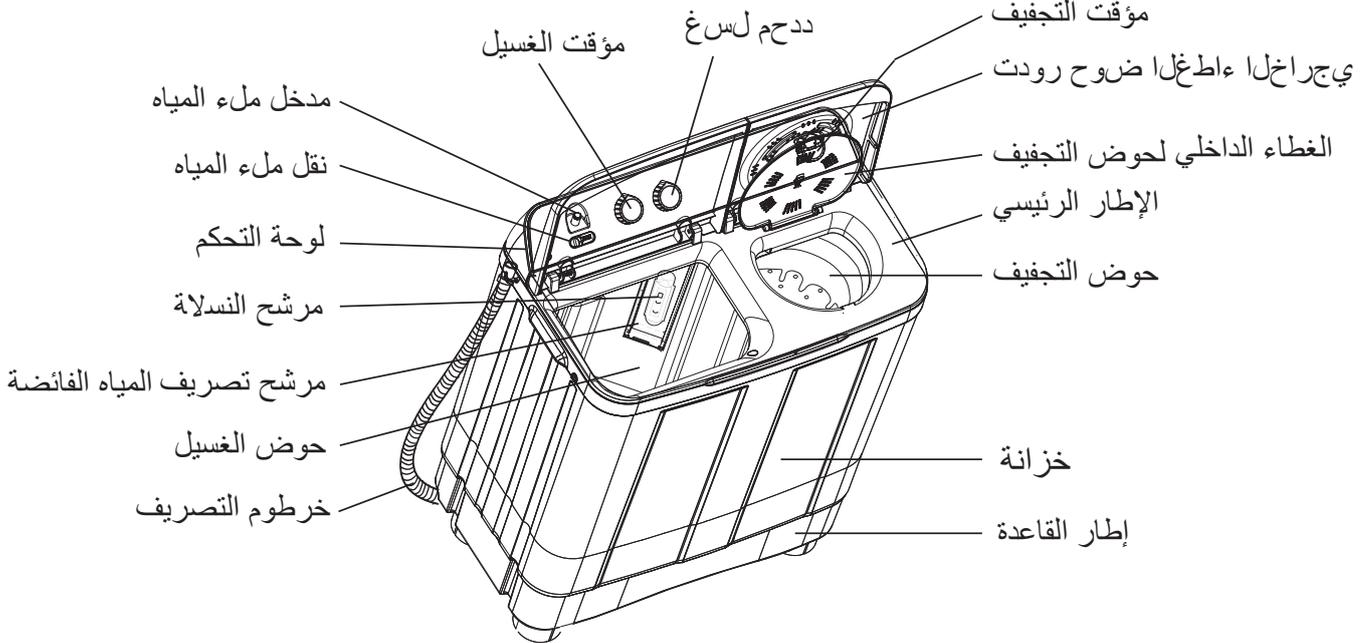

ملاحظات: يتم توفير جميع الرسومات التوضيحية في هذا الدليل كمرجع فقط. فقد تبدو المنتجات والملحقات مختلفة عن هذه الرسومات التوضيحية بسبب عمليات التحسين المستمرة.

لا تستخدم مأخذ طاقة واحدًا لتشغيل أجهزة كهربائية متعددة. وفي حالة تلف مقبس الطاقة، أو كان التوصيل بلامقبس غير محكم، فلا تستخدم هذا المقبس مطلقًا.

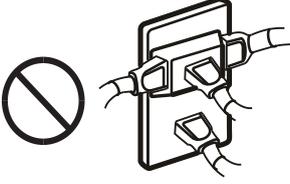

لا تمد يدك داخل الغسالة أثناء تشغيلها. حيث ينطوي ذلك على خطورة حتى في حالة الدوران ببطء. كما يرجى توجيه عناية خاصة عند وجود أطفال. هذا الجهاز غير مصمم للاستخدام بواسطة الأشخاص (بمن فيهم الأطفال) الذين يعانون من ضعف في القدرات الجسدية أو الحسية أو العقلية، أو تنقصهم الخبرة والمعرفة، ما لم يتم ذلك تحت إشراف أو توجيه بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.




لا تحاول تفكيك الغسالة أو إصلاحها أو تعديلها بنفسك.



لا تغسل الغسيل باستخدام مواد متطايرة أو قابلة للاشتعال (مثل مزيل الطلاء (التنتر) والبنزين وما إلى ذلك).



لا تضع أية أشياء ثقيلة أو ساخنة فوق الغسالة.

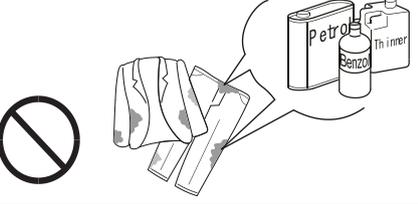

يجب عدم قيام الأطفال المعاقين أو الأصحاء دون إشراف من شخص يبلغ بتشغيل الغسالة.



أبق الغسالة بعيدة عن ضوء الشمس ومصادر الحرارة المباشرة، مثل جهاز التدفئة/التبريد.



هذا الجهاز غير مخصص للاستخدام من قبل أشخاص (بمن فيهم الأطفال) ذوي قدرات بدنية أو حسية أو ذهنية محدودة، أو نقص في الخبرة والمعرفة، إلا إذا تلقوا الإشراف أو التعليمات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم. يجب مراقبة الأطفال للتأكد من أنهم لا يلعبون بالجهاز.


هذا الجهاز مصمم للاستخدام في التطبيقات المنزلية وما شابهها مثل:

- مناطق مطبخ الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى ؛
- بيوت المزارع ؛
- من قبل العملاء في الفنادق والموتيلات والبيئات السكنية الأخرى ؛
- بيئات من نوع المبيت والإفطار ؛
- مناطق للاستخدام الجماعي في كتل من الشقق أو في المغا

- يرجى التحقق مما إذا كان صنبور المياه مفتوحًا، وتأكد من توفير توصيل جيد بأنبوب المياه.
- يوصى باستخدام مسحوق غسيل بدون رغوة.

- ينصح بإزالة جميع العملات المعدنية والأزرار وحببيات الرمال ودبابيس الشعر وغيرها من المواد الغريبة قبل الغسيل، وذلك لحماية الغسيل والغسالة.

- لضمان سلامتك، يرجى التأكد من تأريخ مأخذ الطاقة قبل الاستخدام.

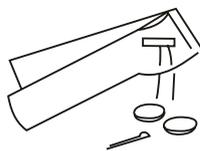

احتياطات السلامة

معاني الرموز ووصفها

تتعلق المحتويات التي تحمل هذا الرمز بسلامة المنتج والسلامة الشخصية للمستخدمين. لذا يرجى التشغيل مع الالتزام بالحازم بالمحتويات في هذا الدليل لتقليل احتمالية تعرُّض المستخدم لإصابات جسدية و/أو إتلاف الغسالة لأدنى حد ممكن.



توضح المحتويات المميزة بهذا الرمز إجراءات يحظر القيام بها. وفي حالة القيام بهذه الإجراءات، سوف يكون المستخدم معرضًا للخطر وقد تحدث له إصابات جسدية.



أثناء استخدام الغسالة، ضَع قابس الطاقة في مكان يسهل إدخاله ونزعه يدويًا. وتأكد من نزع القابس عند انقطاع التيار الكهربائي، أو عند تحريك الغسالة أو تنظيفها، أو عند تشغيلها في وضع الخمول.



يرجى إدخال سلك الطاقة في مقبس طاقة ذي جهد كهربائي مُقَدَّر. وتأكد من استخدام مقبس طاقة أحادي المرحلة ذي ثلاثة سنون. كما يجب تأريض طرف مقبس الطاقة. ويرجى تركيب مانع لتسرب التيار الكهربائي إن أمكن.




استخدم فقط مجموعة الخراطيم المتوفرة للتوصيل. لا تقم أبدا بإعادة استخدام مجموعات الخراطيم القديمة!



في حالة تلف سلك الإمداد، يجب استبداله من قبل الشر كة المصنعة أو وكيل الخدمة أو الأشخاص المؤهلين من أجل تجنب الخطر.




في حالة تثبيت الغسالة على أرضية مغطاة بسجادة، فلا تجعل السجادة تسد فتحة التهوية.

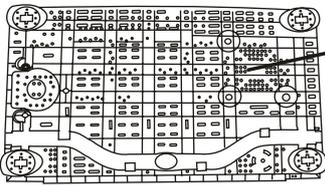

فتحة التهوية
بالأجزاء السفلي
من الغسالة



لا تضع الغسالة في مكان رطب مثل الحمام، ولا تغسلها بلاماء مطلقًا. ولا تضع الغسيل المبلل على لوحة التحكم.

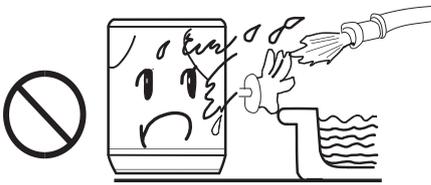

لا تغسل الملابس المقاومة لتأثير المياه مثل معطف المطر وأغطية الدراجات وغيرها لتفادي الاهتزازات غير العادية أثناء التجفيف.



تجنب استخدام مياه تزيد سخونتها عن 50 درجة مئوية.



المحتويات

2	احتياطات السلامة
4	قائمة التعبئة
4	مكونات الغسالة
5	التركيب والضبط
7	التحضير للغسيل التمهيدي
9	تسلسل الغسيل
12	التصريف بعد الغسيل
14	استكشاف المشكلات وحلها
	المواصفات
	الغلاف الخلفي



دليل الملاك
الغسالة ذات الحوضين

RTT 281WSZ-19
RTT 2101WSZ-19

- يرجى قراءة هذا الدليل بعناية قبل استخدام الغسالة.
- واحتفظ به للرجوع إليه في المستقبل.