


## OVEN TIMER USER's MANUAL

### GENERAL OVERVIEW

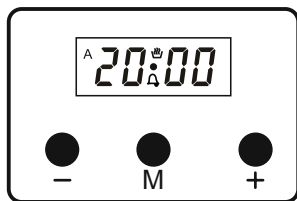


Is an electronic timer, which enables you to get the food ready to serve at the desired time. The only thing to be done is to program the cooking time and ready time. It can also be used as an alarm clock, where you just give in the amount of time after which it should remind you by a buzzer tone.

### POWER UP


On power up, clock (0:00) and 'A' is flashing on the screen. The timer cannot be programmed and the clock has to be adjusted. In order to program the timer, you have to enter first the manual mode.

### MANUAL MODE

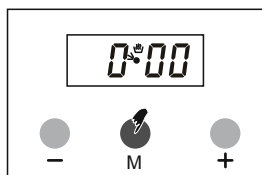

1. Press 'M' button in order to enter manual mode.


or

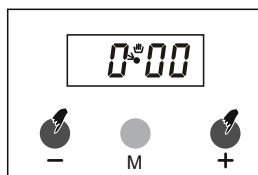


2. Press + and – buttons simultaneously in order to manual mode.

### TIME OF DAY ADJUSTMENT

This adjustment can only be made when no cooking program is in progress. First, press buttons + and – simultaneously. Then adjust the clock forward direction using + button and reverse direction using – button. Long presses of those buttons will result in fast changes.

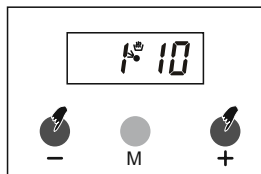

1. Press + and – simultaneously.

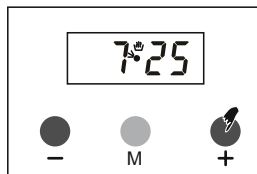


2. Using + or – buttons adjust time of the day.


**Note:** Unless the + or – buttons are pushed along 5 seconds, time of the adjustment mode will be end up automatically. If you want to finish time of the adjustment mode rapidly, you should press + and – buttons simultaneously.

## ADJUSTING THE BUZZER ALARM


With this feature, you can program after how much elapsed time you should be warned by a buzzer sound.

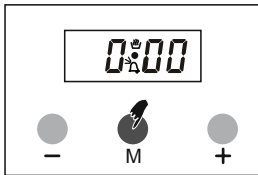

1. Select adjusting the buzzer alarm pressing 'M' button once. icon will flash.

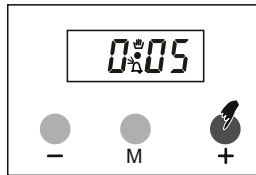


2. Give in the period of time with the '+' or '-' buttons. Ex; 5 min.

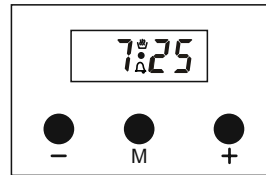


3. A few seconds later, the screen will return to displaying the current time of the day.

## CANCELLING THE BUZZER SOUND

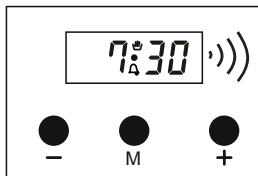

1. Buzzer will sound after the programmed amount of time.

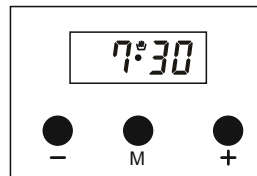


2. Press any button to cancel sound


## AUTOMATIC COOKING PROGRAM

If you want to start cooking immediately, you just have to give in the cooking time.


**Example:** We placed our food into the oven and want it to be cooked for 2 hours 15 minutes.

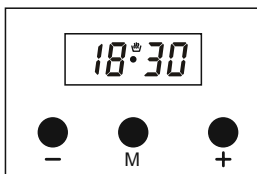


1. Current time is 18:30

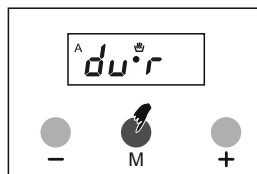

2. Switch to 'M' button 2 times to enter cooking adjustment mode.

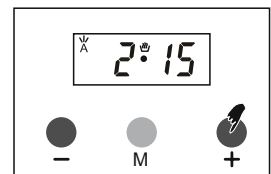


3. Adjust the cooking time using the '+' and '-' buttons.

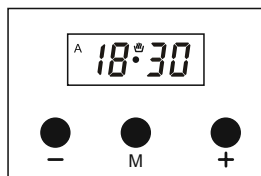



Now, you have programmed your oven to cook the food for 2 hours and 15 minutes. Please do not forget the function and/or the temperature knobs of your oven to appropriate positions.

4. After a few seconds, the screen will indicate that cooking has started and show the current time of

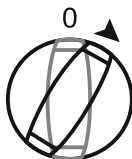


**Note:** You may cancel the automatic cooking mode any time by entering 'M'


In the example above, cooking immediately started after giving in the cooking period. By the pressing 3 times 'M' button, you can see and adjust the ready time. In the example below, the ready time will be set at 21:30.

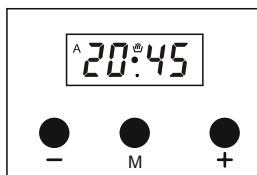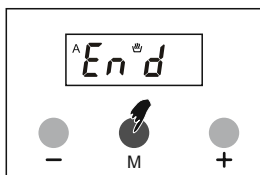

1. Press 'M' button 3 times. The screen will display 'End' and ready time which is  $18:30 + 2:15 = 20:45$  respectively.

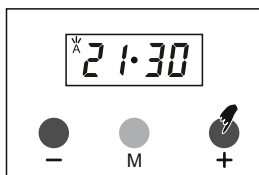

2. Set it to the desired time by using '+' or '-' buttons mode.

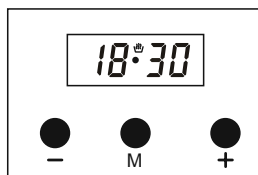


3. In a few seconds, screen switches to clock

We now have programmed our oven to get the food ready at 21:30. Since the cooking time was preprogrammed as 2 hours and 15 minutes, your oven will start cooking at 19:15, so that the food is ready at 21:30.




Screen just when cooking starts



Screen just when cooking ends

When automatic cooking is completed, a buzzer alarm is heard and will sound, if not stopped, for 7 minutes.

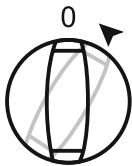

1. Switch OFF the oven

2. Reset the timer

**Note:** Your oven will be inoperative until you reset

In the example shown, cooking time has been programmed first; the ready time was calculated automatically and was edited by us. It is also possible first to program the ready time. In that case, the cooking time will be calculated automatically and should be edited thereafter.

### IN CASE OF MAINS POWER LOSS

Your oven will be inoperative for security reasons. At that time, the clock will appear as a flashing 0:00 together with the 'A' symbol. Any cooking program in progress will also be cancelled. The clock will appear 0:00, it should be corrected. Firstly, enter manual mode and adjust the clock using '+' or '-' buttons.

**Note:** In case of short duration mains power loss, system will be conserved itself.

**Note:** If you will not use your oven right now, be sure that that it is in 'OFF' position.

**Flashing 'A' Shows That The Oven Is Inoperative And You Should Enter Manual Mode In Order To Return Normal Working Conditions.**

### ADJUSTING THE BUZZER TONE:

You may adjust the hearing buzzer tone of the timer.

1- Pressing '-' button, you can hear the current buzzer tone.

2- Releasing and pressing again '-' button will switch to the next tone.

(3 Different tones available)

3- The buzzer tone will be set to the last adjusted tone.

**Note:** As factory setting, the buzzer volume is set to the high tone. In case of a long power loss, the set buzzer tone will be this one.

عند انقطاع التيار الكهربائي  
في حالة انقطاع كهرباء الشبكة, لزوم السلامة والامان فان فرنكم سيبقى خارج الدارة. ويعبر عن  
الوضعية بفلاش الساعة وحرف الشاشة. بهذه الوضعية اذا كان برنامج الطهي "A" هذه على  
يعمل سيصبح ملغى. يظهر على الشاشة ساعة 0.00, زسيلزم عيار الساعة. ادخل أولاً الى الوضعية  
اليديوية انظر الى الوضعية اليديوية بعد ذلك بواسطة كبسات أـ + أو - يمكن عيار الساعة  
(ملاحظة: سيحافظ النظام على وضعيته في الانقطاع القصير)



**ملاحظة:** اذا كنتم لا ترغبون بتشغيل فرنكم, لا تنسوا وضع الزر على الاغلاق الموجود على الفرن  
فلاش الحرف "A" يعني انه خارج الدارة, وللعودة الى الوضع العادي يجب الدخول الى "الوضعية اليديوية"

### عيار شدة صوت التنبيه

- يمكنكم تغيير شدة الصوت المسموع لانذار التنبيه, بواسطة هذا العيار
1. امسك كبسة (-) مضغوطة, وبذلك يمكنكم سماع شدة الصوت الذي تم عياره.
  2. اترك كبسة (-) وامسكها مضغوطة مرة أخرى واسمع شدة الصوت الآخر, وبذلك يمكنكم الاختيار (3 مستويات)
  3. أخيراً صوت التنبيه, سيرن بأخر شدة صوت سمعته



**ملاحظة :** يكون مستوى شدة صوت التنبيه الاعلى عند الحصول عليه من المصنع. في حالة انقطاع  
كهرباء الشبكة مدة طويلة, اذا كانت شدة صوت التنبيه قد تم تغييرها, سيعود الى عياره كما الخروج  
من المصنع.

لقد رأينا في المثال أعلاه امكانية الدخول الى مدة الطهي والمباشرة فوراً بمدة الطهي تلقائياً بالضغط  
ثلاثة ٣ مرات ورؤية متى سيكون طهي الطعام جاهز (انتهاء الطهي) وإذا اردنا امكانية 'M' على كبسة  
. عمل عيار. في المثال أدناه يعمل عيار لتكون جاهزية طهي الطعام الساعة 21:30

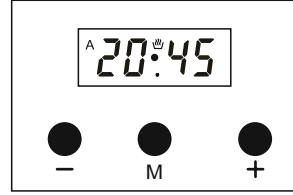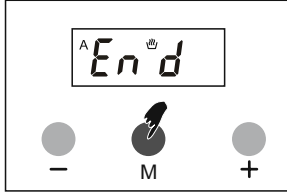

-١-

اضغط ٣ مرات على 'M' يظهر على الشاشة كتابة 'End' وان مدة ان الطعام سيكون جاهز 20:45=2:15+18:30 بالتالي  
آيسة

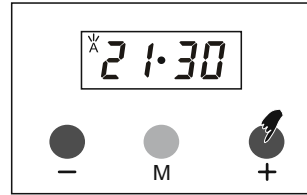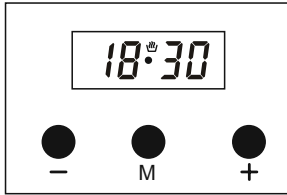

-٢-

-٢-

بعد وضع ثواني ستعود وضعية عرض  
الساعة الآن على الشاشة

اعمل عيار مدة انتهاء الطهي بواسطة  
الكبسبات + أو -

بهذا الوضع نكون قد برمجنا فرننا لأن يكون طعامنا جاهز الساعة 21:30  
لقد كنا برمجنا مدة طهي الطعام من قبل ٢ ساعة و ١٥ دقيقة بهذا الوضع فان عملية طهي فرننا ستبدأ  
الساعة 19:15 سيظهر طعامنا بمدة ٢ ساعة و ١٥ دقيقة وسوف ينتهي برنامج الطهي الساعة 21:30


الشاشة التي ستظهر عند مباشرة عملية الطهي

الشاشة التي ستظهر عند مباشرة عملية الطهي



عند اكتمال برنامج الطهي, يسمع صوت تنبيه و اذا لم يتم اسكاته فانه سيستمر لمدة ٧ دقائق  
١. اغلاق الفرن  
٢. أعد ضبط عقارب ساعة الفرن


**ملاحظة:** وضعية التوقيت الخاص بفرنكم يبقى خارج الدارة حتى تدخل الوضعية ليديوية.



في المثال أعلاه أولاً دخلت مدة الطهي, وفي المرحلة الثانية تم تغيير انتهاء مدة  
الطهي المحسوبة تلقائياً من قبلنا . اذا أريد ممكن الدخول الى مدة انتهاء الطهي؛  
في هذه الوضعية سيتم حساب مدة الطهي تلقائياً واذا أريد يمكن تغييرها في  
المرحلة الثانية


## عيار مدة التنبيه

بهذه الوظيفة يمكن عيار المدة، بعدها يمكنكم تشغيل ساعة التنبيه.

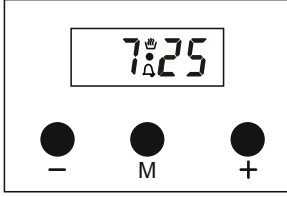


-٣-

بعد بضع ثواني ستعود وضعية عرض الساعة على الشاشة

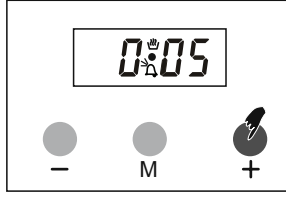

-٢-


ضع المدة بواسطة الكيبات + أو - .  
مثال: ٥ دقائق

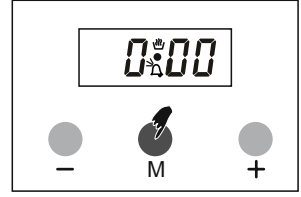

-١-


يمكنكم عيار مدة وضعية التنبيه بالضغط مرة على أيسة سوف "M" يشع فلاش الجرس

## اسكات صوت التنبيه الفعال

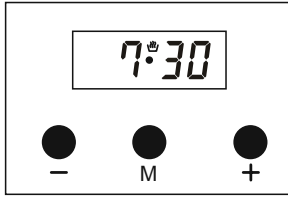

-٢-

يمكنكم اسكات صوت التنبيه بالضغط على أي زر

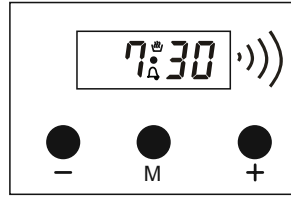


-١-

عند انتهاء الوقت المحدد للتنبيه يبدأ صوت التنبيه


## برنامج الطهي التلقائي

إذا أنتم ستباشرون بطهي الطعام الذي وضعتموه بالفرن، يكفي وضع مدة الطهي فقط.  
مثال: نضع الطعام الذي سنريد طهيه بفرننا، ونريد طهيه لمدة ٢ ساعة و ١٥ دقيقة.

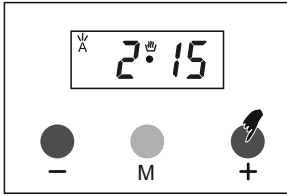


-٣-

ضع المدة بواسطة الكيبات + أو -

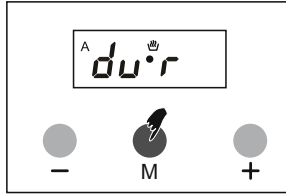


-٢-

ضع وضعية مدة الطهي بالضغط مرتين ٢ على زر "M"

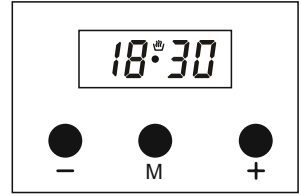

-١-

الساعة الآن 18:30

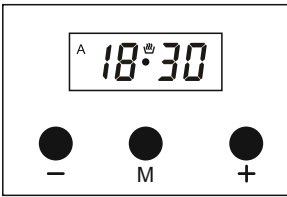


-٤-


بعد عدة ثوان سيظهر على الشاشة الساعة الآن وأن برنامج الطبخ بوضعية العمل

ساعة الفرن، فان الفرن اصبح مبرمج وسيبدأ بطهي طعامكم مدة ٢ ساعة و ١٥ دقيقة. لا تنسى وضع أيسات التحكم الأخرى الموجودة على الفرن على وظيفة الطبخ والحرارة المناسبة

ملاحظة: يمكنكم إلغاء برنامج الطهي اثناء البرمجة أو اثناء سير عمل البرنامج وذلك بالدخول الى الوضعية اليدوية

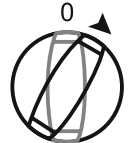

## دليل استخدام ساعة الفرن نظرة عامة

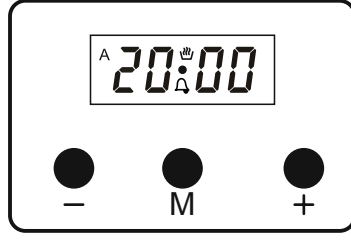


يوجد موثّق إلكتروني لتجهيز الطعام الذي تضعه بالفرن بالوقت الذي تريده. لهذا العمل عليكم بعيار برنامج الوقت فقط على المدة اللازمة لطهي وتجهيز الطعام. وأذلك يمكن استخدام ساعة تنبيه برمجة دقائق مستقلة عن الفرن

### عند عودة التيار الكهربائي

عند لحظة عودة التيار الكهربائي, يكون الفرن خارج الدارة. تظهر على الشاشة الساعة وحرف A بوضعية فلاش. الساعة الظاهرة على الشاشة غير صحيحة يجب عيارها انظر الى عيار الساع أولاً يجب المرور الى الوضعية اليدوية, لإمكانية عمل برنامج الطهي انظر الى الوضعية اليدوية


### الوضعية اليدوية

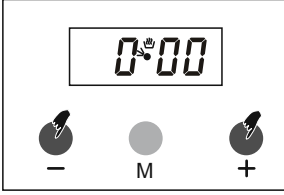

- ٢ -

اضغط على أبسة + و - بنفس الوقت  
للمرور الى الوضعية

و

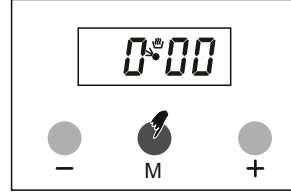


- ١ -

اضغط على أبسة "M"  
للمرور الى الوضعية اليدوية.


### عيار الساعة (الوقت)

يمكن عيار الساعة فقط اثناء عمل برنامج الطهي. يمكن عمل العيار أولاً بالضغط على + و - معاً بعد ذلك + الى الامام, و - الى الخلف. بالضغط على هذه الكبسات طويلاً ستتغير الساعة بسرعة أثر

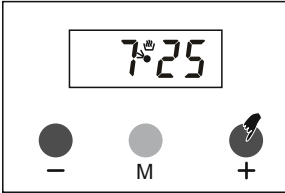

- ٢ -

قم بعيار الساعة بالضغط على أبسات  
+ أو -

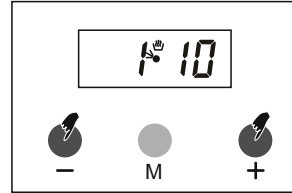

- ١ -

اضغط على + و - بنفس الوقت

**ملاحظة:** اذا لم يتم الضغط على - أو + لمدة ٥ ثواني, تنتهي وضعية عيار الساعة تلقائياً. ياذا رغبتم بإنهاء عملية وضعية عيار الساعة فوراً يمكنكم ذلك بالضغط على أبسات + و - معاً بنفس الوقت